

# PC Transporter™

The MS-DOS Card for Apple II® Computers

---

## User's Manual

 **APPLIED ENGINEERING®**

A DIVISION OF AE RESEARCH CORPORATION

v1.31



# PC Transporter™

The MS-DOS Card for Apple II® Computers

---

## User's Manual

**AE** APPLIED ENGINEERING®

A DIVISION OF AE RESEARCH CORPORATION

v1.31



# Applied Engineering

Telephone Numbers

## Technical Support

(214) 241-6069

9 AM to 12:30 PM & 1:35 PM to 5 PM (CST)

Monday through Friday

Do not return any  
product for service without a  
Return Material Authorization (RMA)  
number.

An RMA number can be obtained by calling  
Technical Support.

## Sales

(214) 241-6060

9 AM to 11 PM (CST) 7 days



# PC Transporter™

The MS-DOS Card for Apple II® Computers

## User's Manual



## Limited Warranty and Disclaimer

---

Applied Engineering warrants the PC Transporter card against defects in material and workmanship for 1 year from the date of original retail purchase. Applied Engineering also warrants that, under normal use, the magnetic media on which the included  $\text{\AE}$  software is stored is free from defects in materials and workmanship for a period of 30 days from the date of original purchase. Any misuse, abuse, or non- $\text{\AE}$  authorized alteration, modification and/or repair to the Applied Engineering product will void the warranty. This warranty will also be void if you use the  $\text{\AE}$  product for any other purpose than its intended use. If you discover a defect, Applied Engineering will, at its option, repair or replace only the Applied Engineering product, provided you return the product during the warranty period, transportation prepaid, to Applied Engineering.

This warranty applies to the original retail purchaser only. Therefore, please include a copy of the original invoice or a small service charge may be applied. If the product is to be sent to Applied Engineering by mail, the purchaser will insure the package or assume full responsibility for loss or damage during shipping. Prior to returning the product for warranty consideration, call Applied Engineering Technical Support for a Return Material Authorization (RMA) number and shipping instructions.

---

Even though Applied Engineering has tested the software and reviewed the documentation, Applied Engineering makes no warranty or representation, either express or implied, with respect to software, its quality, performance, merchantability, or fitness for a particular purpose. As a result, this software is sold "as is," and you, the purchaser, are assuming the entire risk as to its quality and performance.

In no event will Applied Engineering be liable for loss or damages of any kind caused either directly or indirectly by the use or possession of its products, even if advised of the possibility of such damages. THE APPLIED ENGINEERING WARRANTY IS FOR THE APPLIED ENGINEERING PRODUCT ITSELF. In particular, Applied Engineering shall have no liability for any other equipment used in conjunction with Applied Engineering products nor for programs or data stored in or used with Applied Engineering products, including the costs of recovering such equipment, programs, or data.

The warranty and remedies set forth above are exclusive and in lieu of all others, oral or written, express or implied. No Applied Engineering dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

---

This manual and the software (computer programs) described herein are copyrighted by Applied Engineering with all rights reserved. Under the copyright laws, this manual or the programs may not be copied, in whole or in part, without the written consent of Applied Engineering, except in the normal use of the software or to make an archival copy. This exception does not allow copies to be made for others, whether or not sold, but all of the materials purchased (with all archive copies) may be sold, loaned, or given to another person. Under the law, copying includes translating into another language or format. You may use this software on any computer owned by you but extra copies cannot be made for this purpose.

Applied Engineering cannot guarantee that you will receive notice of revisions to the software, documentation, or products described in this manual. Be sure to check with your dealer or Applied Engineering for information on possible updates. However, Applied Engineering reserves the right to make any improvements to Applied Engineering products without any responsibility toward upgrading previously released products.

---

Apple is a registered trademark of Apple Computer, Inc.

Apple ][ Plus, Apple //e, Apple IIgs, Macintosh, ImageWriter, AppleWorks, AppleWriter, AppleColor, UniDisk, Disk 3.5, DOS 3.3, and ProDOS are trademarks of Apple Computer, Inc.

Applied Engineering, PC Transporter, TransDrive, ColorSwitch, AW 2 Expander, RamFactor, RamCharger, gs-RAM, and RamKeeper are trademarks of Applied Engineering.

IBM, IBM Personal Computer, and IBM Personal Computer/XT are trademarks of International Business Machines.

Portware is a trademark of The Engineering Department.

SideKick and Turbo Pascal are trademarks of Borland International, Inc.

---

©Copyright 1988, 1989, Applied Engineering, Little Blue LTD.

---

**Applied Engineering**

P.O. Box 5100

Carrollton, Texas 75011

Sales: (214) 241-6060 9 AM - 11 PM (CST) 7 days

Technical Support: (214) 241-6069 9 AM - 5 PM (CST) Monday - Friday

(The Technical Support telephone lines cannot be accessed through the Sales department.)



# Just a Brief Hello...

**E**NTERING the *PC Transporter* world is a potentially frightening thing. **Relax.** The installation is probably the most difficult thing about the card and we have made even that "user friendly" with more than 30 photographs and drawings plus an optional installation video to make getting started as easy as... 1, 2, 3.

**A**N introduction to what *PC Transporter* does and how it accomplishes what it does immediately follows the Table of Contents. The introduction also gives you an idea of how the manual is structured. **Please read it.** In the long run, it will save you a lot of time and trouble.

**N**EXT is the QuickStart Guide. This chapter supplies the minimum amount of information needed for the more experienced user to perform the installation and setup of *PC Transporter*. Read the QuickStart Guide first and, if it seems clear enough for you, use it to install *PC Transporter*.

**I**F you are unsure of any of the steps in the QuickStart Guide, use the Step-By-Step Installation Guide in Chapters 2 and 3. These two chapters will walk you through the installation of both the hardware and software.

**E**LABORATIONS of *PC Transporter's* many options and capabilities are included in the Reference Chapters. These sections will help clarify points that are not perfectly clear when you first come across them. It contains a brief reference to MS-DOS but is *not* a tutorial. The Bibliography will guide you to some good sources of MS-DOS information.

**R**EFER to the manual **first** for whatever questions you may have concerning *PC Transporter*. Your questions will very likely be answered within these pages. If you cannot find the answer here, refer to the Technical Support section at the back of the manual for instructions.

**N**OW, turn the pages and be Transported.

**H**ERE'S the world of MS-DOS, brought to you by your Apple computer and Applied Engineering's *PC Transporter*...





**Federal Communications Commission**  
**Radio Frequency Interference Statement**

**Warning:** The equipment described in this manual generates and uses radio frequency energy. If it is not installed and used properly (i.e. in strict accordance with these instructions), it may cause interference to radio or television reception.

This equipment has been tested and found to comply with the limits for a class B computing device, pursuant to Subpart J, Part 15, of the FCC Rules. These rules are designed to provide reasonable protection against radio and television interference when operated in a residential installation.

If radio or television interference stops when you turn your computer off and resumes when it is turned back on, your computer, or one of its peripheral devices, is to blame. Turn the computer off, remove one of the peripheral devices, and turn the computer on. Continue this procedure until the source of the interference is isolated. Don't forget that the monitor is also a possible source of interference.

The effects of interference can be minimized or eliminated by one or more of the following measures:

- Reposition the receiver's antenna. Also make sure the antenna wires are making good electrical contact.
- Make sure that all electrical connections on the computer are secure and any shielded I/O cables are properly fastened.
- Move the computer farther away from the receiver.
- Plug the computer and receiver into separate electrical circuits.

If the interference persists, you should seek advice or service from your dealer or a reputable radio/television technician.

Applied Engineering is not responsible for any radio or television interference caused by unauthorized modifications to this equipment. It is the responsibility of the user to correct such interference.

**Important Note About Shielded Cables and Connectors:**

This product was FCC certified under test conditions that included the use of shielded cables and connectors between system components. A shielded cable is one which uses a metallic wrap around its wires to reduce the potential effects of radio frequency interference. It is important that you use shielded cables and connectors properly to prevent the generation of interference.

---

## INTRODUCTION

About PC Transporter	xiii
What You Need to Use PC Transporter	xiv
A Word About This Manual	xv
Conventions Used	xv



---

## PART ONE: GETTING STARTED

<b>Chapter One--QuickStart Installation Guide</b>	<b>2</b>
Which Slot?	2
Set Up	3
Prepare	4
Remove	4
Connect	4
Plus Cables	5
//e Cables	6
IIGS Cables	9
Install PC Transporter	11
Reinstall Existing Cards	11
Reconnect Existing Peripherals	11
Connect PC Transporter's Peripherals	11
Running PC Transporter	13
Precautionary Measures	13

---

## PART TWO: STEP-BY-STEP INSTALLATION GUIDE

<b>Chapter Two--Hardware Installation</b>	<b>17</b>
Standard Configuration	17
Which Slot?	18
Installation Procedure	20
Set Up a Working Area	20
Prepare the Apple	21
Disconnect all Peripherals	23
Remove All Cards	24
Connect PC Transporter's Cables	24
Set Up for the Installation	25
About the Cables	26
//e and ][ Plus Cable Installation	29
Disk drive cable	31
Digital CGA-compatible RGB video cable	33
//e keyboard adapter card	34
PC keyboard cable	36
Composite video cable	37
Speaker cable	39
IIGS Cable Installation	41
IIGS RGB adapter cable--ColorSwitch	42
Disk drive cable	47
PC-compatible keyboard cable	48
Install PC Transporter	50
Reinstall Existing Cards	51
Close the Apple	52
Connect All Peripherals	52
Reconnect Existing Peripherals	52
Connect PC Transporter's Peripherals	53
Connecting a PC-compatible keyboard	53
Connecting a CGA-compatible RGB monitor	53
Connecting an Apple IIGS RGB monitor	53
Connecting a composite monitor	54
Connecting PC-compatible disk drive(s)	54



<b>Chapter Three--Software Installation and Configuration</b>	<b>57</b>
Software - Where to Start	57
Make Backup Copies of PC Transporter's Disks	57
PC Transporter Software	58
Running PC Transporter for the First Time	59
Automatic Pilot, or The Easy Way	59
Transferring Files	63
Configure PC Transporter	66
Save Your Configuration	67
Leaving the Control Panel	68
Where To Go From Here	68

---

## PART THREE: PC TRANSPORTER REFERENCE

<b>Chapter Four--PC Transporter System and Hardware</b>	<b>72</b>
What and Why is PC Transporter	72
The Theory of Operation	73
The Technical Details	74
<b>Chapter Five--PC Transporter Software</b>	<b>77</b>
Booting PC Transporter	77
With Your Apple	77
From the Control Panel	77
What Happens Once You Boot	78
The Portware	81
The Control Panel	82
Accessing the Control Panel--	82
Using the Control Panel	84
Main Menu	86
Configure Drivers Menu	88
Load Device Driver Menu	90
Assign/Configure Devices Menu	91
Show Current Configuration Menu	92
PC Transporter System Files	93
Loading Device Drivers with PCINSTALL	95
<b>Chapter Six--MS-DOS Reference</b>	<b>97</b>
An Important Note About BASIC	97
An Introduction to MS-DOS	98
The Command-Line Prompt	98
MS-DOS Disks and Filenames	98
Displaying a List of Files	99
Running a Program	100
Copying a File	100
Deleting a File	101
Creating an MS-DOS System Disk	103



Transferring the System Files	103
Formatting a Disk	104
Configuring an MS-DOS System Disk	105
More Advanced MS-DOS	107
Batch Files	107
AUTOEXEC.BAT	108
CONFIG.SYS	109
Configuring MS-DOS Application Software	113
<b>Chapter Seven--Keyboard Reference</b>	<b>115</b>
Keyboard Differences	115
Using a PC-Compatible Keyboard	115
PC Keyboard Emulation	116
Keys that Are the Same on the Keyboards	116
Keys that Are Different	117
Translation Table for PC Keys	117
To Access the Control Panel	122
From an Apple IIGS and //e	122
From a PC-Compatible Keyboard	122
<b>Chapter Eight--Disk Drive Reference</b>	<b>123</b>
About PC Transporter and Disk Drives	123
Using TransDrive	125
Daisy-Chaining Drives	126
How Many Drives?	126
Connecting Disk Drives	127
Configuring Disk Drives With the Control Panel	129
Apple Disk 3.5 Drives Connected to PC Transporter	133
Other Disk Drives	135
Using Apple-Compatible Drives	135
Configuring a ProDOS Drive for MS-DOS Storage	137
Using PC Transporter's Drives From ProDOS	140
Loading the ProDOS Disk Drivers	140
Using the PCINSTALL	141

Accessing the Floppy Drives from ProDOS	142
PC Transporter as a ProDOS RAM Disk	143
Accessing the RAMDisk from ProDOS	144
The Slot 5 Option	144
Using a Hard Disk With PC Transporter	147
3.5" ProDOS Disks as Hard Disk Volumes	147
Thoughts on Preallocation	149
Controlling the Hard Disk File	150
To Configure Your ProDOS Hard Disk	151
Boot the Entire PC Transporter System from a Single ProDOS Disk	154
Using the Hard Disk Volume to Boot Other Transporter Systems	155
Hard Drive Trouble Shooting	156
<b>Chapter Nine--Printers and Other Hardware</b>	<b>159</b>
Printers	160
Universal Printers	160
Apple Printers and Compatibles	160
Printer Configuration	160
For Universal Printers	161
For Apple Printers	161
Printer Drivers	161
Load the Device Driver	162
Configure the Driver	164
Apple Printer Configuration - the Additional Step	164
Configure Your PC Software	164
Serial Devices	167
Load a Device Driver	167
Configure the Driver	168
Configure your PC software	169
Mouse(s)	170
Load a Device Driver	171
Copy the MS-DOS Mouse Driver	173

---

## APPENDICES

Apple Interface Cards Supported	176
PC Transporter File Types Under ProDOS	178
MS-DOS Utilities	180
AppleWorks and <i>PC Transporter</i>	183
Transporter Memory as AppleWorks Desktop	183
A Brief ProDOS Tutorial	185
Operating System	185
Naming Volumes	185
Root Directory and Subdirectory	185
Pathname	186
System Files	186
Additional ProDOS Resources	187
Getting Help	188
Returning a Product	189
RMA Number, "Attention" Sheet, and Invoice	189
When You Ship	190
When We Receive	190
Bibliography	191
Index	192





## INTRODUCTION

### *About PC Transporter*

You have purchased one of the most ingenious peripherals ever designed for the Apple II: the *PC Transporter Card*. You can now use software written for the IBM Personal Computer and PC-compatibles.

*PC Transporter's* designers reduced the circuitry of a PC-compatible to a single Apple II circuit card. *PC Transporter* adds the impressive library of PC software to your Apple's selection of available software. You can even use most Apple II monitors (color or monochrome), printers, and hard disks instead of having to buy PC-specific peripheral equipment. All that is required is one floppy disk drive capable of reading PC-formatted diskettes.

When you use your newly-upgraded Apple in its native Apple II mode, *PC Transporter* also enhances its functionality. *PC Transporter's* RAM (*random access memory*, or the memory contained in the electronic chips on *PC Transporter*) is compatible with the Apple Memory Expansion Card guidelines, so it can also be configured as a RAM disk. ProDOS can use a RAM disk just like a normal disk drive. A RAM disk can store programs and data files. You can copy files to and from it, erase and rename files, and do most anything you can do with one of your regular diskette drives. A RAM disk is many times faster than a normal disk drive. The exact speed advantage varies, but improvements of 300% are common for applications such as database managers.

---

---

## What You Need to Use *PC Transporter*

In order to install and use *PC Transporter*, you must have at least the following equipment:

- Apple ][+, //e, or IIGS
  - Apple ProDOS™
  - At least 64K of installed Apple II RAM
  - IBM PC-DOS™ version 2.0 or greater (3.3 recommended), or Microsoft™ MS-DOS™ version 2.0 or greater (3.3 recommended). These programs are not included with your *PC Transporter*. You can purchase them at many computer stores and from most IBM dealers.
    - ❖ *Note:* Some versions of MS-DOS are customized for particular IBM work-alikes and are not compatible with *PC Transporter*. Use IBM PC-DOS or standard MS-DOS.
  - At least one Apple-compatible disk drive – DISK ][, 5.25" drive, or Apple-compatible 3.5" drive with controller
  - At least one *PC Transporter* compatible disk drive – 5.25" double sided TransDrive or 3.5" TransDrive. An Apple Disk 3.5 drive will also work here but do not use a UniDisk 3.5" drive.
  - Apple-compatible video monitor
- 
- Must be FCC Approved
  - PC-compatible keyboard
  - Language card



*PC Transporter* composite video meets the specifications established by the National Televisions Standards Committee (NTSC). If you have an Apple-compatible composite monitor, it must be capable of displaying NTSC video.

The above list is the minimum system requirement. A system equipped with more than the above equipment is also compatible. For example, 128K of Apple II RAM is acceptable, as well as an RGB monitor.

Customized or unorthodox Apple II systems may require special installation or configuration. See Part Three - *PC Transporter Reference* for more information.

## ❖ An Important Note About BASIC

IBM's BASIC language included with PC-DOS (BASIC and BASICA) is *not compatible* with *PC Transporter* (or any PC-compatibles). If you want to use BASIC for programs that you have, you must purchase one of the brands of MS-DOS *other* than IBM's. MS-DOS includes a generic BASIC (GWBASIC) which is compatible with *PC Transporter*.

---

---

## A Word About This Manual

This manual is designed to advise you and assist you in every phase of integrating *PC Transporter* into your Apple II system. The installation is divided into two parts: *Hardware installation* and *Software configuration*. Of the two, the hardware is the more sensitive part; an improperly-performed hardware installation could damage *PC Transporter*. The software configuration is not dangerous at all; mistakes can easily be corrected.

There are two categories of Apple II owners: those who have installed peripheral cards into their computers, and those who haven't.

Those of you who have ventured under the hood of your computer probably need little explanation of the process. You will see that *PC Transporter's* installation is not much more difficult than any other card in your system.

Those of you who have never explored the insides of your computer are in for an exciting adventure. The installation is not difficult if you follow the detailed steps in the *Hardware Installation* section. Nevertheless, you may decide that this process is not for you; in this case, arrange for your dealer or a qualified service technician to install *PC Transporter* for you.

No matter what your level of experience, do not attempt to install *PC Transporter* until you have read the section and you understand all of the steps completely.

---

## Conventions Used


Because of the diversity of experience among Apple II users, this manual is designed to be useful to all users. This section describes the general conventions used in the manual.

Instructions in the Installation and Configuration sections of the manual are divided into two sections: a simple direction followed by a more detailed explanation. If you fully understand the simple direction, you can skip the detailed explanation. For example:

1. Disconnect the 2-pin speaker connector from the Apple's motherboard

This cable connects the sound circuitry on the Apple II's motherboard to its built-in speaker. To disconnect the speaker connector, grasp the connector itself (not the wires leading to it) and pull lightly away from the motherboard.

The installation section has more than 30 photos and many drawings to help make installation as painless as possible.

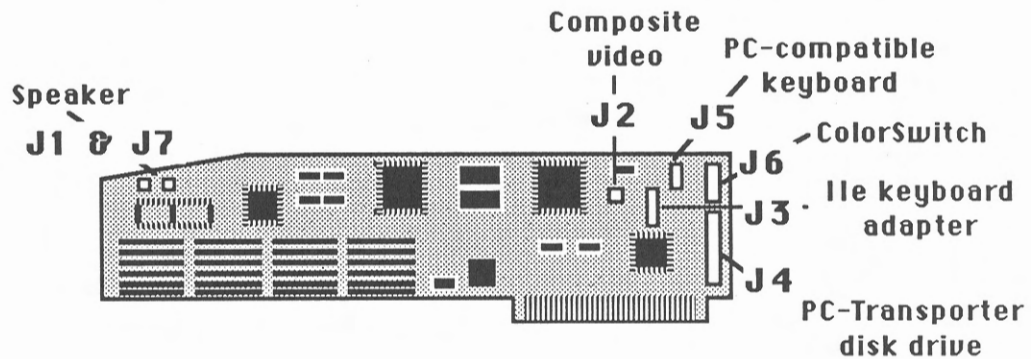

Icons tell you when information is only for a specific model of Apple. For instance:



If you have an Apple II PLUS, you must connect wire connector #2 to connector A on the Apple's motherboard.

- ❖ *Note:* Important messages are preceded by the special symbol at the left.



# **PART ONE**

---

---

## ***QuickStart Installation Guide*** ***--for those with experience***

# CHAPTER ONE

---

## *QuickStart Installation Guide*

The *QuickStart Installation Guide* is designed to work just as the name describes. The goal of this section is to quickly guide the experienced Apple II user through the installation of *PC Transporter*. We have skipped certain details with the understanding that people experienced in hardware installations will know these details already. The experienced installers can use Chapters 2 and 3 to follow up on details that they are unsure of.

For example, there is a section in this chapter called "Remove." The instructions for this section read, "Remove all expansion cards from your Apple's case." It is assumed that the experienced user will know that he should carefully catalog and map out all cables and connectors and safely store the cards until time to reinstall them.

- ❖ *Note:* Before you begin this, read the section called *What You Need to Use PC Transporter* in the *Introduction*.

---

### **Which Slot?**

You can install *PC Transporter* in any Apple II 1-7 expansion slot with the exception of slot 3. *PC Transporter* will not work in Slot 0 in the ][ Plus nor the Auxiliary/Memory Expansion slot on the //e and IIGS.

For example, a common configuration for an Apple ][ PLUS or //e is:



Slot 0: Language Card or Applesoft ROM



Aux Slot: 80 Column Video/Memory Card

Slot 1: Parallel or Serial Printer Card

Slot 2: Serial Communications Card w/ Clock

Slot 6: Disk Controller

If your system is configured as above, then you should install *PC Transporter* into slot 7. If you have a card in slot 7 now (such as a hard disk controller card), then you should install *PC Transporter* in the next available slot counting downwards from slot 7. In this case slot 5, because slot 6 is being used by the Disk Controller.



You can install *PC Transporter* in any available slot in the IIgs except slot 3 and the Memory Expansion slot (it won't fit there). Check the IIgs Control Panel slot settings to avoid conflicts between the use of a card in a slot and the built-in I/O assigned to that slot.

- ❖ *Note:* If your system is not set up as in the example configuration above you can still continue with this installation. You might have to inform the *PC Transporter* Control Panel of the whereabouts of the various parts of your system (see Chapter Five - *PC Transporter Software* for more information).

---

### Set Up

- Have a good source of light, a grounded electrical outlet, and a lot of free space available.
- You will need a hex wrench or a pair of needle-nosed pliers, a small Phillips screwdriver and a small flat blade screwdriver.

---

## Prepare

- Power down all your equipment in your Apple's system.
- Clear off the top of the Apple's system unit and disconnect all your peripherals.

---


## Remove

- Remove all expansion cards from your Apple's case.
- Unpack *PC Transporter* and arrange the parts within arm's reach.
- Lay *PC Transporter* down inside your Apple's case on top of the anti-static bag.

---

## Connect

Use the drawing below to help locate the different connectors referred to in the installation sections.

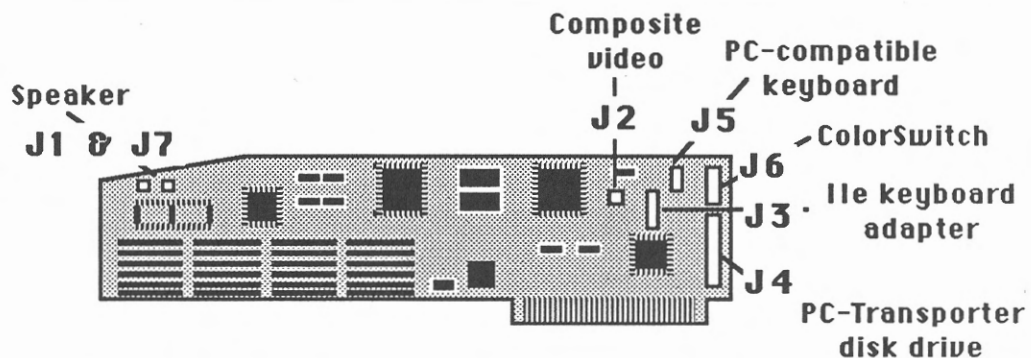

- ❖ *Note:* It is important to make sure when installing the cables that you have the edge of the cable with the stripe (the pin one indicator) toward the top of the card and computer. Most of the cables have the edge stripe. The speaker cable and the composite video cable may not.

Now go to the installation section for your brand of computer.

---





---

## )( Plus Cables

### Disk Drive Cable

- Secure the male DB19 connector in the backplane.
- Attach the female 20-pin flat cable connector to the male 20-pin flat cable connector to location **J4** on *PC Transporter*.

### RGB Video Cable

Ignore this step if you do not want to use an *IBM Color/Graphics Adapter (CGA)*-compatible RGB monitor with *PC Transporter*. If you have an analog RGB Monitor, it might not function with *PC Transporter*. See Chapter Two - *Hardware Installation* for more information regarding your monitor.

- ❖ *Note:* A CGA-compatible digital monitor can only display *PC Transporter* video, not Apple analog video.
- Secure the female DB9 connector in the backplane.
- Attach the flat cable connector to location **J6** on *PC Transporter*.

### PC-Compatible Keyboard Cables

- Secure the female DIN connector in the backplane.
- Attach the flat cable connector to location **J5** on *PC Transporter*.

### Composite Video Cable

- Attach the female four-pin Molex connector to the male four-pin Molex connector on the Apple's motherboard (toward the back, right corner).
- ❖ **Caution:** This connector on the Apple II Plus motherboard is not keyed. If you are not sure which way it plugs in, **please** refer to the instructions in Chapter Two - *Hardware Installation*.
- Attach the female two-pin Molex connector to the male two-pin Molex connector at location **J2** on *PC Transporter*.

### Speaker Cable

- Disconnect the existing Molex connector from the ][ Plus's internal speaker located under the keyboard on the Apple II's motherboard.
- Reconnect the Molex connector to connector **J1** on *PC Transporter*.
- Connect one of the ends of the supplied speaker cable to connector **J7** on *PC Transporter*.
- Connect the other end of the supplied speaker cable to the ][ Plus's speaker connector on the Apple II's motherboard.



---

### //e Cables

#### Disk Drive Cable

- Secure the male DB19 connector in the backplane.
- Attach the female 20-pin flat cable connector to the male 20-pin flat cable connector at location **J4** on *PC Transporter*.

#### RGB Video Cable

Ignore this step if you do not want to use an *IBM Color/Graphics Adapter (CGA)*-compatible RGB monitor with *PC Transporter*. If you have an analog RGB Monitor, it might not function with *PC Transporter*. See Chapter Two - *Hardware Installation* for more information regarding your monitor.

- ❖ *Note:* A CGA-compatible digital monitor can only display *PC Transporter* video, not Apple analog video.
- Secure the female DB9 connector in the backplane.
- Attach the flat cable connector to location **J6** on *PC Transporter*.

### //e Keyboard Connector

Ignore this step if you are going to use a PC-compatible keyboard and don't want to use of the //e's keyboard while *PC Transporter* is running.

- Disconnect the existing flat cable connector from location **J17** on the //e's motherboard.
- Connect the existing flat cable connector to the //e keyboard adapter card at location **J1**.
- Connect the //e keyboard adapter card to the //e's motherboard at location **J17** (with the ten-wire ribbon cable leading towards the //e's backplane).
- Attach the ten-pin female flat cable connector which leads away from the //e keyboard adapter card to connector **J3** on *PC Transporter*.

### PC-Compatible Keyboard Cables

Ignore this step if you are not going to use a PC-compatible keyboard.

- Secure the female DIN connector in the backplane.
- Attach the flat cable connector to location **J5** on *PC Transporter*.

### Composite Video Cable

- Attach the female four-pin Molex connector to the male four-pin Molex connector located at the back right corner of the Apple's motherboard (location **J13**).
- Attach the female two-pin Molex connector to the male two-pin Molex connector to location **J2** on *PC Transporter*. This is the 2-pin Molex connector closest to the back of the card. (Refer to the illustration at the first of the cable installation section.)

### Speaker Cable

- Disconnect the existing Molex connector from location **J18** on the Apple's motherboard.
  - Connect either end of the supplied speaker cable to location **J18** on the Apple's motherboard.
  - Connect the other end of the supplied speaker cable to connector **J7** on *PC Transporter*.
  - Reconnect the Molex connector (the one originally connected to the Apple's motherboard) to connector **J1** on *PC Transporter*.
-




## IIGS Cables

### Disk Drive Cable

- ❑ Secure the male DB19 connector in the backplane.
- ❑ Attach the female 20-pin flat cable connector to the male 20-pin flat cable connector at location **J4** on *PC Transporter*.

### ColorSwitch

In order to use an analog RGB monitor, *PC Transporter* requires a IIGS RGB adapter cable called, "ColorSwitch." A cable from the ColorSwitch connects to the IIGS's video output on the backplane and goes back inside the case and connects to ColorSwitch's small circuit card mounted in the backplane. A flat cable from this card connects to *PC Transporter* inside the Apple's case. The ColorSwitch has a female DB15 connector just like the one on the backplane. You'll eventually reconnect the IIGS monitor to this connector.

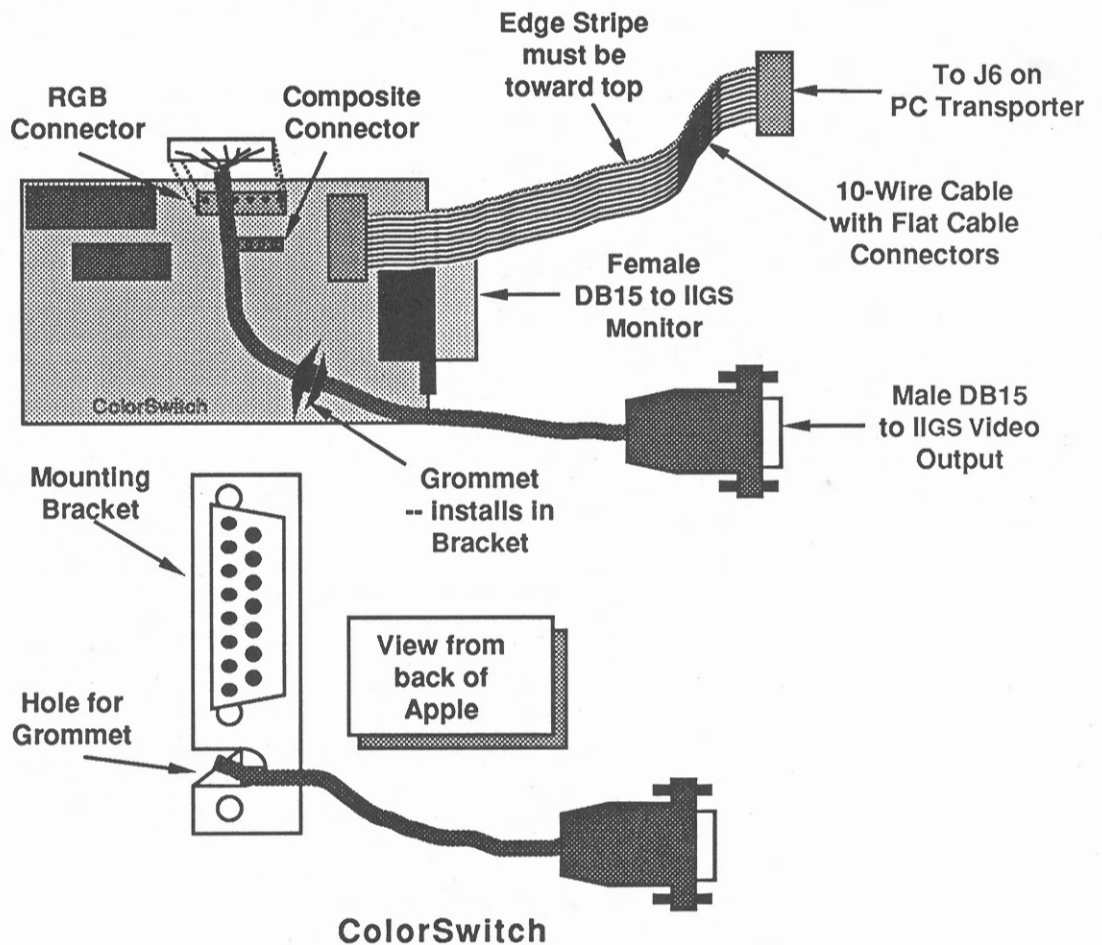



- Feed the five-pin connector and the grommet through the back of the GS. We recommend that you use the hole directly next to the power supply. (In the case of a IIGS retrofit, use the opening just above the power supply case.)
- Attach the 6-pin female connector to the 6-pin male connector on the ColorSwitch.
- Insert the grommet into the hole in the flange directly below the DB15 connector.
- Attach either end of the flat 10-wire cable to the 10-pin female connector on the ColorSwitch.
- Connect the other 10-pin connector of the flat cable to location **J6** on *PC Transporter*.
- Install the small circuit card in the backplane. Make sure that the cable with the grommet is fed to the outside of the case.
- Connect the DB15 connector at the end of the cable with the grommet to the IIGS video output on the backplane.

#### **PC-Compatible Keyboard Cables**

Ignore this step if you are not going to use a PC-compatible keyboard.

- Locate one of the small circular openings in the backplane.
  - Secure the female DIN connector in the backplane using the two hex screw provided.
  - Attach the flat cable connector to location **J5** on *PC Transporter*.
-

---

---

### Install *PC Transporter*

- Install *PC Transporter* in the slot of your choice. Slot 7 is the easiest, but you can use any slot except slot 3, the Memory Expansion slot of the IIGS, or the Aux. slot in the ][ Plus and //e.



Check the IIGS Control Panel slot settings to avoid conflicts between the use of a card in a slot and the built-in I/O assigned to that slot.

---

### Reinstall Existing Cards

- Reinsert all of your expansion cards, taking care to not disturb any of *PC Transporter's* cabling.

---

### Reconnect Existing Peripherals

- Reconnect all of your peripherals.

---

### Connect *PC Transporter's* Peripherals

You may be able to skip one or more of these steps. If you are not using the hardware mentioned in a particular step, skip that step. For example, if you're using the Apple's keyboard instead of a PC-compatible keyboard, skip that step of the installation.

#### PC-Compatible Keyboard

- Connect the male five-pin DIN connector on your PC-compatible keyboard to the female five-pin DIN connector in the Apple's backplane.

#### CGA-Compatible RGB Monitor

- Connect the male DB9 connector that leads from your CGA-compatible RGB monitor to the female DB9 connector in the Apple's backplane.

## IIGs RGB Monitor

- ❑ Connect the male DB15 connector that leads from your IIGS RGB monitor to the female DB15 connector that you installed in the Apple's backplane (the built-in connector should have a cable plugged into it already).

## Composite Monitor

Your Apple-compatible NTSC composite monitor does not need any special connections to work with *PC Transporter* installed in your //e and ][ Plus. All the necessary connections were made inside the Apple's case.

- ❑ Reconnect the composite monitor to the Apple's RCA video jack.

## PC-Compatible Disk Drive(s)

All TransDrives (5.25" and 3.5" *PC Transporter* compatible drives) connect to *PC Transporter* in a daisy-chain configuration. TransDrives must be in the chain *before* Apple Disk 3.5 drives.

- ❑ Connect the male DB19 connector at the end of the cable which leads from your TransDrive to the female DB19 connector which leads to the Apple's backplane from *PC Transporter*.
- ❑ If you have a dual TransDrive system, the two drives will be connected together within the case.
- ❑ If you have Apple 3.5 drives, daisy-chain them to the TransDrive system.
- ❖ *Note:* If you have *only* Apple Disk 3.5 drives (platinum), connect them directly to the female DB19 connector which leads to the Apple's backplane from *PC Transporter*.
- ❖ *Warning:* Do not use the UniDisk 3.5 drives (white) with *PC Transporter*. It could cause serious damage to both the drive and *PC Transporter*.



Do not confuse *PC Transporter's* DB19 connector with the IIGS's built-in floppy disk port. They are not the same, although they appear similar.

---

---

## Running *PC Transporter*

As soon as all of your hardware is installed, you are ready to run *PC Transporter*. Before you start, you should take some precautionary measures.

Once done, you can go ahead and dive right in!

### Precautionary Measures

- Recheck all of the hardware connections and make sure that they are all firmly seated and attached with the appropriate hardware.
- All of *PC Transporter's* internal cables should lead from the card towards the backplane, and the edge stripe (present on most of the cables) should be toward the top edge of the card.
- Use ProDOS utilities to make backup copies of your *PC Transporter* disks before you begin. *Use only backups of these disks; never use the originals!*
- Write-protect the originals and put them in a safe place.

### Turn On the Apple

- Place a bootable MS-DOS disk in the first drive that you connected to *PC Transporter*. If the first drive is an Apple 3.5 Drive, you must configure it manually with the Control Panel. Refer to Chapter Three - *Software Installation* for details concerning this.
- Place the *PC Transporter* boot disk in the Apple's default (boot) drive and boot the computer.

After a moment or two, a splash screen appears welcoming you to the world of *PC Transporter*. This indicates that *PC Transporter* is booting. Then the following message is displayed at the bottom of the screen:

Automatic Configuration in progress...

That's it; in a matter of moments *PC Transporter* is running MS-DOS. *The transformation is complete!*



# PART TWO



## Step-By-Step Installation Guide

### Precautions

- ❖ *Note:* Installing a circuit card into your Apple is a straightforward procedure, but an incorrectly-performed installation can damage your computer and/or the card.

This section lists some potential hardware installation problems and the steps you can take to avoid them. Read these carefully before you attempt the hardware installation.

Potential Problem	Precautions
<i>PC Transporter</i> and/or your Apple could be damaged if you apply too much force to components on them, such as their transistors, connectors, or chips.	Apply force gently, and only to the top, left, and right edges of the card. <i>Do not</i> touch any of the components on the surfaces of the card, or the gold connector at the bottom of the card.
Computers can be damaged by static electricity.	While your Apple's case is open, each time you place your hands inside touch a finger to the metal <i>power supply</i> case located at the left of the motherboard.

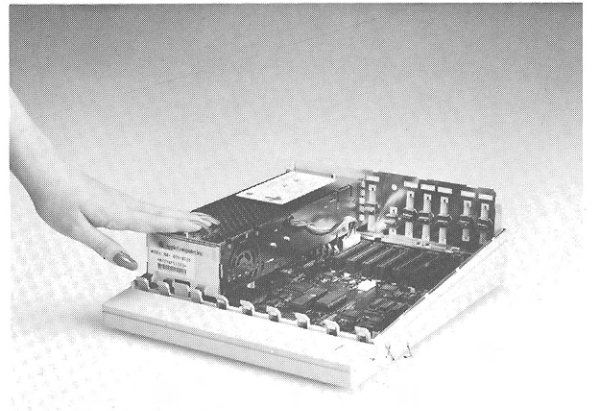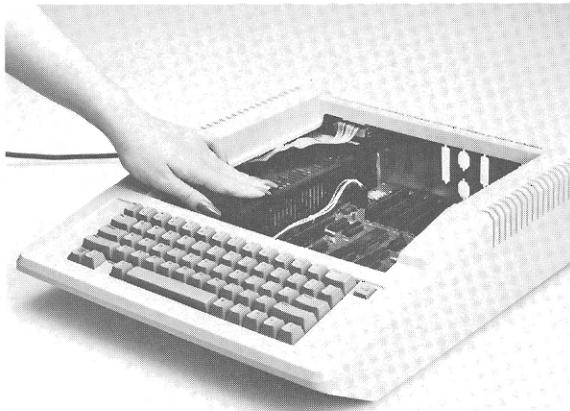

Touch the power supply case



Your computer equipment can be damaged by disturbances in the electrical current of your home or office.

We highly recommend that you use a *surge protector* between your computer and the wall outlet. These small, inexpensive devices (\$15-\$75 depending upon capacity) insure that most electrical disturbances are smoothed out.

The UniDisk 3.5" drive (white) is termed a "smart" drive. It does some internal processing instead of letting the computer tell it what to do. This drive will not work with, and could in fact damage, *PC Transporter*.

Make sure that you use the Apple 3.5 Drive (platinum) or other "dumb" drives if you want to run 3.5" disks directly on *PC Transporter*. These drives are commonly sold for use with the IIGS.

Your computer will not be able to use the TransDrive disk drives unless they are connected before the Apple 3.5 drives.

Connect the TransDrive(s) first in the disk drive daisy-chain.

# CHAPTER TWO

---

---

## *Hardware Installation*

---

---

### Standard Configuration

In order to install and use *PC Transporter*, you must have *at least* the following equipment:

- Apple ][+, //e, or IIGS
- Apple ProDOS™
- At least 64K of installed Apple II RAM
- IBM PC-DOS™ version 2.0 or greater (3.3 recommended), or Microsoft™ MS-DOS™ version 2.0 or greater (3.3 recommended). These disks are not provided with your *PC Transporter*. If you do not have them already, your dealer will most likely carry them.
  - ❖ *Note:* Some versions of MS-DOS are customized for particular IBM work-alikes and are not compatible with *PC Transporter*. Use IBM PC-DOS or standard MS-DOS.
- At least one Apple-compatible disk drive DISK ][, 5.25" drive, or Apple-compatible 3.5" drive (//e's must have controller for 3.5 drive).
- At least one PC-compatible disk drive. This means you need one or a combination of the following:
  - A 5.25" TransDrive. The TransDrive is designed specifically to translate ProDOS to MS-DOS. A standard IBM drive will not work.
  - A 3.5" TransDrive (must be the same size and format as your MS-DOS disk).
  - An Apple 3.5 Drive. This drive is usually a platinum color. Do not use the Uni-Disk 3.5" drive (white) connected to *PC Transporter*. You can, however, use a Uni-Disk connected to the Apple as an MS-DOS hard disk file.
- Apple-compatible composite video monitor



- Must be FCC approved
- PC-compatible keyboard
- Language card

*PC Transporter* composite video meets the specifications established by the National Televisions Standards Committee (NTSC). If you have an Apple-compatible composite monitor, it must be capable of displaying NTSC video.

A system equipped with more than the above equipment is also compatible. For example, 128K of Apple II RAM is acceptable, and a IIGS Color monitor (AppleColor) is an ideal monitor for PC programs.

Customized or unorthodox Apple II systems may require special installation or configuration. See Part Three - *PC Transporter Reference* for more information.

The first steps to install *PC Transporter* are the same no matter what type of Apple II you own and regardless of its configuration.

---

### Which Slot?

You can install *PC Transporter* in any Apple II expansion slot with the exceptions of slot 3 and the Auxiliary slot (it won't work there).

As an example, a common configuration for an Apple ][ Plus or //e is:



**Slot 0:** Language Card or Applesoft ROM



**Aux Slot:** 80 Column Video/Memory Card

**Slot 1:** Parallel or Serial Printer Card

**Slot 2:** Serial Communications Card w/ Clock

**Slot 6:** Disk Controller

If your system is configured as above, then you should install *PC Transporter* into slot 7. If you have a card in slot 7 now (such as a hard disk controller card), then you should install *PC Transporter* in the next available slot counting downwards from slot 7. In this case slot 5, as slot 6 is being used by the Disk Controller.

- ❖ *Note:* If your system is not set up as in the example configuration above you can still continue with this installation. The autoconfiguration will locate what it can and ignore the rest. You will still have a useable *PC Transporter* system.
-

---

---

## Installation Procedure

You will use the following procedure to install *PC Transporter* into your Apple.

- Set Up a Working Area
- Prepare the Apple
- Disconnect All Peripherals
- Remove All Cards
- Connect *PC Transporter's* Cables
- Install *PC Transporter*
- Reinstall Existing Cards
- Connect All Peripherals

If these steps are familiar to you from previous hardware installations you have performed on your Apple, then you may be able to save time by using the *QuickStart Installation Guide - Chapter One*.

---

### Set Up a Working Area

This section steps you through preparing a working area for the operation you are about to perform.

1. Have a good light source ready.

A swing-arm desk lamp is the best type of light to have, but any bright, overhead light source is acceptable. This is essential for a clear view of the inside of your Apple.

2. Make sure that a ready source of electricity is nearby.

The kitchen table may seem at first to be the best place to attempt the installation, but is no good if you have to move the computer to another room to test it. An extension cord is acceptable if you can't locate an appropriate space.

3. Ensure that you have lots of room to work.

Use this as an excuse to clean off your table!

4. You will need a hex wrench or needle-nosed pliers, a small Phillips screwdriver and a small flat blade screwdriver.

---

## Prepare the Apple

This section steps you through preparing your Apple II for its pending transformation.

1. Power down all your equipment.


Make sure that the main power switch on your Apple and its monitor(s), printer(s), modem, hard disk, etc. are turned off. You don't need to remove the plugs from the wall as long as the power is turned off.

2. Clear off the top of the Apple's *system unit*.

The system unit is the part of your Apple with the connectors in the back, and the keyboard connected to the front. Remove the monitor, disk drives, and any other equipment that might be on or around the top of your Apple's system unit. Set them aside; they are not needed right now.

3. Open the Apple's case to expose its inner circuitry

Place your hands as shown below, and press down with the palms of your hands while pulling up with your fingers. The cover is designed to unsnap and lift away from the case with very little force.

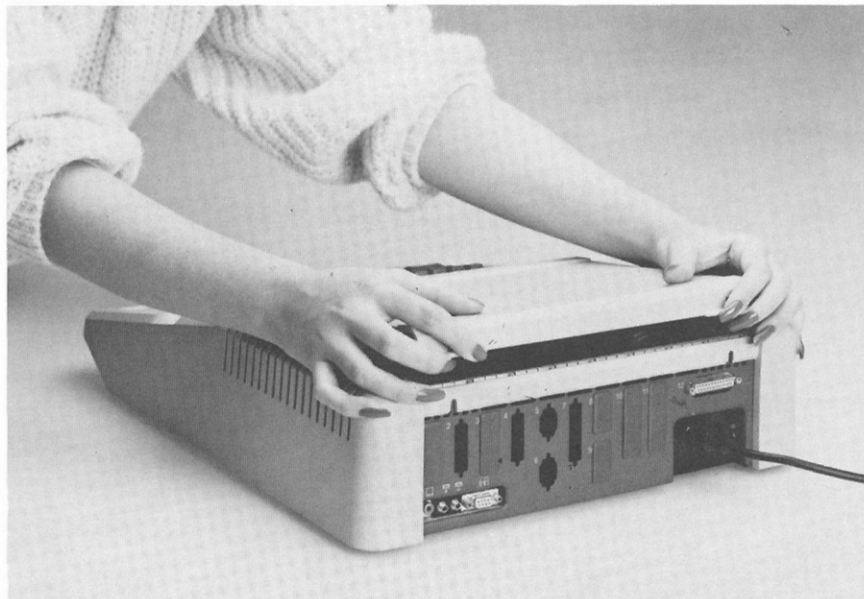


**Remove the //e or ][ Plus cover**





Remove the IIgs cover as shown below.

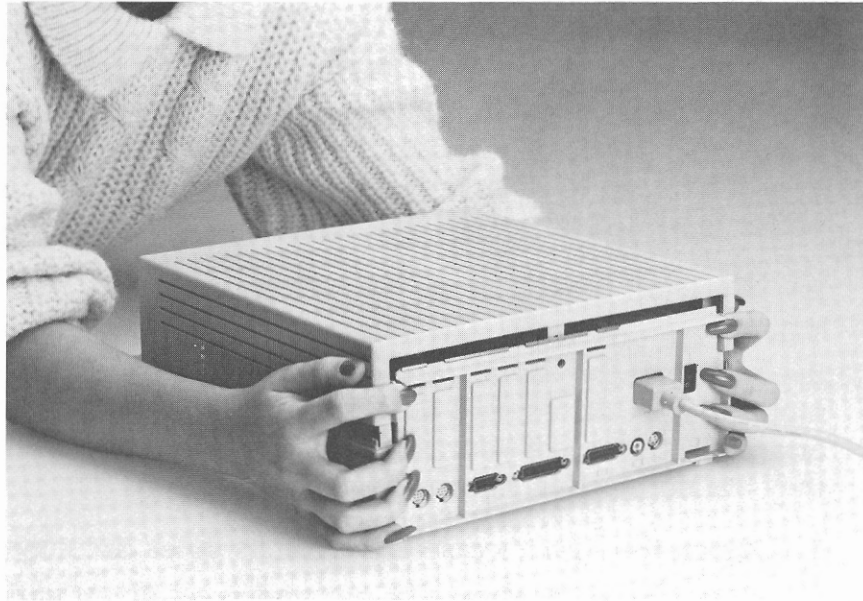


#### Remove the IIgs cover

The IIgs cover is attached using two small latches in the rear of the case. To open the case top, simultaneously press in the two latches with your forefingers while pulling the case upwards and towards you with the heel of your hand (or the heel of your foot if you are extremely agile).

4. Set the top of the case aside.

Do not put it on the floor; it makes a very brittle floor mat.

5. Touch the power supply case to ground yourself.

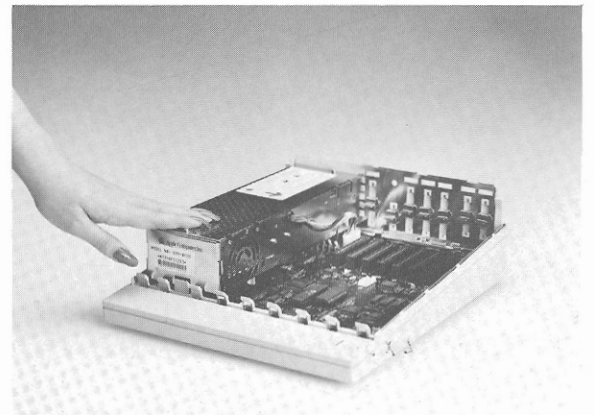

#### Touch the power supply case

Touch a finger to an exposed metal area of the metal box at the rear of the Apple's case. This is the Apple's *power supply*, and its grounded case will drain stray static electricity from your body. If you are carrying a static charge in your body, you might feel a slight shock as you touch the power supply. It probably won't hurt.

---

### **Disconnect all Peripherals**

Before you perform any internal modifications on your Apple, you should disconnect all of the peripherals that are presently connected to the Apple.

1. Make sure you turned off the power on each of your peripherals.

Don't connect or disconnect any cables in your system with the power on to any of your peripherals. This could damage them.

2. Make a note of where on the Apple's backplane each of your peripherals is connected.

Peripherals include monitors, printers, modems, hard disks, and other such devices. Each is connected to either a built-in connector or a connector attached to an add-on circuit card (like *PC Transporter*). You may want to draw a diagram and/or label each of the cables with a piece of tape to remind you where they're connected.

3. Disconnect each peripheral connected to your Apple.

Be careful to follow the manufacturer's instructions as detailed in the manuals for each of your peripherals. If you no longer have one or more of these manuals, simply take care to be gentle with the cables.

4. Set aside each peripheral in a safe place.

You will not need any of them until you have completed the hardware installation.

5. Disconnect the IIGS's keyboard.



The IIGS keyboard is connected with a coiled cord (like the one on your telephone handset) to the system unit.

---

## Remove All Cards

*PC Transporter* requires internal cables and hardware connections. In order to make their installation as easy as possible, we recommend that you remove all currently-installed expansion cards. This will ensure plenty of free space inside the case. It also avoids the problem of disturbing an existing cable connection and not discovering this until after closing up the case.

Refer to each expansion cards' documentation if you're not sure how to remove it. If you no longer have one or more of these manuals, be extra careful when removing the card(s).

You may want to draw a diagram and/or label each of the cards with its location inside your Apple. The information you should record is:

- The number of the Apple's slot containing the card
- The location and connecting port(s) of any internal or external connectors associated with the card (for example: if the card has a cable connector installed in the backplane of your Apple, make a note of the location of its backplane connector).

---

## Connect *PC Transporter's* Cables

This section guides you through the process of installing *PC Transporter's* internal cables and hardware. There are two separate sets of installation instructions; one for the ][ Plus and //e (combined) and one for the IIGS. See the *Table of Contents* for the page number of the section for your computer.



Those of you who have a //e to IIGS upgrade -- an Apple //e which has been upgraded with an Apple IIGS motherboard -- should follow all the instructions for the IIGS installation.



The first part of this section introduces you to the different types of cables that *PC Transporter* uses. Once you are familiar with the different types of cables, go to the section for your particular model of Apple II and complete the cable installation.

---

## Set Up for the Installation

Because there are a number of cables that you must attach to *PC Transporter*, and these cables are difficult to attach after *PC Transporter* is installed in its slot, you should lay the card on its side inside your Apple's case for easier access. The steps below describe the best way of doing this. After you have connected all of its cables, it is simple to stand the card up inside the case and install it in its slot.


❖ **Warning:** These steps work only if you have removed all of the cards from the Apple first.

1. Touch the power supply to eliminate any static that may be on your body.

This is very important. One static-charged touch can seriously damage your board.


2. Take *PC Transporter* out of its anti-static bag.

Do not touch the card anywhere except along the edges of the card.

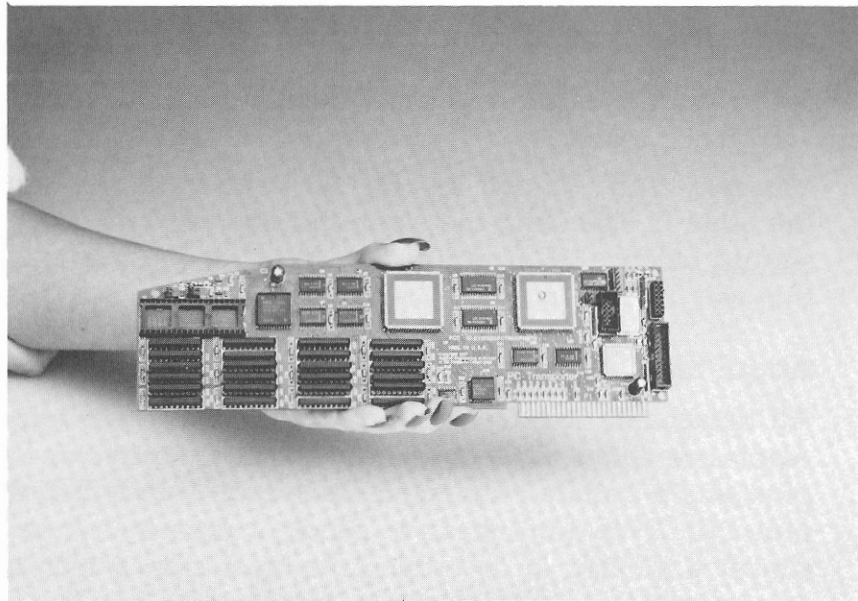

**Hold *PC Transporter* by its edges only**

4. Place the anti-static bag on the motherboard of the Apple then place *PC Transporter* on the bag as shown in the diagram below.

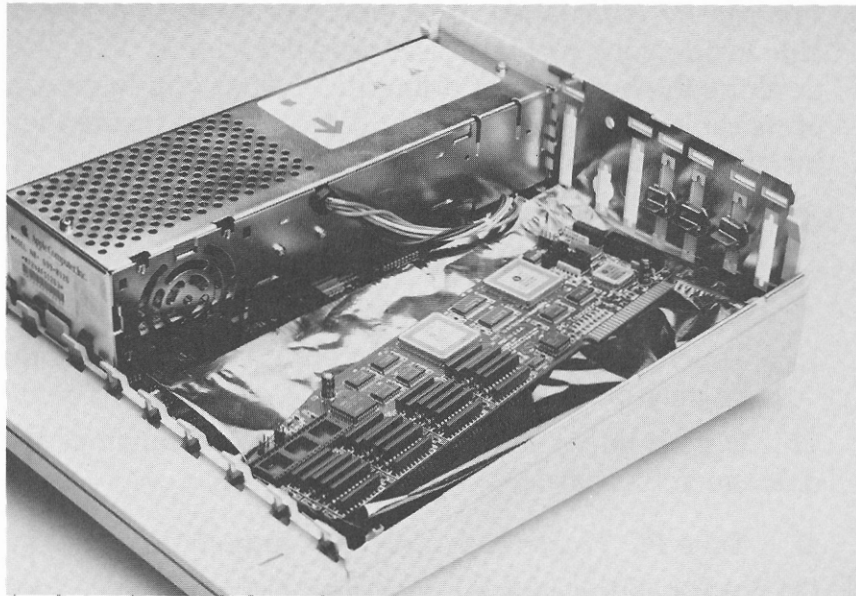

#### **Place PC Transporter on the bag**

This will help protect both *PC Transporter* and the components on the motherboard from static **zaps**.


5. Keep the cables and other included hardware within arm's reach.

You may find yourself looking for them with one hand when the other is balancing the computer on your lap. (Not that you should balance the computer on your lap, but it often ends up that way.)

#### **About the Cables**

All detachable wire connectors on *PC Transporter* and in your Apple are either *male* or *female*. A **male connector** has metal pins, and a **female connector** has sockets into which the male's pin(s) fit. (We don't mean to shock or offend anyone. It's simply a method of describing the connectors which most people can understand.) For example, consider the familiar electrical wall outlet. A plug leading from an electrical appliance is a male connector, and a wall socket is a female connector.

*PC Transporter* uses many kinds of wires and connectors in its cabling, and each has its own connection and disconnection procedure. The cables and connectors are:

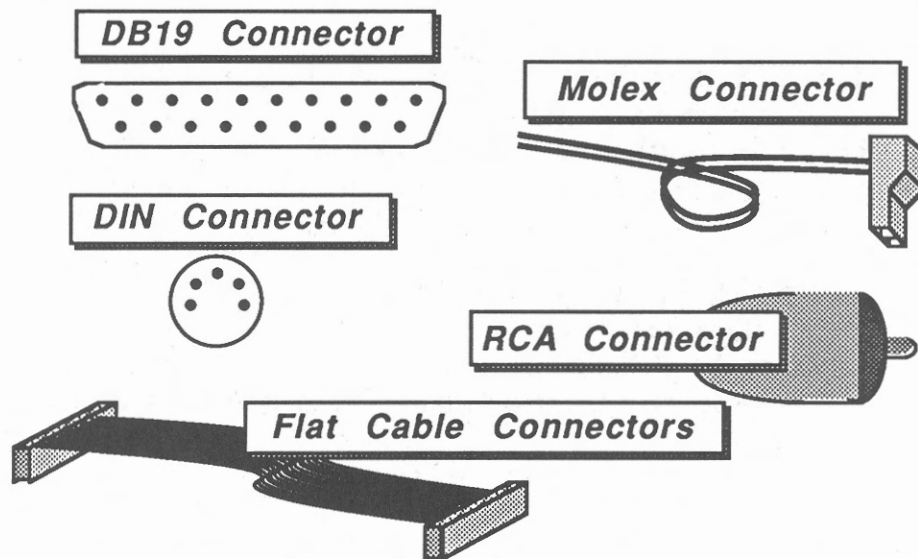

❖ *Note:* Many of the connectors listed below are *keyed*, which theoretically prevents you from aligning them incorrectly. Nevertheless, you can probably overcome this limitation with sufficient force. Be careful to not exert too much force when installing these connectors. If they seem like they are not joining properly, check to see that they are properly aligned.

DB9, DB15, DB19

These are the connectors generally used for peripherals *outside* the case. The number following the "DB" represents the number of pins in the connector. The cable connected to it has any number of wires up to and including that number.

DIN

A DIN connector is used to connect a PC's keyboard; this particular one contains five pins and is circular.

Flat cable connector

This type of connector is generally used to make connections inside the Apple's case. The connectors are usually found on either an expansion card, motherboard, or at the end of a *ribbon cable*. A ribbon cable is so named because the wires that comprise it run parallel to each other in one flat level.

Molex

These are simple cables and connectors usually containing 1-5 wires.

RCA™ Phono

These are the same type of connectors used to interconnect various of stereo equipment together. RCA cables consists of a shield (ground) around a center conductor wire. This type of connector is used by Apple's Monitor /// and Monitor II. We will simply call them RCA jacks throughout this manual.

The cables that are used with *PC Transporter* in the various Apple II's are shown in the matrix below. This table shows whether the cable is required in order to use *PC Transporter* with your Apple, or if the cable can be used optionally or at all with your Apple.

*PC Transporter* Cable Matrix

	II Plus	//e	IIGS	IIGS retrofit
Speaker Cable	m	m	N/R	N/R
//e Keyboard Cable	N/R	m	N/R	N/R
Composite Video	m	m	N/R	N/R
ColorSwitch†	o	o	m	m
PC Keyboard Cable	m	o	o	o
DB19 Disk Cable	m	m	m	m
DB9 CGA Cable†	o	o	o	o

m = mandatory

o = optional

N/R = not required

† = The use of these cables is mutually exclusive.

Only one of these cables can be plugged into *PC Transporter* at a time because they both use the same connector on the interface card.






---

## //e and )( Plus Cable Installation



Once you have removed all of the expansion cards from inside the Apple's case, you can install *PC Transporter's* cables. The cables included with the //e and )( Plus installation kit are shown below.

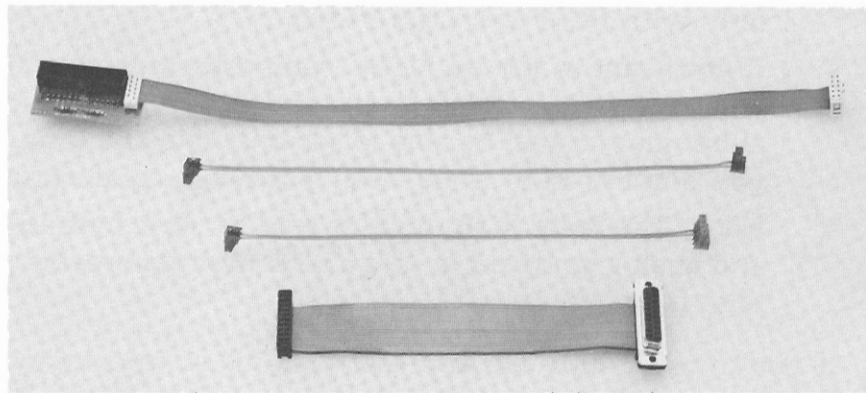

**//e and )( Plus installation cables**

---

## Monitor Choices

There are three options for video output when using *PC Transporter* with the ][ Plus and //e:

- ◇ If you want to use an Apple-compatible analog RGB monitor (like the Sony monitor<sup>♦</sup>, sold by Applied Engineering or the AppleColor monitor, commonly sold with the IIGS), you can use it for *PC Transporter* video output only by using the ColorSwitch (the IIGS RGB video adapter). An exception to this is if you are already capable of displaying Apple's own video on the monitor.
- ◇ If you want to use a separate digital CGA-compatible monitor with *PC Transporter*, you can connect it directly to the RGB video output of the card, but it will work only with *PC Transporter* video.
- ◇ If you want to use an NTSC composite video monitor, you can use it for both Apple and *PC Transporter* video, although you will be able to see only one at a time. But you don't need to change any hardware connections.
- ❖ *Note:* The Sony RGB monitor sold by Æ is both digital and analog compatible. It's also a 13", cable-ready television.

If you're using only an Apple-compatible composite monitor, then you can skip the *RGB video cable* section. If you have an Apple compatible RGB monitor, see *ColorSwitch Installation* in the IIGS installation section for further information on using this monitor with *PC Transporter*.

---

## Keyboard Choices



There are two options for keyboards when using *PC Transporter* with the Apple //e:

- ◇ Use the Apple's built-in keyboard
- ◇ Use a PC-compatible keyboard attached to *PC Transporter*.

If you're going to use the Apple's built-in keyboard, then you can skip the *PC Keyboard Cable* section. If you're going to use a PC-compatible keyboard, you can skip the *//e Keyboard Connector* section.




]] Plus owners must use the IBM keyboard with *PC Transporter*. The ]] Plus keyboard does not have enough keys (specifically the open and closed apple keys) to function properly as an IBM-style keyboard.

---

## Where the cables go

- Disk drive cable

The disk drive cable is a 19-wire ribbon cable with a female 20-pin flat cable connector on one end and a female DB19 connector on the other. This cable enables *PC Transporter* to access up to two TransDrive disk drives, in addition to up to two Apple Disk 3.5 Drives.

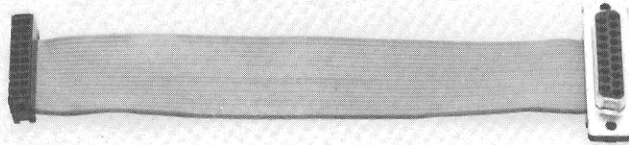


### Disk Drive Cable

1. Locate an unused medium-sized opening in the //e's backplane.

Do not use an opening that one of your existing expansion cards is currently using.


- Secure the male DB19 connector in the backplane, using the screws provided, as shown below.

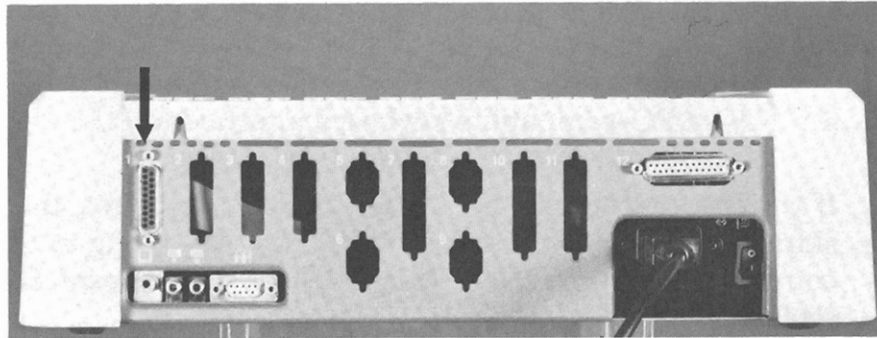

**Disk Drive Cable connected**

Feed the wires in from the inside so that the flange surrounding the DB19 connector is inside the backplane.

- Attach the female 20-pin flat cable connector to the male 20-pin flat cable connector at location **J4** on *PC Transporter*.

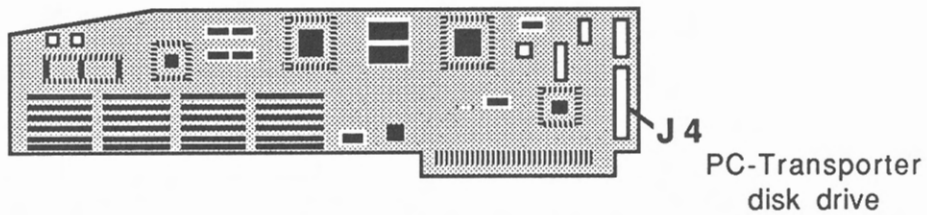


Take care to align the two connectors the correct way.

- Digital CGA-compatible RGB video cable
- ❖ *Note:* If you are using a digital CGA-compatible RGB monitor with *PC Transporter*, then complete these steps; otherwise you can skip to the next section. Remember, this monitor will display *only PC Transporter* video; Apple video must still be displayed on the Apple monitor.

If you have an Apple Analog RGB Monitor (the kind for the IIGS), see the IIGS installation procedure for instructions on installation and *skip* these three steps.

The RGB video cable is a ten-wire ribbon cable with a flat cable connector on one end and a female DB9 connector on the other end.

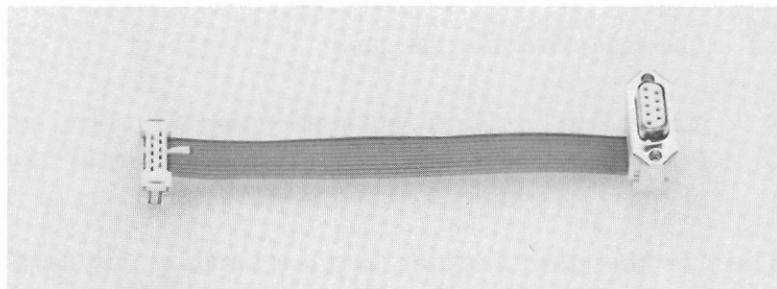


**Digital CGA Cable**

1. Locate an unused small-sized opening in the //e's backplane.

Do not use an opening that one of your existing expansion cards is currently using.


2. Secure the female DB9 connector in the backplane, using the screws provided, as shown below.

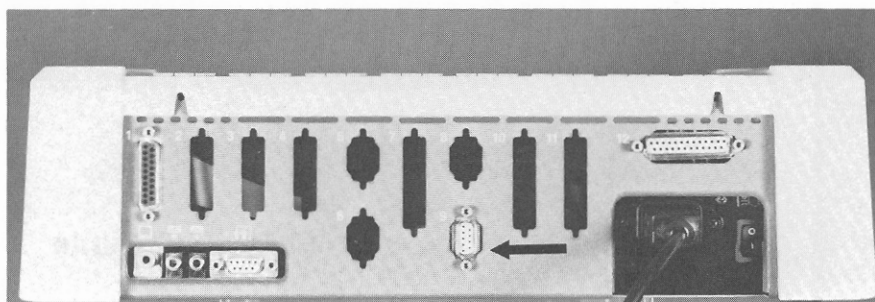

**Secure the connector in the backplane**

Feed the wires in from the inside so that the flange surrounding the DB9 connector is inside the backplane.

3. Attach the flat cable connector to location **J6** on *PC Transporter*.

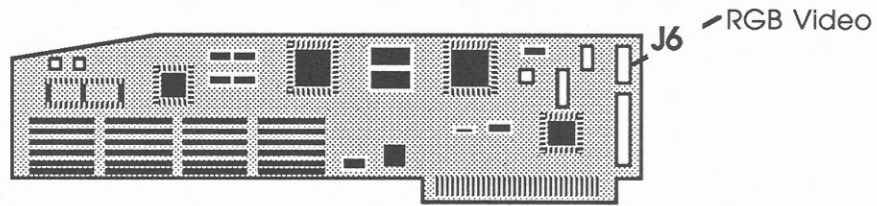

The edge stripe should be toward the top of the card and the cable should feed toward the rear of the computer.



]] Plus owners can skip to the next section.




☐ //e keyboard adapter card

- ❖ *Note:* You can skip this step if you are going to use a PC-compatible keyboard and don't want to have the use of the //e's keyboard while *PC Transporter* is running.

The //e keyboard adapter card is a small circuit card which you install onto the //e's motherboard. You disconnect the //e's keyboard cable from the Apple's motherboard and attach it to this card.

The //e keyboard adapter card also has a ten-wire ribbon cable leading from it with a ten-pin female flat cable connector on the other end; this connects to *PC Transporter*.

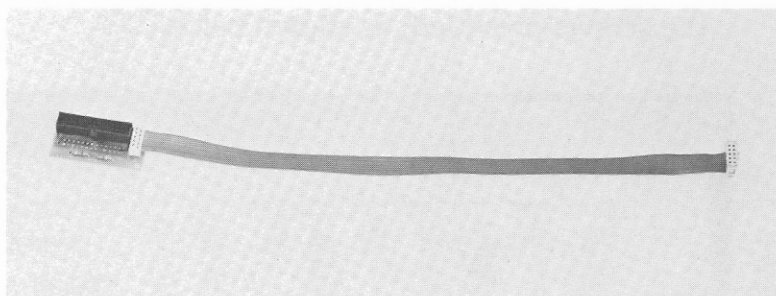

**Keyboard Adapter Card and Cable**

1. Locate the 26-pin male flat cable connector at location **J17** on the Apple's motherboard.

This connector is located just inside the right side of the case (looking from the front towards the back). You will see **J17** stenciled on the motherboard next to the connector.


2. Disconnect the existing flat cable connector from the //e's motherboard.

The other end of this cable is connected to the //e's keyboard.

3. Connect the existing flat cable connector to the //e keyboard adapter card at location **J1**.

The connector is keyed so that it will go in only one way.

4. Connect the //e keyboard adapter card to the //e's motherboard at location **J1**.

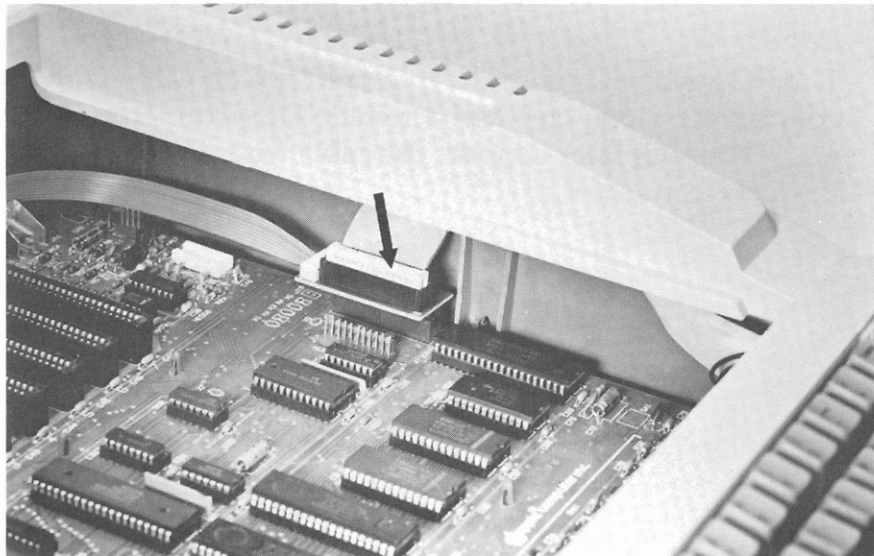


### **Keyboard Adapter installed**

The connector is not keyed so make sure you have the board plugged in correctly. The ten-wire ribbon cable should be leading away from the board towards the II's backplane (away from the keyboard). If you plug it in wrong, your Apple will power up into its diagnostics and its screen will display strange patterns

This is a tight fit, so be patient. A good light source and a set of long fingers can be handy here. If long fingers are not available, increase patience proportionally.



5. Attach the ten-pin female flat cable connector to connector **J3** on *PC Transporter*.

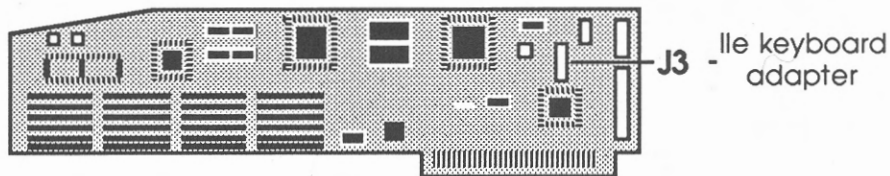

This is the connector that is at the end of the cable leading away from the //e keyboard adapter card.

- PC keyboard cable




//e owners can skip this step if you are not going to use a PC-compatible keyboard.



][ Plus owners must install this cable.

The PC keyboard cable is a five-wire ribbon cable with a flat cable connector on one end and a female DIN connector on the other end. You will later connect the cable from the PC keyboard to the DIN connector.

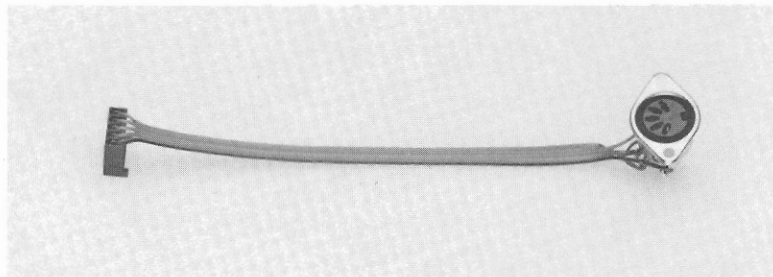


### PC-Compatible Keyboard Connector

1. Locate a small unused opening in the //e's backplane. The //e has four such openings. Pick one that another card is not using.
2. Secure the female DIN connector in the backplane using the screws provided.

Feed the wires in from the inside so that the flange surrounding the DIN connector is inside the backplane.


3. Attach the flat cable connector to location **J5** on *PC Transporter*.

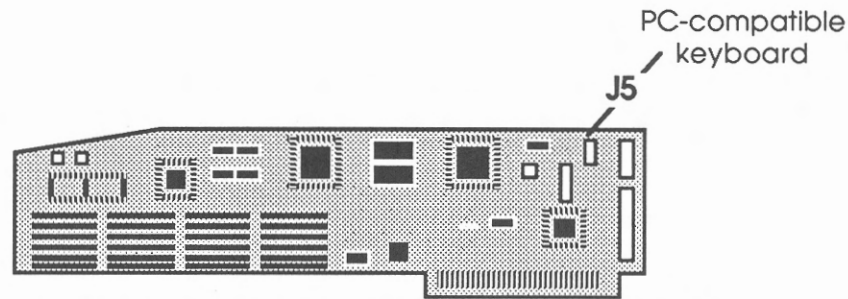

The connector is keyed so that it will go in only one way.

#### Composite video cable

The composite video cable is a two-wire ribbon cable with a female four-pin Molex connector on one end and a female two-pin Molex connector on the other. This cable enables *PC Transporter* to automatically switch between *PC Transporter* video output and your Apple's native video output on your composite monitor.

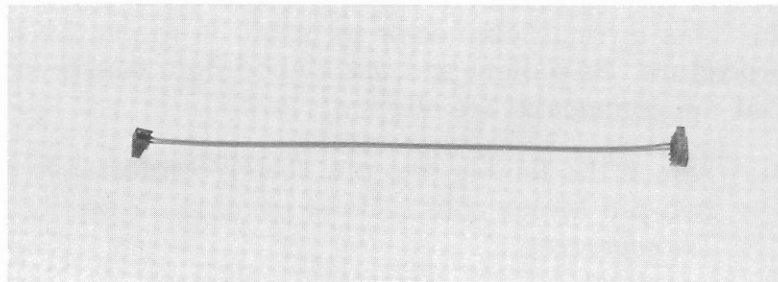

**Composite Video Cable**

1. Locate the four-pin male Molex connector on the Apple's motherboard.




//e users will find the Molex connector at location **J13**. It is located near the backplane on the right side of the case when looking from the front towards the back. You'll see **J13** stenciled on the motherboard next to the connector.



][ Plus users will find the Molex connector in about the same spot as the //e Molex connector is located (see below). You will see a resistor labeled "27" next to the connector.


2. Attach the female four-pin Molex connector to the male four-pin Molex connector as shown below.

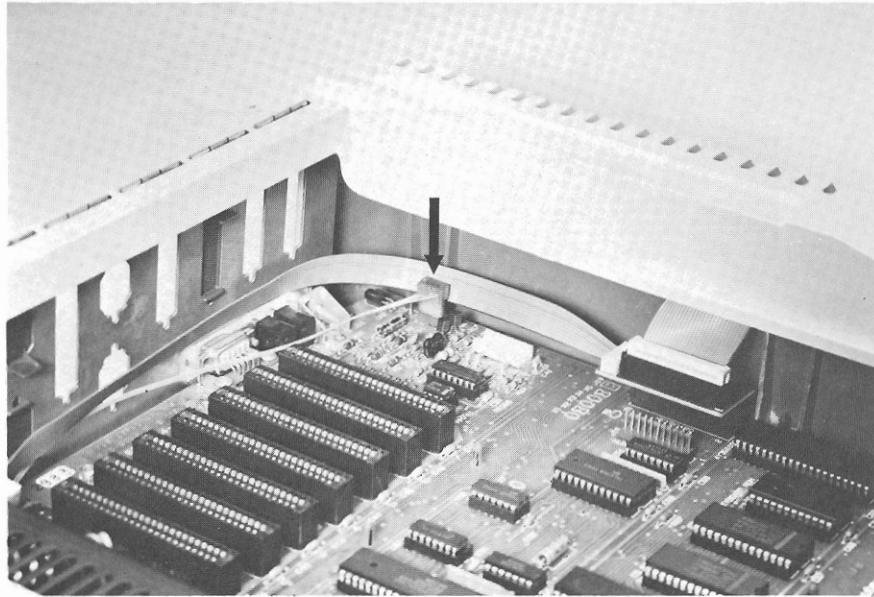

**Composite Video Cable connected**

Take care to align the two connectors the correct way. They are keyed such that the pins are offset from the center line. However, you could *still* force it on the wrong way. This is also the most difficult connector to install in the entire installation procedure. Be patient and use a good light source to help see that the connectors are aligned.


3. Attach the female two-pin Molex connector to the male two-pin Molex connector at location **J2** on *PC Transporter*.

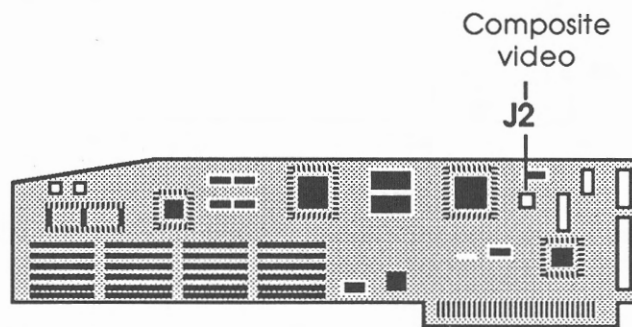

Take care to align the two connectors the correct way.

### Speaker cable

The Apple's built-in speaker cable is a two-wire ribbon cable with a Molex connector on one end. The *PC Transporter* package contains a similar cable with a Molex connector on each end; *PC Transporter's* is referred to in these steps as the *supplied* speaker cable.

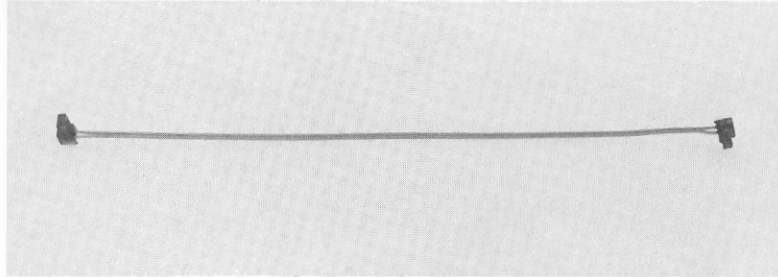


**Speaker Cable**

The following steps place *PC Transporter* electrically "between" the Apple motherboard and the speaker so it can control the speaker along with the Apple.

1. Disconnect the existing Molex connector from location **J18** on the Apple's motherboard.


The other end of this cable is soldered to the speaker.

2. Connect either end of the supplied speaker cable to location **J18** on the Apple's motherboard.

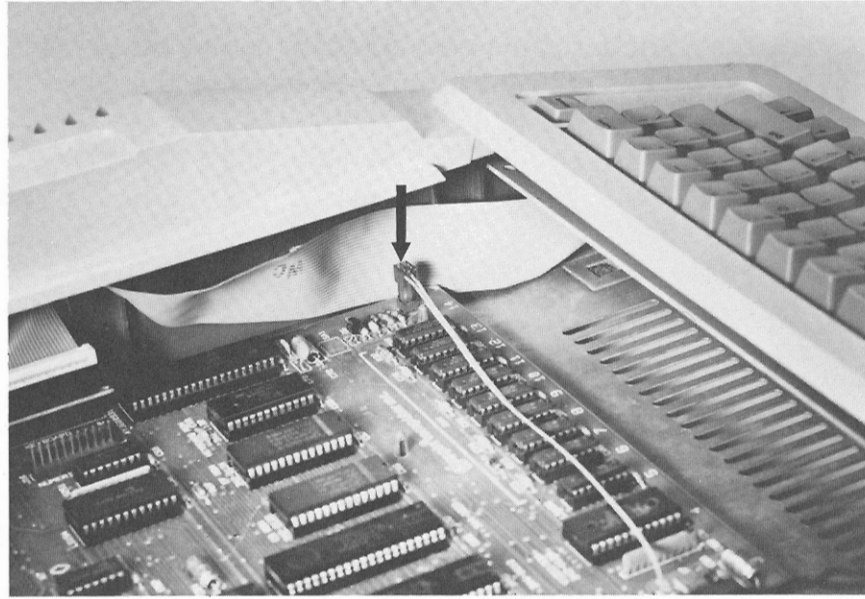

### Speaker Cable connected to motherboard

Both ends of the supplied speaker cable are identical so it does not matter which end you connect. What does matter, however, is that the cables are aligned correctly.

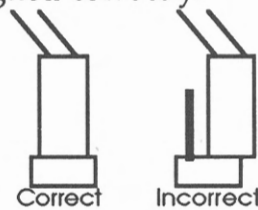


3. Connect the other end of the supplied speaker cable to connector **J7** on *PC Transporter*.

Connectors **J1** and **J7** are next to each other and are identical.

4. Reconnect the Molex connector to connector **J1** on *PC Transporter*.

Speaker  
J1 & J7

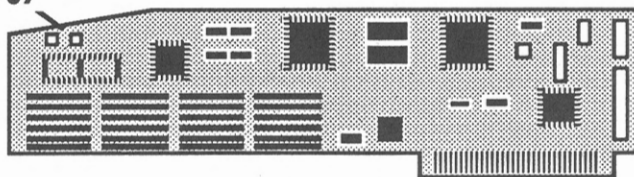




---

## IIgs Cable Installation

Once you have removed all of the expansion cards from inside the Apple's case, you can install *PC Transporter's* cables. The cables included with the IIgs installation kit are shown below.

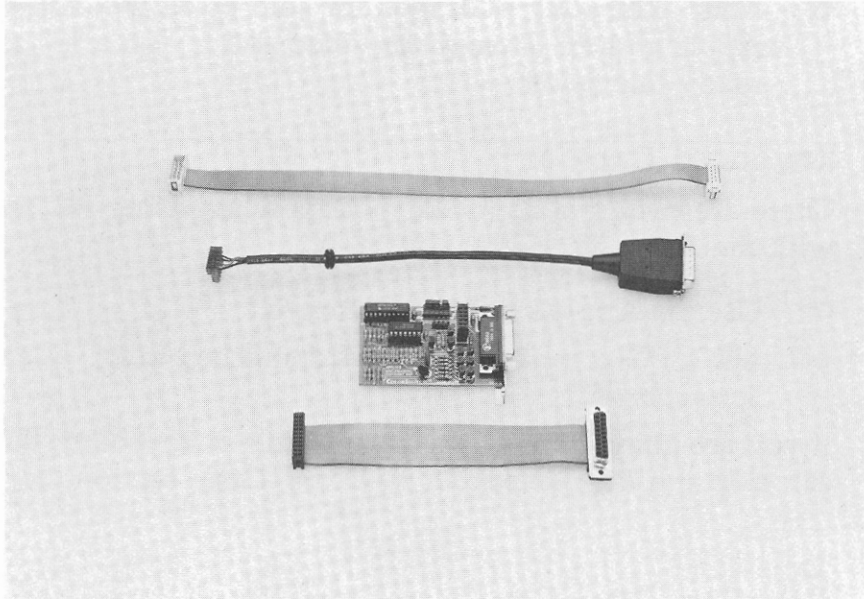

**IIgs installation cables**

---

## Monitor Choices

There are two options for video output when using *PC Transporter* with the IIgs:

- ◇ If you have an Apple RGB monitor (such as the Sony monitor<sup>♦</sup>, sold by Applied Engineering or the AppleColor monitor, commonly sold with the IIgs), you can use it for both Apple and *PC Transporter* video using the ColorSwitch. Both outputs will have full color capability.
- ◇ If you want to use a separate digital CGA-compatible monitor with *PC Transporter*, you can connect it directly to the RGB video output of the card, but it will work only with *PC Transporter* video.

If you are using a composite monitor with your Apple, you may be able to display *PC Transporter* as well as Apple video on it. *Æ* is currently working on a composite adapter which will connect to the ColorSwitch. However, we recommend that you use an analog RGB monitor and take advantage of the GS's graphic ability.

- ❖ *Note:* The Sony RGB monitor sold by *Æ* will run both Apple and *PC Transporter* video and is also a 13", cable-ready television.

---

## Keyboard Choices

There are two options for keyboards when using *PC Transporter* with the Apple IIGS:

- ◇ Use the Apple's built-in keyboard
- ◇ Use a PC-compatible keyboard attached to *PC Transporter*.

If you are going to use the Apple's built-in keyboard, then you can skip the *PC-Compatible Keyboard Cable* section.

- IIGS RGB adapter cable--ColorSwitch



//e and II Plus owners who plan to use the RGB monitor will want to refer to this section also.




The IIGS requires a IIGS RGB adapter cable called, "ColorSwitch." A cable connects to the IIGS's video output on the backplane and goes back inside the case and connects to the ColorSwitch's small circuit card which is mounted to the backplane. A flat cable from this card connects to *PC Transporter* inside the Apple's case. The ColorSwitch has a female DB15 connector just like the one on the backplane. You will eventually reconnect the IIGS monitor to this connector.

It may sound a little complex, but just follow the instructions and refer to the pictures and you should have no problem.


Following is a diagram of the ColorSwitch to assist in these steps.



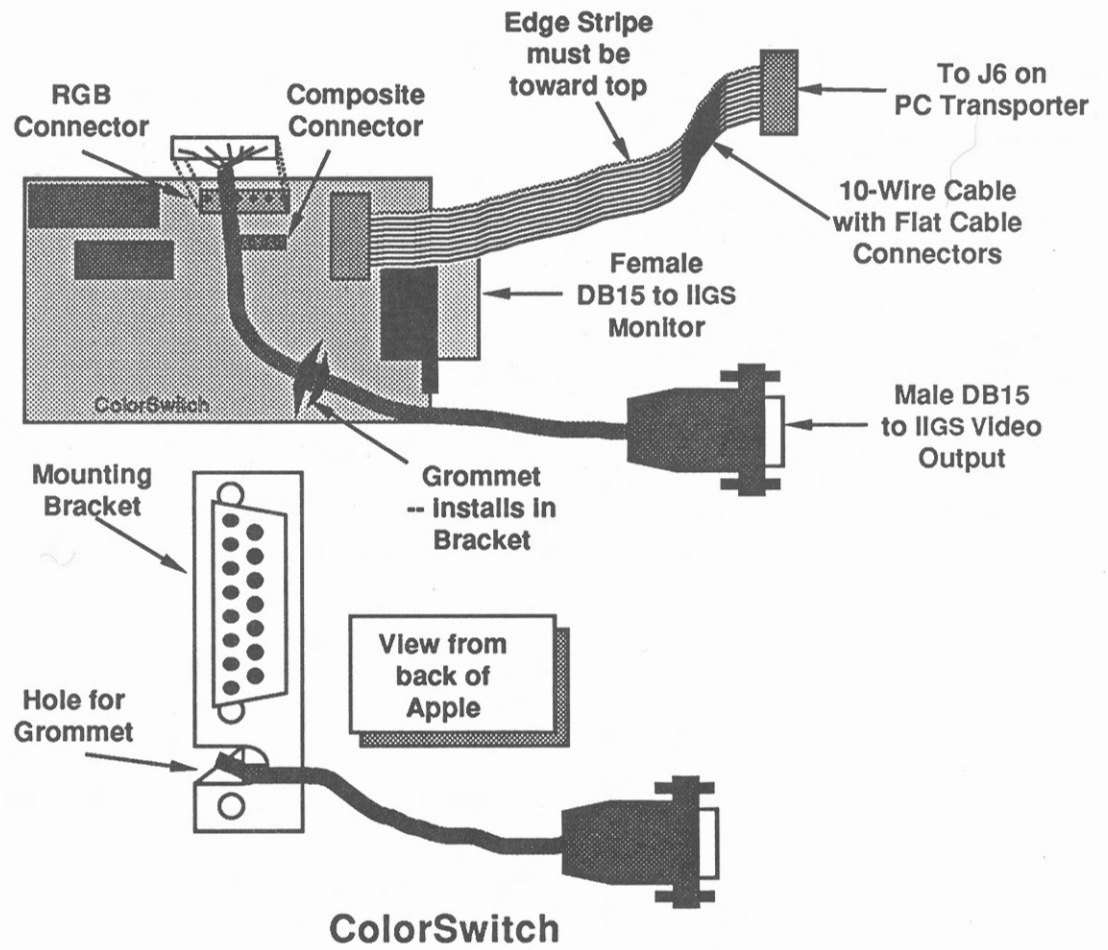

1. Select the opening in the back panel that is immediately next to the IIGS power supply. (If your IIGS is a retrofit, use the opening directly above the power supply.)

This particular opening is required due to the short length of the Male DB15 connector cable.

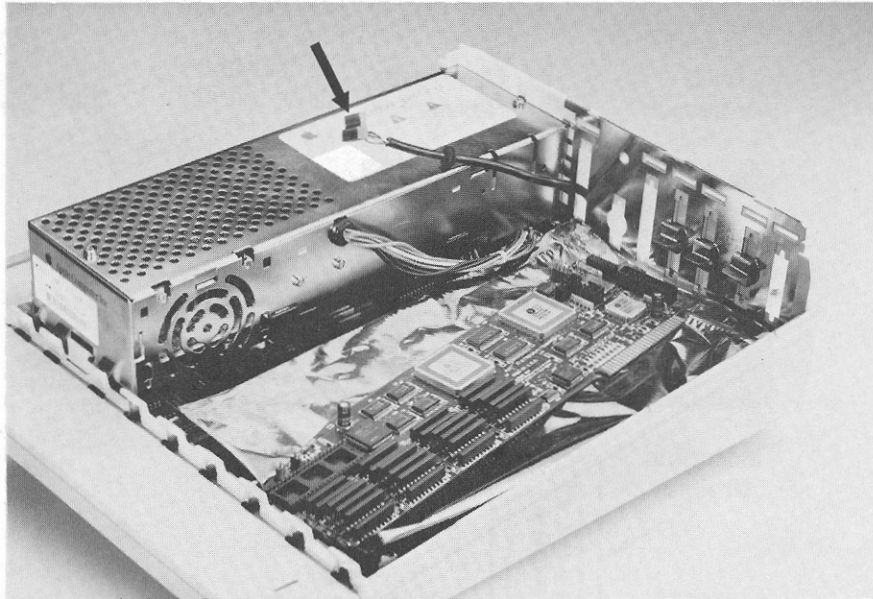


### **Connector fed through the backplane**

Feed the six-pin female connector and the grommet on the round cable through this opening. The DB15 connector is outside the IIGS case.

2. Attach the female connector to its male mate on the ColorSwitch.

The male mating connector is the one with the pins sticking up. It is also the only connector on ColorSwitch. Mount the connector so that the wires feed toward the bottom of the ColorSwitch.


3. Push the strain relief grommet into the mounting plate on the ColorSwitch.

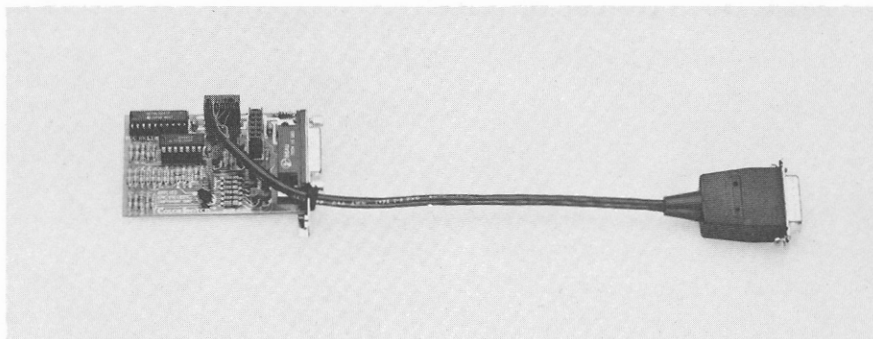

### **6-pin Connector and Grommet connected to ColorSwitch**


Make sure the "lips" of the grommet are not folded under but are flush against the outside surfaces of the mounting plate.

4. Attach either end of the flat 10-wire cable to the 10-pin female connector on the ColorSwitch.

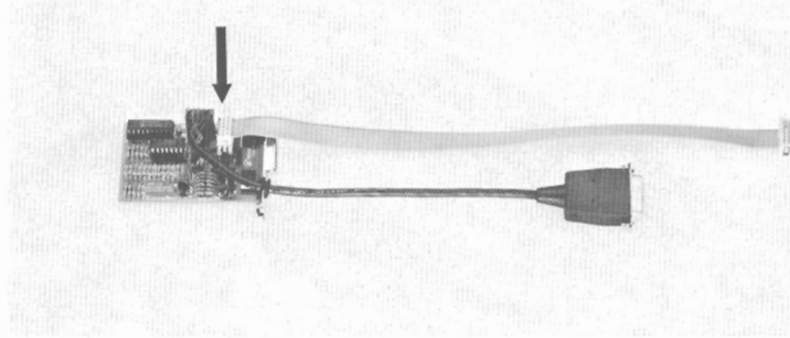


**10-pin Connector connected to ColorSwitch**

6. Attach the other end of the flat cable leading from the adapter board to the 10-pin connector at location **J6** on *PC Transporter*.

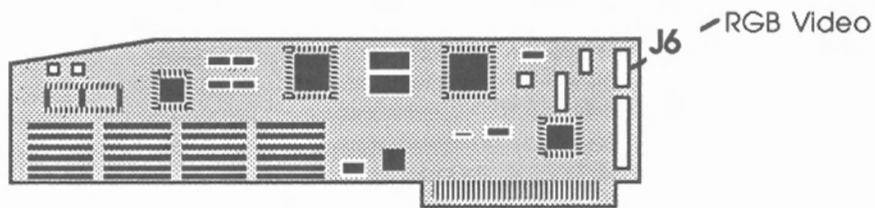

The edge stripe should be toward the top of both the PC Transporter and the ColorSwitch. This is the connector for RGB output. If you had a digital CGA-compatible RGB monitor, it's backplane connector would connect here.


7. Secure the ColorSwitch's mounting plate to the opening in the back panel.

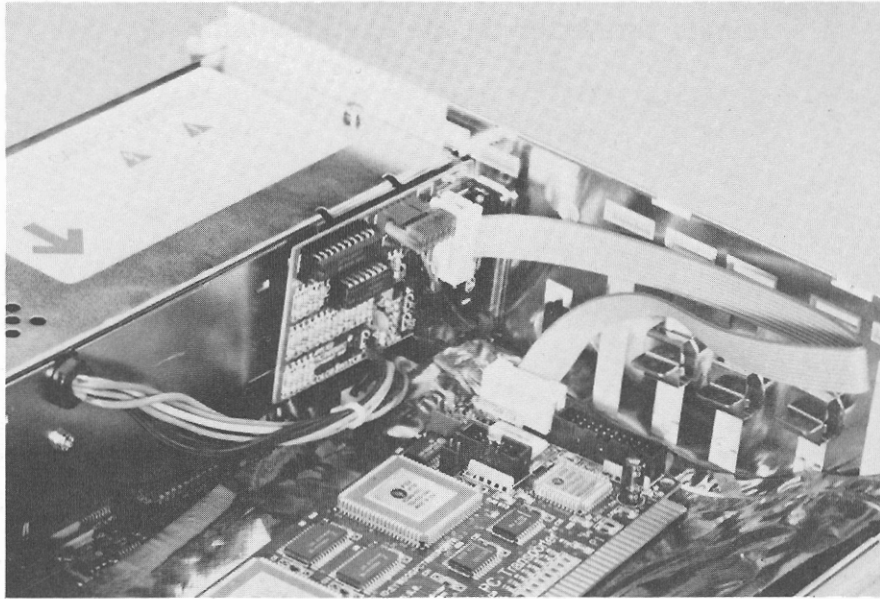

#### **ColorSwitch installed**

Use the supplied screws to fasten it to the back panel of the Apple. The chip side of the ColorSwitch should be facing away from the power supply. The grommet should be at the bottom of the mounting plate. Don't over-tighten the screws or you might strip the threads.

8. Plug the Male DB15 connector into the built-in video connector on the Apple's backplane.

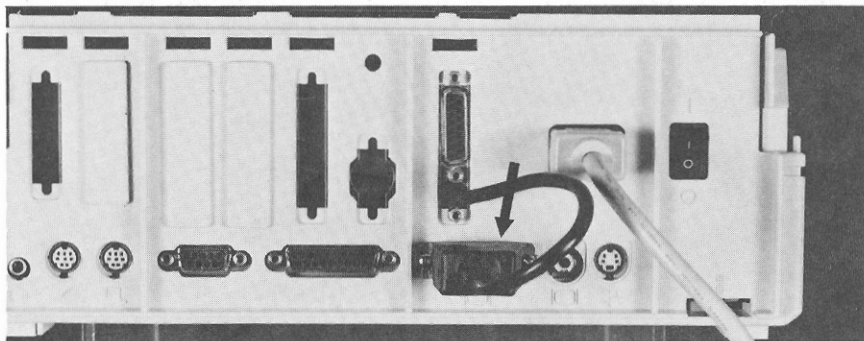


#### **ColorSwitch's DB15 male connector attached**

This is the connector that the IIGS monitor used to be connected to before you started the installation. If the male DB15 connector won't reach the built-in connector, you have either selected the wrong backplane opening, or the adapter board is mounted upside down. In either case, remove the ColorSwitch and start this procedure over again.

Disk drive cable

The disk drive cable is a 19-wire ribbon cable with a female 20-pin flat cable connector on one end and a female DB19 connector on the other.

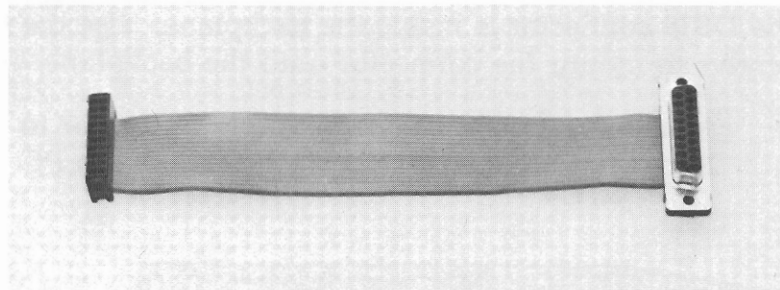


**Disk Drive Cable**

This cable enables *PC Transporter* to access up to two TransDrives, in addition to up to two Apple 3.5 Drives.

1. Locate an unused medium-sized opening in the IIGS's backplane.

Do not use an opening that one of your existing expansion cards is currently using.


2. Secure the male DB19 connector in the backplane as shown below.

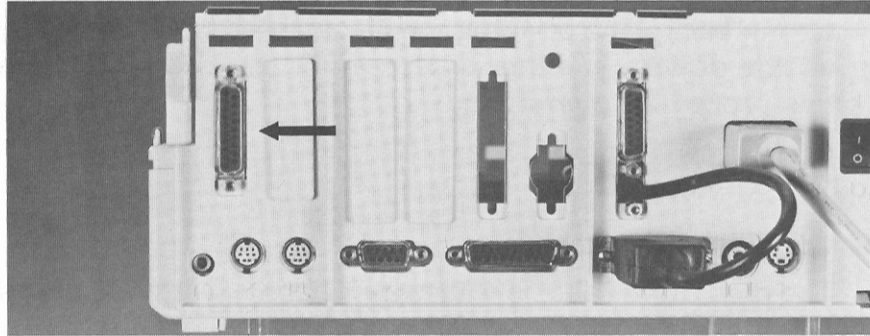

**DB19 Connector attached**

Feed the wires in from the inside so that the flange surrounding the DB19 connector is inside the backplane. Use the provided screws to mount the connector onto the backplane.


3. Attach the female 20-pin flat cable connector to the male 20-pin flat cable connector at location **J4** on *PC Transporter*.

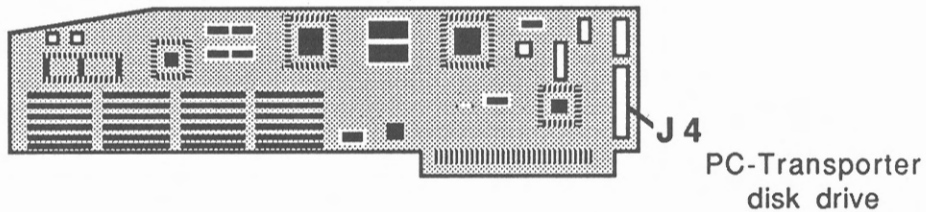

Take care to align the two connectors the correct way.

- PC-compatible keyboard cable
- ❖ *Note:* You can skip this step if you are not going to use a PC-compatible keyboard.

The PC keyboard cable is a five-wire ribbon cable with a flat cable connector on one end and a female DIN connector on the other end.

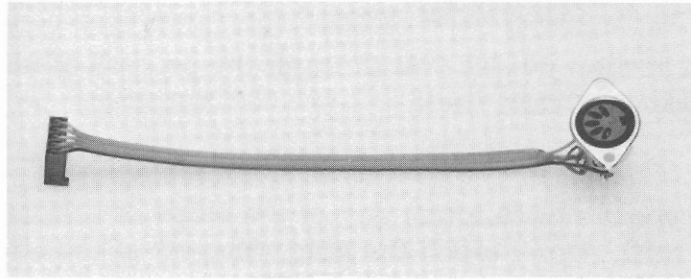

### PC-Compatible Keyboard Cable


1. Locate an unused small-sized opening in the IIGS's backplane.

Do not use an opening that one of your existing expansion cards is currently using.

2. Secure the female DIN connector in the backplane using the screws provided.

Feed the wires from the inside so that the flange surrounding the DIN connector is inside the backplane.

3. Attach the flat cable connector to location **J5** on *PC Transporter*.

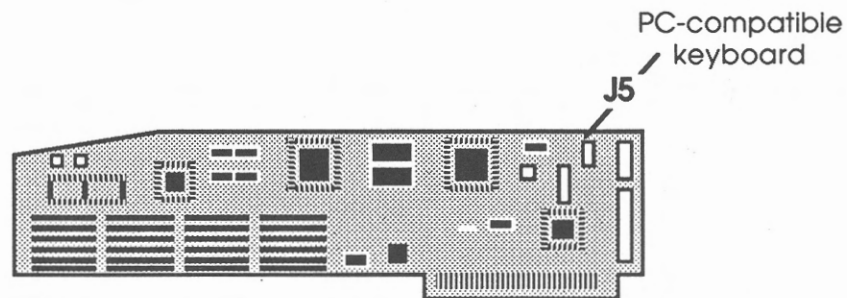

The connector is keyed so that it will go in only one way.

---



---


## Install *PC Transporter*

This section guides you through the process of installing the *PC Transporter* card itself.

1. Pick up the card holding it by its edges only.

Be careful not to touch any of the chips or other components on the card. Don't touch the gold "fingers" of the edge connector at the bottom of the card.

2. Lower it into your Apple with its chip side toward the right side of the Apple's case.

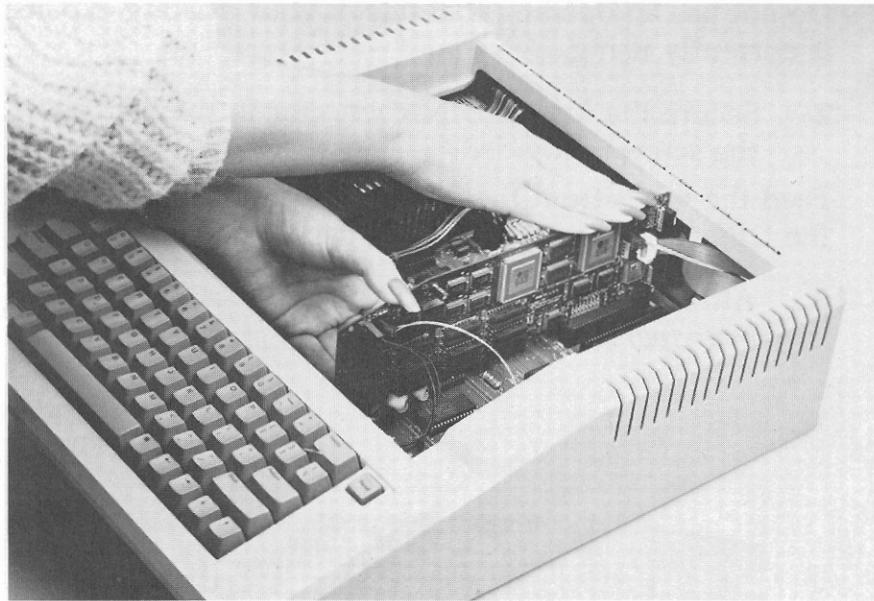


### **Rest the card on top of the slot**

Don't try and force it into its slot yet. Just rest it on top of the slot for now, and gently hold it upright by resting one hand against the top of the card.

3. Line up the card in its slot. (For help with choosing a slot, see the section, "Which Slot," at the beginning of this chapter.

Line up the gold-plated contacts at the bottom of the card with the contacts in the slot on the Apple's motherboard.

4. Press the card into its slot.

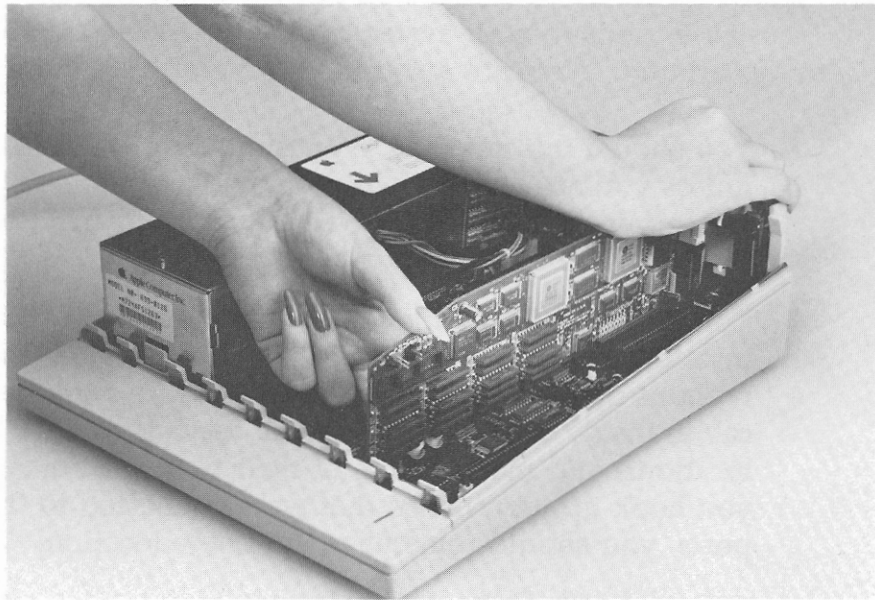

#### **Press the card into the slot**

While gently holding the card vertically in the slot with one hand, use the palm of your other hand to press the card into its slot. Moving *PC Transporter* in a gentle back-to-front rocking motion is helpful.

If the card doesn't go into the slot, check to see if the card is properly lined up in the slot, or if there is something blocking the bottom of the card, such as extra cables, tools, and so on.

---

#### **Reinstall Existing Cards**

Now that you have installed *PC Transporter* and its associated cables and hardware, you can reinstall your other cards.

Refer to each expansion cards' documentation for installation information. If you no longer have one or more of these manuals, take care in installing the cards.

- ❖ *Remember: AE will not be responsible for any damage to your other cards.*

Refer to the diagrams that you (hopefully) made before removing the cards. Because of the amount of hardware that *PC Transporter* adds to your system, you may have to move a few things around. Here are a couple of general guidelines:

- You should not move an expansion card to a new slot unless you are familiar with the card's requirements and are certain that moving it will not cause difficulties with the hardware or your software.
- You can most likely move external connectors (those installed in the Apple's backplane) to new locations without disrupting their operation. Make sure that the cables inside the Apple's case will reach the new locations, and make a note of their new location. When you hook up peripherals that were connected to those ports, you should remember their new location.

---

### **Close the Apple**

Once you have replaced all the cards in your Apple you can close it back up.

- ◇ Replace the Apple's case top.

This is the reverse of the procedure detailed in the *Prepare the Apple* section.

---

### **Connect All Peripherals**

You can now reconnect all the peripherals that you disconnected in the *Disconnect All Peripherals* section. There are actually some new peripherals to connect in addition to those that you had before: *PC Transporter's* peripherals. You will first attach all of your existing peripherals, then add the new peripherals that you have acquired for use with *PC Transporter*.

### **Reconnect Existing Peripherals**

Refer to each peripheral's documentation for installation information. If you no longer have one or more of these manuals, simply take care in reconnecting the peripherals.

Refer to the diagrams that you (hopefully) made before disconnecting the peripherals. Because of the number of peripherals that *PC Transporter* adds to your system, you may have to move a few things around. Refer to the guidelines in the previous section for more information.

### **Connect *PC Transporter's* Peripherals**

There are a number of different hardware configurations possible with *PC Transporter*, but most of them are standard as far as their installation is concerned. This section steps through the available *PC Transporter* hardware options; if you don't have a particular piece of hardware, simply skip to the next section. For example, if you are using your Apple's built-in keyboard instead of a PC-compatible keyboard, you needn't concern yourself with the *Connecting a PC-compatible keyboard* section.

#### Connecting a PC-compatible keyboard

To connect a PC-compatible keyboard to *PC Transporter*, do the following:

Connect the male five-pin DIN connector from your keyboard to the female five-pin DIN connector in the Apple's backplane.

This is the connector that you installed in the *PC Keyboard Cable* section above.

#### Connecting a CGA-compatible RGB monitor

To connect a CGA-compatible RGB monitor to *PC Transporter*, do the following:

Connect the male DB9 connector that leads from the monitor to the female DB9 connector in the Apple's backplane.

This is the connector that you installed in the *RGB Video Cable* section above.

#### Connecting an Apple IIGS RGB monitor

To reconnect a Apple IIGS RGB monitor to *PC Transporter*, do the following:

Connect the male DB15 connector that leads from your monitor to the female DB15 connector you installed in the Apple's backplane.

The built-in connector should have a cable plugged into it already.

Connecting a composite monitor

Your Apple-compatible NTSC composite monitor does not need any special connections to work with *PC Transporter*; all the necessary connections were made inside the Apple's case. Regardless of what type of composite monitor you actually have, simply reconnect it as it was before.

Reconnect the composite monitor to the Apple's RCA video jack.

Connecting PC-compatible disk drive(s)

*PC Transporter* can work with up to a total of four disk drives: up to two TransDrive disk drives and up to two Apple 3.5 Drives such as those for the IIGS. Most drives for standard PC-compatibles do not have the necessary hardware and internal electronics to be connected in such a manner.

Because *PC Transporter* has only one disk drive connector, the drives must be *daisy-chained*, or plugged into each other.

Both types of drives connect to *PC Transporter* in the same basic manner with one distinct difference: your TransDrives must be in the chain *before* any Apple 3.5 drives. For example: if you have a TransDrive system and one Apple 3.5 drive, the TransDrive is plugged directly into *PC Transporter* and the Apple drive is plugged into the port in the rear of the TransDrive.

- ◇ To connect your TransDrive system to *PC Transporter* simply connect the male DB19 connector at the end of the cable which leads from your first TransDrive to the female DB19 connector in the Apple's backplane.

This is the connector that you installed in the *Disk Drive Cable* section above.

If you're using an **Apple 3.5 Drive(s)** only, connect it directly to the DB19 connector. If you are using a Disk 3.5 drive along with a TransDrive system, be sure to plug in the TransDrive system first and daisy-chain the 3.5 drive to the connector on the back of the TransDrive.

A dual TransDrive system will have only one cable coming from it. Attaching this one cable will give *PC Transporter* access to both drives.



Do not confuse *PC Transporter's* DB19 connector with the IIGS's built-in floppy disk port. The built-in port is in the lower portion of the backplane and is positioned horizontally; *PC Transporter's* port is installed in the expansion slot area above the built-in ports and is positioned vertically.

You can connect up to four floppy disk drives to *PC Transporter's* floppy drive connector. You can use floppy drives and hard disks connected to the Apple by configuring them using the *Control Panel*.

Now turn to Chapter 3 , *Software Installation and Configuration*, for directions on getting your system up and running.

---





# CHAPTER THREE

---

## *Software Installation and Configuration*

### **Software - Where to Start**

*PC Transporter Software* takes you through the steps required to start using the system. You can find more complete information on the Control Panel and *PC Transporter* in Part Three of this manual: *PC Transporter Reference*.

---

### **Make Backup Copies of *PC Transporter's* Disks**

Accidents happen with software and diskettes as easily as they happen with hardware; sometimes even more easily!

Never make changes to the master disks. Use the ProDOS System Utilities (or other copy program) to make backup copies of the *PC Transporter* system disk (both sides of the 5.25" disk) before you proceed with the *Software Installation and Configuration*.

You should also be using a copy of your MS-DOS master disk. If you're not using a copy, the first thing you should do after booting MS-DOS is make a copy using the MS-DOS COPY instructions.

1. Start the ProDOS System Utilities.

This is the collection of software utilities that allow you to perform maintenance duties on your disks, such as copying disks or files, erasing and renaming files, and formatting disks.

2. Use the ProDOS System Utilities to make a backup copy of the *PC Transporter* system Disk.

Consult your ProDOS User Manual for help if you don't know how to do this.

- ❖ *Note:* You can use your favorite copy method (such as clicking and dragging with the Finder) instead of System Utilities.

If you're using a **single 5.25" ProDOS drive** (the drive connected directly to your Apple), you should copy the AEPCT side (the front side) of the supplied disk to one backup disk and the AEPC side (the back side) of the supplied disk to another backup disk.

If you're using **two 5.25" ProDOS drives**, you should copy the AEPCT side (the front side) of the supplied disk to one backup disk and the AEPC side (the back side) of the supplied disk to a separate backup disk. This will allow you to put the AEPCT disk in drive 1 and the AEPC disk in drive 2 and avoid flipping the disk.

Those people using a **3.5" drive** can simply copy the 3.5" supplied disk to your backup 3.5" disk and name it AEPC.

If you have a hard disk, copy both sides of the 5.25" disk or the entire 3.5" disk to filename /AEPC on your hard disk.

When you have made the backup copies, put the original disks away and work with your copies.

---

---

### ***PC Transporter Software***

❖ *Note:* If this is the first time you'll run *PC Transporter*, **read this entire section before you attempt to continue.**

The *PC Transporter* hardware does not work all by itself. Like any other programmable computer, it couldn't run without software.

The *PC Transporter* software is run by launching the ProDOS application called AEPC.SYSTEM. Your *PC Transporter* system disk will run this application automatically when it is booted.

---

---

## Running *PC Transporter* for the First Time

This section takes you through the steps necessary to run *PC Transporter* for the first time. You may find parts of this process are not applicable to your hardware configuration.

### Automatic Pilot, or The Easy Way

Follow these instructions to get into MS-DOS as quickly as possible:

1. Place the backup copy of AEPCT in the Apple's boot drive.

Those using **two Apple 5.25"** drives should also place a copy of the back side of the *PC Transporter* system disk (AEPC) in drive 2.

Those using a **3.5 drive** do not need to worry about front and back.

2. Place a copy of a bootable MS-DOS system disk in the MS-DOS A: drive.  
❖ *Reminder:* This should be a copy of either PC-DOS or a standard MS-DOS system disk. Some MS-DOS operating systems are modified for IBM work-alikes and will not function properly with *PC Transporter*.

This is usually the first drive (the bottom drive in a dual TransDrive system) in the disk drive daisy chain connected to *PC Transporter*.

3. Turn on the Apple's power supply. If peripherals (like the monitor) are not on yet, turn them on too.

After a moment or two, a splash screen appears welcoming you to the world of *PC Transporter*. Then *PC Transporter* runs a memory test. (For information about what the memory test's numbers mean, see the *AE Bios Memory Test* section in Chapter Five.) Then this message is displayed at the bottom of the screen:

Automatic Configuration in progress...

That means that your *PC Transporter* software is configuring the drivers for the card.

After a brief memory test, you'll see the following message:

```
LOADING FROM DISK
```

At this point, *PC Transporter* is accessing your MS-DOS disk. You should then get the MS-DOS prompt, A>. If you do get the prompt, go to the section, *Transferring Files*.

If your MS-DOS A: drive is a 3.5 drive, you will see an approximation of the following message.

```
LOADING FROM DISK
Non-System disk or disk error
Replace and strike any key when ready
```




 

(The actual message will vary according to the version of MS-DOS you are using.) If the message above appears, refer to the section following for instructions on how to make *PC Transporter* recognize a 3.5" drive.

---

### Setting up a 3.5" Drive as the MS-DOS boot drive

*PC Transporter's* default boot drive is a 5.25 TransDrive. In order to use an Apple 3.5 Drive or a TransDrive 3.5 as your MS-DOS boot disk, you must first inform *PC Transporter* that you will be using a 3.5" instead of a 5.25". To do this, simply follow the steps below.




❖ *Note:* This section is designed to get you going as quickly as possible. For more in-depth discussion of how to use the Control Panel and set up your drives, see the appropriate chapters.

1. After you have gotten the DISK READ ERROR message, hold down the  key while pressing the  key twice. (  -  ,  )

*PC Transporter's* main menu will appear.

PC Transporter Main Menu

1. Display Apple Keyboard Map
2. Configure Drivers
3. Exit From Control Panel-Run PC Transporter
  
4. Reboot and Run PC Transporter
5. Quit to ProDOS

2. Use the   keys or the option's number to select the Configure Drivers option then press .

Configure Drivers

1. Auto-Configure
2. Load Device Driver
3. Assign/Configure Devices
4. Show Current Configuration
5. Save Configuration
6. Remove All Currently Loaded Drivers

3. Select the Assign/Configure Devices option from the menu above.

Assign/Configure Devices

 
1. Disk Drives
2. 8087 Math Co-Processor - Not Installed
3. SSC COM1 Handler
4. ImageWriter II/IBM Graphics printer
5. (etc. depending on number of drivers loaded)

4. Select Disk Drives from this menu. You will see the following menu:

Assign Disk Drives

AEPC Disk Drives

1. A> PC Transporter TransDrive 1 (5.25")
2. B> PC Transporter TransDrive 2 (5.25")
3. None
4. None
5. C> Hard Disk = /AEPC/MSDOSVOL (OFF)



5. Select the A> drive and press . This will give you the following menu:

```
Floppy Drive Type Selection

Floppy Drive 'A' = None

Drive Selection

 1. PC Transporter TransDrive (5.25")
2. PC Transporter TransDrive (3.5")
3. PC Transporter Apple Disk 3.5
3. ProDOS Drive
4. None
```

6. Select either the TransDrive 3.5" or the Apple Disk 3.5 option, depending on which you are using, then press .
7. Press  until you reach the Configure Devices menu then select Save Configuration.
8. Press to return to the Main Menu, then select Reboot and Run PC Transporter.

*PC Transporter* should now recognize your 3.5" drive and boot the MS-DOS disk.

Now go to the section, "Transferring Files," to move the AEPC files to your MS-DOS disk.

---

---

---

## Transferring Files

If you're working with the master MS-DOS systems disk, make a copy of it now. Refer to Chapter Six - MS-DOS Reference for COPY instructions.

Now you'll need to copy the AEPC disk files to your MS-DOS boot disk. These files are MS-DOS files that enable *PC Transporter* to read the ProDOS clock, transfer files between ProDOS and MS-DOS and more.

1. At the A:\> prompt, enter DIR.

You will get a directory of the MS-DOS disk. This is the MS-DOS equivalent to the Apple's DOS and ProDOS CATALOG and CAT commands.

2. Note the amount of "bytes free" at the bottom of the directory.

You must have at least 120,000 bytes (120K) free to be able to copy all of the AEPC files to your MS-DOS disk. If you don't have 120K free, use the MS-DOS DEL command to delete some of the files you don't need until at least 120K are free. (See Chapter Six - MS-DOS Reference for instructions on using the DELete command.)

- ❖ *Note:* You can delete everything from the copy of your MS-DOS disk except CONFIG.SYS and its two invisible files and still have a bootable system disk. Since you're working with a backup copy of MS-DOS, you can restore any files deleted from your copy using the MS-DOS master disk.

You can also copy the AEPC files to a blank, formatted MS-DOS disk and use this disk as an MS-DOS utilities disk. But, for the purpose of simplicity, we recommend putting it onto your boot disk.

3. If you're using two 5.25" floppy disks with both AEPCT and AEPC in the drives or if you are using the 3.5 AEPC disk or a hard disk, the /AEPC/MSDOSVOL hard disk has been automatically set up for you. **Skip to step 4.**


If you're using only one Apple 5.25" floppy drive as your ProDOS drive, you will need to set up the ProDOS drive to emulate an MS-DOS hard drive.



This enables *PC Transporter* to recognize the AEPC disk as an MS-DOS hard volume and allows you to copy the AEPC files to your MS-DOS boot disk.

To do this, follow the steps below.

- Get to the Control Panel Main Menu

Hold down the  key while pressing  twice.

- Choose Configure Drivers from the main menu.
- Choose Assign/Configure Devices from the Configure Drivers menu.

The following menu appears:

```
Assign/Configure Devices

1. Disk Drives
2. 8087 Math Co-Processor - Not Installed
3. SSC COM1 Handler
4. ImageWriter II/IBM Graphics printer
5. (etc. depending on your other devices)
```

- Choose Disk Drives from the Assign/Configure Devices menu.

The following menu appears. It may not appear exactly the same on your screen; it depends upon the equipment you have in your system. Nevertheless, the process is the same.

```
Assign Disk Drives

Disk Drives

1. A> PC Transporter TransDrive 1 (5.25)
2. B> PC Transporter TransDrive 2 (5.25)
3. None
4. None
5. C> Hard Disk = /AEPC/MSDOSVOL (OFF)
```

- Choose C> Hard Disk = ....


The Control Panel displays the following prompt at the bottom of the screen:

```
Specify ProDOS file to be used as AEPC's Hard Disk
:/AEPC/MSDOSVOL_
```

- ❖ *Note:* You will need to remove the AEPCT disk and put in the AEPC disk into the Apple floppy drive at this time.

⇒ Type .

The default volume name (/AEPC in the example above) is the volume name of the disk which contains the MSDOSVOL hard disk file.


⇒ Now press  until you are back at the Main Menu. Then select Reboot and Run PC Transporter

This will keep the original configuration with the addition of the hard disk volume.

4. With the ProDOS volume (/AEPC/MSDOSVOL) set up as a hard disk, you can now use a MOVETO program, included on your AEPC disk, to copy the files from the AEPC disk to your MS-DOS disk.

Enter C: ("C" followed by a colon) then  at the A> prompt.

This will give you direct access to the C: drive (the /AEPC/MSDOSVOL file which has been established as the hard drive).

5. At the C> prompt, enter, MOVETO A: .

This copies all your files in the C: drive to the MS-DOS disk in drive A:. Each file is listed as it is copied. The files will be placed on the A: disk in a subdirectory called AEPC.

6. To view your modified boot disk:

⇒ Return to the A> prompt by entering A: at the C> prompt.

⇒ Enter DIR to get a list of the A: disk's contents.

Notice the DIRECTORY AEPC added to the root directory.

In addition, if your MS-DOS disk does not already contain an AUTOEXEC.BAT file, the AUTOEXEC.BAT file included on *PC Transporter's* system disk will be copied onto the main directory of A: as well as into the subdirectory AEPC. If your MS-DOS disk already has an AUTOEXEC.BAT file, it will be left alone and the AEPC's AUTOEXEC.BAT will be placed into the subdirectory only.

Once copied into the main directory, the new AUTOEXEC.BAT file will automatically install the clock driver, give you an extended prompt and take advantage of color (with color monitors). When you boot the MS-DOS disk or run AUTOEXEC, you'll get the following screen:

```
Aplclock Utility V__-Copyright 198- Little Blue Limited
Current date is -----
Current time is -----
Applied Engineering PC Transporter, on (date) at (time)
A: />
```

- Enter DIR AEPC to catalog the contents of the AEPC directory.

If you want to free up some space on your boot disk, you can delete some of the files included in the AUTOEXEC.BAT file and the AEPC subdirectory. See the section, "PC Transporter System Files" in Chapter 5 - *PC Transporter Software* for a description of these files, decide which ones you don't need and DELETE them..

7. Since the MS-DOS files we supply are now on your MS-DOS boot disk you won't need the /AEPC/MSDOSVOL hard disk file the next time you boot MS-DOS.

You can use the hard disk position to set up your own hard disk as described in Chapter Eight - *Disk Drive Reference*.

---

### Configure PC Transporter

For the purposes of this discussion, we will assume that you have a system similar to the one described in the section above called *Minimum Configuration*. That system is:



Slot 0: Language Card

Slot 1: Parallel or Serial Printer Card (*optional*)

Slot 2: Serial Communications Card (*optional*)

Slot 6: Apple-compatible disk-controller card

*PC Transporter* will automatically configure most of your particular system's set up, but you won't be able to use some of your peripheral devices until you add them to the configuration. More detailed instructions for all of your hardware can be found in Part Three - *PC Transporter Reference* sections later in the manual.

As mentioned before, if you don't access the Control Panel when you first boot *PC Transporter*, *PC Transporter* will autoconfigure the system.

To autoconfigure *PC Transporter* from the main Control Panel menu:

1. Choose `Configure Devices` from the main menu.

The following menu is displayed:

```
Configure Devices
1. Auto-Configure
2. Load Device Driver
3. Assign/Configure Devices
4. Show Current Configuration
5. Save Configuration
6. Remove All Currently Loaded Drivers
```

2. Choose `Auto-Configure` from the `Configure Devices` menu.

While the automatic configuration is progressing, the Control Panel displays status information on the screen. If all goes well, the message:

```
Auto Configuration Complete
```

is displayed, and the `Configure Devices` menu is re-displayed.

---

### Save Your Configuration

If the autoconfiguration is not suited to your needs, you will need to modify the configuration using the Control Panel. In order to avoid having to access the Control Panel every time you run *PC Transporter*, you can save your default configuration into a file on the *PC Transporter* system disk. This way, the Control Panel *knows* what you have in your system every time you start *PC Transporter*.

To save your settings into a file:

1. Choose `Configure Devices` from the main menu.

The following menu is displayed:

1. Auto-Configure
2. Load Device Driver
3. Assign Configure Devices
4. Show Current Configuration
5. Save Configuration
6. Remove All Currently Loaded Drivers

2. Choose Save Configuration from the Configure Devices menu.

If all goes well, the message:

```
Saving Current Configuration... DONE!
```

is displayed, and the Configure Devices menu is re-displayed.

The configuration file is saved to the same directory that the *PC Transporter* system file `AEPC.SYSTEM` is found in. The configuration file is named `AEPC.CONFIG`. If there is a configuration file present in the directory when you save the configuration, the old file is erased and the new file takes its place. If you delete this file using the ProDOS System Utilities or the Desktop, the next time you run the *PC Transporter* software, *PC Transporter* will autoconfigure again.

### Leaving the Control Panel

Exiting from the Control Panel into MS-DOS is a simple matter.

- Use the Reboot and Run PC Transporter option in the Control Panel's main menu.

If you have not made any changes to the hardware configuration of the system using the Control Panel you may also:

- Use the Exit from the Control Panel (Run PC Transporter) option in the Control Panel's main menu.

Now you can run MS-DOS to your hearts content. You may want to do a little more customized configuring to adapt *PC Transporter* to your system, but for the most part, you're on your way.

---

### Where To Go From Here

Use the rest of the manual as a reference for specific questions about the card and its compatibles:

To enable your mouse, printer, modem, etc. to run with PC Transporter, go to the section, "Printers and Other Hardware."

For additional help or more information regarding MS-DOS, its commands, and its capabilities, see Chapter Six - *MS-DOS Reference*. Also see the Appendices for a Bibliography of more references.

To set up a hard disk as an MS-DOS storage device, refer to the section, "Using a Hard Disk with *PC Transporter*."

For information on using a TransDrive system for ProDOS storage, see the section, "Using *PC Transporter's* drives from ProDOS."

❖ *Note:* Use both the Table of Contents and the Index to quickly locate topics.

---





# **PART THREE**

---

---

## ***PC Transporter Reference***

The purpose this portion of the manual is to present, in the context of each part of a *PC Transporter-Apple II* system, installation and use details that are not part of the standard installation process. Use this portion of the manual to customize your system, research custom installation issues, troubleshoot run-time problems, and help you effectively use and understand the *PC Transporter* system.

*PC Transporter Reference* contains six chapters, each dealing with a different part of your system:

- PC Transporter System and Hardware*
- PC Transporter Software*
- MS-DOS Reference*
- Keyboards*
- Disk Drive Reference*
- Printers and Other Hardware*

These chapters are arranged in no particular order and, unlike the installation procedures, are made to be used in a random-access manner.

# CHAPTER FOUR

---

## *PC Transporter System and Hardware*

*PC Transporter* is comprised of a combination of hardware and software. Once installed, it allows you to use your Apple II system and peripherals to run the vast library of MS-DOS software, but without giving up your Apple II. It allows you to use your Apple II as you always have for Apple software.

The hardware consists of a board that you plug into a single expansion slot in the Apple II, and cables and connectors to permit you to directly connect to certain optional peripherals that exist only in the PC-compatible world. Additionally, depending on the Apple II that the board is plugged into, a few internal cables permit *PC Transporter* to control certain activities directly, such as sound from the speaker or video to your NTSC compatible monitor.

Booting the system is simple and should appear familiar to any user who has manually launched a ProDOS application. The software is a Standard ProDOS application that is executable upon booting the Apple II or can be run by exiting any other ProDOS application and specifying the AEPC.SYSTEM pathname and prefix. Operation of the system, once booted, is identical to that of any other PC-compatible.

---

### **What and Why is *PC Transporter***

There have been many co-processor cards designed and sold for the Apple II family. The CP/M cards were the most successful of these. These cards were useful to a lot of people because they allowed access to more software, and the operating system could use the Apple peripherals to perform the various I/O tasks that were needed.

The MS-DOS world also has a large amount of software available for it, but MS-DOS and its applications expect to run on a specific piece of hardware - PC's and compatibles.

What makes a PC-compatible compatible is the presence of an 8086 family microprocessor and very specific memory and peripheral locations for all of the memory and peripherals found in the systems. These locations are where the software expects to find and communicate with the various peripheral devices. The memory map typically consists of up to 640K bytes of RAM available to the operating system and applications, a display, a disk controller, and ROM (etc.), all at well-defined addresses. These locations are commonly called *ports*.

---

### The Theory of Operation

The designers of *PC Transporter* decided that the best way to implement a PC-compatible on an Apple II would be to actually provide the V30 microprocessor and RAM, and let the Apple II processor and peripherals carry out the task of emulating all the ports available in a PC-compatible. This would permit the 8086 microprocessor to operate at full speed when accessing memory and slow down only for the I/O operations carried on by the Apple II's processor.

The I/O operation speed would probably not be noticed anyway because the speed at which most I/O operations are carried out is usually limited by the peripheral that the processor is communicating with. You are probably painfully aware of how slow file transfers are while using a modem. Printing files also ties up your system and printer unless you have a means of spooling the printer output. Even floppy disk drives read and write bits of data slowly compared to the speed of data through today's microprocessor.

The I/O emulation is actually carried out invisibly to the V30 microprocessor and hence MS-DOS. The *PC Transporter* hardware and portware quietly take care of translating all peripheral input and output tasks into ones that the Apple II can easily handle with its own peripherals. The V30 never knows that it didn't pass the information along directly and most of the time, it's never even slowed down while the transfer takes place.

As an example, PC applications usually print by sending a stream of data to a port called LPT1 : (or alternately: PRN). MS-DOS and some ROM programs then send this output to the parallel printer attached to the first parallel port. When you are using *PC Transporter*, the Portware intercepts this stream of data, converts it (if necessary) to data an Apple-compatible printer would understand, and routes it to the appropriate printer interface card and printer. Once set up with the Control Panel, this process is invisible to you and the application; it happens automatically when your PC software accesses a PC port.


Unfortunately, the Apple II is incapable of emulating certain peripheral devices found in a PC-compatible system. Instead, *PC Transporter* actually has these devices physically built-in so that those capabilities are also present in the *PC Transporter* system. These are devices such as the Color Graphics Adapter, an MFM Floppy Disk Controller, and the PC-compatible Keyboard Interface. Devices equivalent to these simply do not exist in the Apple II world.

Details concerning the software and its use can be found in Chapter Five - *PC Transporter Software*.

---

### The Technical Details

For those of you who are more technically minded and want to know what hardware is actually on the *PC Transporter* interface card: *PC Transporter* consists of:

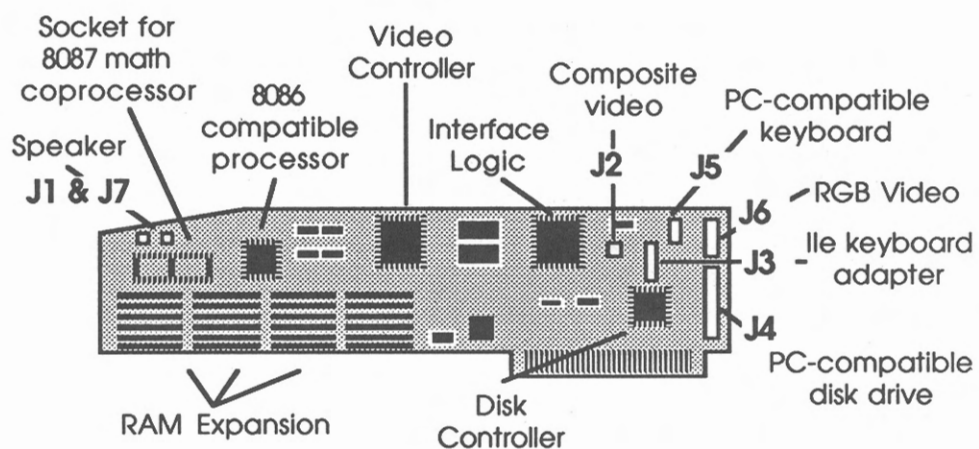

- ❑ a V-30- 8086 compatible microprocessor

This processor has a true sixteen bit data bus and runs at 7.14 MHz.

- ❑ a socket for an 8087-2 math co-processor

This is an option that is required by some software packages and can often increase the performance of some other software packages for PC-compatibles. It performs various floating point math operations in hardware at speeds much greater than a software algorithm could achieve. After obtaining and plugging in this chip, you inform the system that it is present via the Control Panel Assign/Configure Devices sub-menu under the Configure Drivers menu.

- 
- ❖ **Caution: Be very careful to align the pins of the IC with the socket before applying any pressure to seat the chip. Even more important is to be certain that pin 1 of the IC corresponds to pin 1 of the socket. Pin 1 is at the top right corner of the socket when looking at the component side of the board with the edge connector fingers pointed down.**

- ❑ 768K bytes to 384K bytes of dual ported RAM

Depending on the configuration you purchased, this allows either 256K bytes to 640K bytes of RAM for applications. The dual ported nature of the RAM allows the Apple's processor to get to all the V30's memory.

- ❑ a CGA-compatible video controller

This custom controller was developed by the designers of *PC Transporter*. It is compatible with software that uses the IBM™ Color Graphics Adapter. It uses 16K bytes of static RAM as a display buffer and is capable of generating video as follows:

- 25 lines of 80 column text in 16 colors or 16 levels of grey
- 25 lines of 40 column text in 16 colors or 16 levels of grey
- 320 x 200 pixels (PELs or Picture ELeMents) of graphics in four colors or four levels of grey

- 640 x 200 pixels (PELs or Picture ELeMents) of graphics in two colors or two levels of grey

The color video is directly compatible with CGA compatible digital RGB monitors and can be used with Apple's analog RGB monitor for the IIGS when used with the ColorSwitch. The monochrome output produces only grey scale output that is compatible with NTSC monochrome video standards. The Apple Monitor II and Monitor /// are monitors capable of displaying this monochrome video. We do not recommend that an RF modulator be used with this output. The monochrome and color video outputs are available simultaneously.

- an MFM floppy disk controller

This controller is capable of reading and writing MFM disk formats with 3.5" 80 track DSDD drives (720K bytes capacity) and 5.25" 40 track DSDD drives (360K bytes capacity). It was developed by the designers of *PC Transporter* to emulate the NEC 765 disk controller that is common to most PC-compatibles.

- an 8254 timer circuit,

This timer has three timing channels, one generates timed interrupts to refresh the RAM on the board, one is used to generate waveforms to drive the speaker, and a third is used for general timing purposes such as providing a "time tick" for MS-DOS's real time clock.

Additionally, *PC Transporter* has a custom integrated circuit that generates all the timing required by the *PC Transporter* hardware, allows use of a PC-compatible keyboard with *PC Transporter*, and interfaces *PC Transporter* and its RAM to the rest of the Apple II.

---

# CHAPTER FIVE

---

## *PC Transporter Software*

---

### **Booting *PC Transporter***

There are several ways to boot *PC Transporter*.

#### **Booting *PC Transporter* with Your Apple**

##### **(Cold Boot)**

*PC Transporter* automatically starts if you simply boot your Apple with the *PC Transporter* system disk. To do so, do the following:

1. Place your *PC Transporter* boot disk (the AEPCT side of the 5.25" disk) in the Apple's disk drive.

Insert it in the currently-assigned default drive, or the drive from which the Apple normally boots.

2. Turn on your computer. If it is already on, hold down:



and press: 

This will reboot your Apple and automatically start *PC Transporter* running.

##### **(Warm Boot)**

From BASIC or ProDOS, enter `-startaepc` at the prompt or select `startaepc` from the menu if offered.

#### **Booting *PC Transporter* From the Control Panel (Warm Boot)**

If you find yourself in the Control Panel (as you probably are at this point in the installation process), you can boot *PC Transporter* from the Main menu (shown below). To do so,



1. **Choose Reboot and Run PC Transporter from the Main menu.**

```
Copyright Little Blue LTD, 198-  VERSION -- (Version Date)

PC Transporter Main Menu

1. Display Apple Keyboard Map
2. Configure Drivers
3. Exit From Control Panel-Run PC Transporter

4. Reboot and Run PC Transporter
5. Quit to ProDOS
```

❖ **Note:** Exit From Control Panel can sometimes be used. It performs one of two different functions depending on what you have done since you last rebooted your Apple. If this is the first time that you have run *PC Transporter* since you booted your Apple, the card is **booted**. On the other hand, if you were running MS-DOS when you entered the Control Panel, Exit From The Control Panel simply returns you to MS-DOS.

**What Happens Once You Boot *PC Transporter***

You will see a screen that looks something like this as *PC Transporter* runs some internal tests:

```
AE BIOS - MEMORY TEST: 200000-2FFFFFF
```

---

**AE Bios Memory Test**

The Memory Test that takes place during bootup quickly checks the amount of *PC Transporter* memory available. The numbers are displayed very briefly. If you are interested in their meaning, here it is:

<u>If the numeric display ends at:</u>	<u>You have this much memory installed on your <i>PC Transporter</i>:</u>
9FFFF	640K
7FFFF	512K
5FFFF	384K
3FFFF	256K

Once the tests are completed, *PC Transporter* will attempt to access floppy disk drive A: followed by the hard disk (if any) to find a *bootable* MS-DOS disk. A bootable MS-DOS disk is a diskette that has been initialized with the `FORMAT/S` command. This installs a copy of the required boot information.

If no bootable disk is found, the following error message is displayed:

```
DISK READ ERROR
```

If this happens, check the following:

- Is there a diskette in the default drive?
- Is the diskette inserted correctly?
- Is it a bootable diskette?
- Are all cables connected properly?
- Was your hard disk properly formatted with both the MS-DOS `FDISK` utility and the `FORMAT/S` command?

You can re-enter the Control Panel to check these items. See the previous section *How to Access the Control Panel* for help. Once you are satisfied that all is corrected, simply select `Reboot` and Run *PC Transporter* to try again.

If all goes well, you will see a light on the A: drive, and after a moment of disk activity as the operating system is loaded into *PC Transporter*, you will see a display like the one below:

```
Applclock Utility V__-Copyright 198- Little Blue Limited
Current date is -----
Current time is -----
Applied Engineering PC Transporter, on (date) at (time)
A: />
```

If you see a display like the one above, congratulations! *PC Transporter* is running.

To change the displayed time, follow the directions for changing your Apple Clock. *Transporter* is simply reading the Apple Clock and telling you its time in MS-DOS.



---

---

## Looking Into the Software

*PC Transporter's* complement of software consists of two parts: the Control Panel and the Portware™.

---

### The Portware

The Portware is the invisible part of *PC Transporter's* software; it controls the interactions between *PC Transporter* and the outside world. It's invisible because you never interact directly with it; you make changes to the Portware when you use the Control Panel.

The Portware works like a hardware switchboard. In traditional telephone exchanges, operators manually route calls from one caller to another. The Portware routes input and output between your actual Apple II peripherals and the locations where PC software expects to see parts of your system, such as the video display and your printer.

The Control Panel's menus allow you to install and remove *device drivers* in the Portware file. Device drivers are the control programs for the devices that you can use with *PC Transporter*. For example, *PC Transporter* has a device driver file containing the specifications and information it needs to communicate with Apple's Super Serial Card. Once you install this device driver into the Portware file, *PC Transporter* can use the Super Serial Card as a PC-compatible would use a standard Serial port.

Because of the large number of Apple- and PC-compatible devices in the marketplace, the loadable device driver approach was used to keep the size of the Portware file to a minimum. If the Portware file had all of the available drivers built into it, it would not fit into your Apple's memory. Allowing you to selectively load just those drivers that you need keeps the size of the Portware file manageable, while still providing the flexibility to let your system grow.

You do not need to understand the inner workings of the Portware file; *PC Transporter* and the Control Panel manage it for you.

---

## The Control Panel

By this time, you have already used the Control Panel for one thing or another. This section tells you more about what you can do with the control panel and how you can do it. It proves itself very useful and, after a time, you'll see that it's not difficult to use.

The Control Panel is the visible part of *PC Transporter's* software; it gives you access to all of the configuration commands that you can use to properly set up your system. It is available to you whenever you need it, even while an MS-DOS application is running (see below).

You use the Control Panel to:

- Adjust hardware settings, including printer and printer interface, communications equipment, and a math co-processor chip
  - Configure floppy disk drive(s)
  - Map Apple peripheral cards as *PC Transporter* ports.
  - Install an Apple-compatible hard disk file for use under MS-DOS
- ❖ *Note:* Just in case you're interested, the Portware and the Control Panel are actually part of the same ProDOS file (named `AEPC.SYSTEM`).

---

### Accessing the Control Panel--

If you do not specify otherwise, *PC Transporter* boots straight into MS-DOS when you boot with the *PC Transporter* system disk or run the `AEPC.SYSTEM` application. To work on your system configuration, you must access the Control Panel.

#### --From ProDOS

To start the Control Panel without booting straight into MS-DOS (from ProDOS):

1. Place your *PC Transporter* boot disk (the AEPCT side of the 5.25" disks) in the Apple's boot drive.

Insert it in the currently-assigned default drive, or the drive from which the Apple normally boots.

2. Hold down:  and   
and press: 

This will reboot your Apple and automatically start *PC Transporter* running. Turning off and on the power to your Apple will accomplish the same thing but is harder on the power switch.

3. Press the **spacebar** once and no other key.  
After a moment or two the Control Panel's main menu appears.

*PC Transporter's* main menu is displayed below.

```
Copyright Little Blue LTD, 198-  VERSION -- (Version Date)

PC Transporter Main Menu

1. Display Apple Keyboard Map
2. Configure Drivers
3. Exit From Control Panel-Run PC Transporter

4. Reboot and Run PC Transporter
5. Quit to ProDOS
```

- ❖ *Note:* The Control Panel is *not* available when you are in ProDOS running other applications.

#### --From MS-DOS

You can access the Control Panel at any time while *PC Transporter* is running. You can use it to correct a hardware problem, or just view the keyboard translation map for your Apple's keyboard.


To access the Control Panel while using *PC Transporter*:

Hold down  and press  *twice* (  -  ,  )






This works on both the Apple's keyboard (if it is available to *PC Transporter* ) and a PC-compatible keyboard (if you have one).


---


## Using the Control Panel


- ❖ *Terminology note:* This section uses two terms to describe actions in Control Panel menus: *select* and *choose*. Select means highlighting something or pointing to it, such as moving a highlighted bar to a menu item. Choose implies actually executing a command, such as pressing  after selecting an item.

The Control Panel has a series of menus that allow you to control the various aspects of running *PC Transporter*. Its menus operate in a standard manner. Here are some keystrokes used in all of the Control Panel menus:

-  Move the highlighted bar to the menu command above the currently-selected one.
-  Move the highlighted bar to the menu command below the currently-selected one.
-  Choose (execute) the currently-selected menu command.
-  Type the number of a menu command to move the highlighted bar to that item.
-  Return to the previous menu or cancel a command choice.

The Control Panel menus are "tree" structured. The main menu (the "trunk") has many "branches" or paths that you can follow. If you press , the Control Panel displays the previous command. For example, the following tree shows some of *PC Transporter's* menus and their relationship.

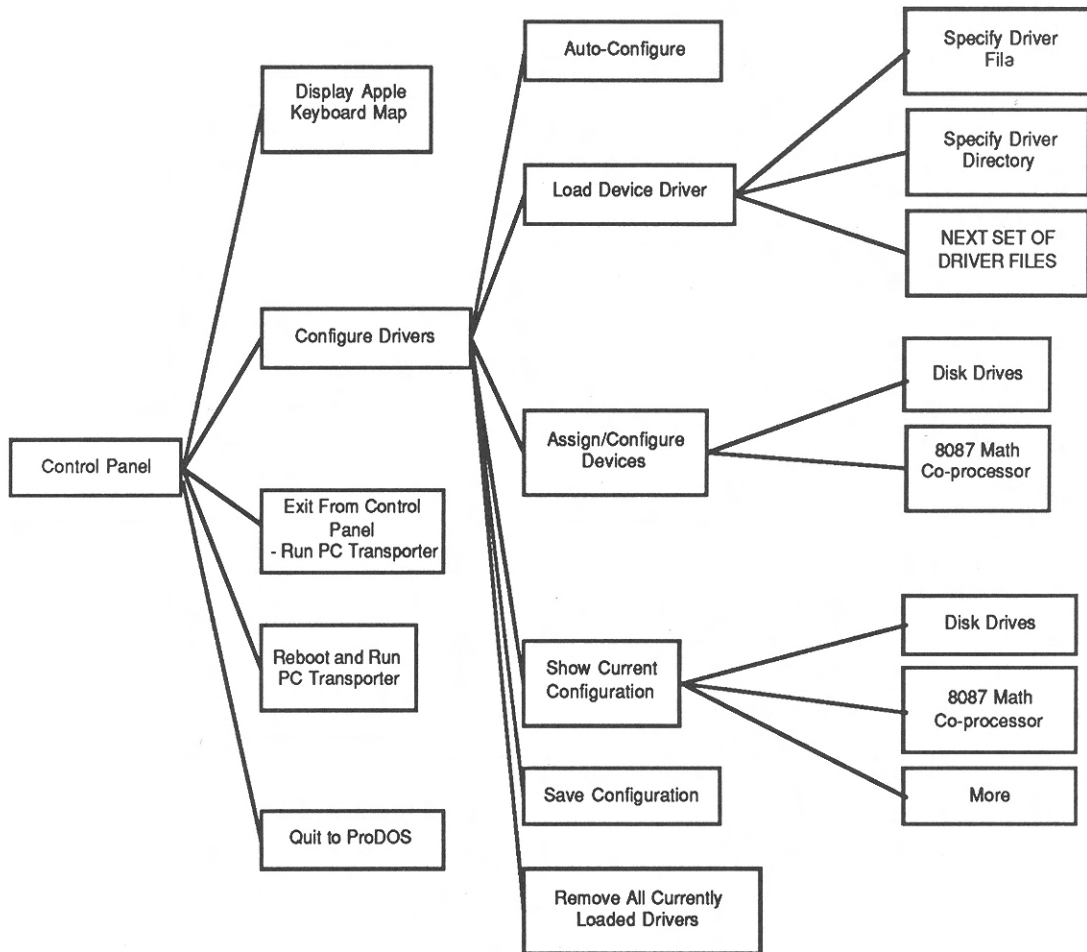

Using the above diagram as a guide, if the Assign/Configure Devices menu is displayed on the screen, pressing  will display the Configure Devices menu. This is what is meant by moving to the previous menu.



## Main Menu

```
Copyright Little Blue LTD, 198-  VERSION -- (Version Date)

PC Transporter Main Menu

1. Display Apple Keyboard Map
2. Configure Drivers
3. Exit From Control Panel-Run PC Transporter

4. Reboot and Run PC Transporter
5. Quit to ProDOS
```

This is the first menu you will see upon accessing the Control Panel. The commands in this menu are listed below.

### 1. Display Apple Keyboard Map

This is *PC Transporter's* Online Help. It displays a list of the keyboard translations for common PC software key combinations and their Apple equivalents.

If you are using a PC-compatible keyboard you won't need to use this.

If you are using the IIGS or //e keyboard, *PC Transporter* will know which one you are using and display the appropriate map.

The actual maps are given in Chapter Seven - *Keyboard Reference*.

### 2. Configure Drivers

Allows you to operate on the Portware file. This is the file that contains the device drivers and configuration information.

This menu item displays the Configure Drivers menu (following).

### 3. Exit From Control Panel-Run PC Transporter

Performs one of two different functions depending on how you got into the Control Panel.

- ❑ If you entered the Control Panel from ProDOS by pressing the spacebar when running the AEPC.SYSTEM program, *PC Transporter* is rebooted as if you had turned the power off and then back on again.
- ❑ If you were running MS-DOS or a PC application when you entered the Control Panel, you return to *PC Transporter* without disrupting your work in the PC application that is currently active.

If you enter the Control Panel while running *PC Transporter* and do not want to disrupt work that is in progress, use this command.

- 
- ❖ **Important:** If you have made any changes to any configuration, it is best that you *not* use this option to return to MS-DOS because the system will be in an inconsistent state. Changing things like this with the Control Panel is the equivalent of pulling a disk drive out of a PC-compatible while it is running a program! The best thing to do is avoid making these changes until you have quit your MS-DOS program. Then make your changes in the Control Panel. Once you are done, choose `Reboot` and `Run PC Transporter` to make sure that MS-DOS knows about the changes that you have made.

#### 4. Reboot and Run PC Transporter

Reboots *PC Transporter* and runs the AEPC.SYSTEM program.

- ❖ **Warning:** Use this command with caution--it clears *PC Transporter's* memory and restarts MS-DOS. If you are using a PC program and you have work that is not saved, you will *lose* this work.

This command is equivalent to the Control-Alt-Delete key sequence while running *PC Transporter* or a PC-compatible.

#### 5. Quit to ProDOS

Turns off *PC Transporter* and returns to ProDOS. The same warnings apply here as with `Reboot` and `Run PC Transporter`. When you return to *PC Transporter*, its memory has been cleared and it must reboot from scratch. It effectively performs the same function as turning off the power!

- ❖ *Note:* You cannot run other ProDOS applications and *PC Transporter* at the same time.

---

## Configure Drivers Menu

### Configure Drivers

1. Auto-Configure
2. Load Device Driver
3. Assign/Configure Devices
4. Show Current Configuration
5. Save Configuration
6. Remove All Currently Loaded Drivers

The commands in this menu are listed below.

#### 1. Auto-Configure

The Control Panel searches through all of the Apple's slots and all of *PC Transporter's* connectors and determines (to the best of its ability) your current system configuration.

Once you have run this command, you should check menu item, Show Current Configuration, and see if the system was configured to your liking. If it was, use menu item, Save Configuration, to record this configuration to disk. You can then avoid using the Control Panel again until you change your system or want to experiment with reconfiguring part of your system.

If this commands doesn't completely configure your system, it will at least give you a start on the configuration process.

- ❖ *Note:* For many Apple II users, this is the only configuration command that you will need to use.

#### 2. Load Device Driver

Allows you to load a *device driver* into memory. These are the control programs that contain the information that *PC Transporter* needs to use Apple II peripherals with PC software.

This menu item displays the Load Device Driver menu (following).

### 3. Assign/Configure Devices

Similar to the Show Current Configuration menu above, but this menu allows you to change to your system configuration.

You can alter settings for your disk drives, math co-processor chip, and any device drivers which you have previously loaded with the Load Device Driver menu.

This menu item displays the Assign/Configure Devices menu (see below).

### 4. Show Current Configuration

Displays the list of currently-configured devices. This list is display-only; if you want to make changes to the configuration, use the Assign/Configure Devices menu below.

### 5. Save Configuration

Records the current system configuration on the diskette in the default ProDOS disk drive. The file that it writes to the disk is AEPC.CONFIG.

- ❖ *Note:* If you get a "Disk Full" error message it is because the *Transporter* can't find enough room on the disk to write the AEPC.CONFIG file. You'll need to make room for the file by deleting other unnecessary files on the disk.

The next time you start *PC Transporter* with this disk, the current system configuration becomes the default configuration. The system will not autoconfigure again unless you delete this file.

- ❖ *Warning:* Make sure that you have the correct diskette inserted in the default ProDOS disk drive.

### 6. Remove All Currently Loaded Drivers

This command clears all device drivers from the Control Panel's memory. You can use this command to experiment with different configurations or if you make a mistake while configuring your system.

This command is a temporary method of reconfiguring the drivers. It *does not* remove the device drivers from the AEPC.CONFIG file. If you want to do that, use Remove All Currently Loaded Drivers then save your current configuration with Save Configuration.

## Load Device Driver Menu

```
Load Device Driver

Driver Load Selection          Currently Loaded Drivers

F.  Specify Driver File       SSC: COM1 Handler
D.  Specify Driver Directory  ImageWriter II: Graphics

Current directory: /AEPC/AEPC.DRIVERS
1.  SSCCOM1
2.  PICLPT1
3.  SSCLPT1
4.  IW2EMUL

N.  NEXT SET OF DRIVER FILES
```

This menu allows you to access device driver files from the *PC Transporter* boot disk. A list of available files in the current default directory is shown, along with any drivers that are currently loaded.

Loading a file makes that driver available to the Control Panel. This means that the particular function of that driver is now activated. For example, the driver file SSCCOM1 is the Apple Super Serial Card COM1: for *PC Transporter*. It allows you to configure the Super Serial Card as the MS-DOS logical device COM1:. Once you load that file, the driver is activated and you can use it.

There are two mechanisms for loading a device driver: actually typing the filename or displaying a directory list and selecting a file from that list. These methods are described below:

 
```
D. Specify Driver Directory
```

To use this command:

1. Choose D. Specify Driver Directory

The Control Panel displays the following prompt:

```
Enter Directory Name: /AEPC/AEPC.DRIVERS_
```

2. Type the name of the directory, then press .

After you enter the directory name, the Control Panel attempts to automatically update the list of drivers with files in the directory you specified.

1. SSCOM1 (etc.)

The files that are listed in the menu can be loaded by typing the number preceding their name.

F. Specify Driver File

Use this command to load a file other than one listed. This command is similar to Specify Driver Directory. You are asked to type in a filename. The Control Panel looks for the file with the specified name, and if it is found and it contains a device driver, the driver is loaded into the menu.

---

## Assign/Configure Devices Menu

Assign/Configure Devices

1. Disk Drives
2. 8087 Math Co-Processor - Not Installed
3. SSC COM1 Handler
4. ImageWriter II/IBM Graphics printer
5. (etc. depending on number of drivers loaded)

Each of these menu items allows you to access configuration information for a loaded device driver, except for the first and second, which will always say *Disk Drives* and *8087 Math Co-Processor* respectively. The remaining configuration menus vary with the device that they are used to configure.

The disk drive configuration menu is discussed in the reference section *Disk Drive Reference*. The various configuration menus for Apple peripheral cards whose drivers are supplied with *PC Transporter* are discussed in Chapter Nine - *Printers and Other Hardware*.

2. 8087 Math Co-Processor - Not Installed

Selection of this item does not actually bring up another menu. Instead, the portion of the message - Not Installed changes to - Installed when you select it (and vice-versa). To use the Math Co-Processor (available from *Æ*), you must actually insert one into the large empty socket on the *PC Transporter* interface board and then tell *PC Transporter* that it is present by using this menu.

Some programs will automatically find and use the 8087 no matter if this setting is on or off.

---

### Show Current Configuration Menu

```
Show Current Configuration.      Page 1

Disk Drives

A> PC Transporter TransDrive 1 (5.25")
B> PC Transporter TransDrive 2 (5.25")
None
None
C> Hard Disk = /AEPC/MSDOSVOL (OFF)

8087 Math Co-processor - Not Installed

MORE - Press Space Bar.
```

This menu is display only. If you want to make changes to any of these items you will have to use the Assign/Configure Devices menu.

---

---

---

## **PC Transporter System & Utility Files**

The files that comprise the *PC Transporter* system are distributed on the single 3.5" diskette with the volume name, /AEPC and on two 5.25" disks with the volume names /AEPCT and /AEPC. The files that are necessary for the operation of *PC Transporter* are:

❑ **STARTUP**

This is a simple program selector that will let you choose to run *PC Transporter* or exit to BASIC or ProDOS. This program will run when you boot from the /AEPC disk or when you enter -startup at the BASIC prompt.

❑ **PC.TRANSPORTER**

This program turns off auto answer on the DataLink modem and then runs STARTAEPC. This prevents the phone from auto answering while the *PC Transporter* is in use. If a DataLink is installed and the slot is active, then a message is sent to the screen showing the DataLink slot and telling the user that auto answer is now off. Execution stops if any error occurs as a result of running PC.TRANSPORTER. If you erase this file from your copy of the Transporter disk, the boot process will continue from STARTAEPC.

❑ **STARTAEPC**

This is a small system file used to run the AEPC.SYSTEM from BASIC. Enter -startaepc at the prompt.

❑ **AEPC.SYSTEM**

This code-file is the bulk of the software that makes *PC Transporter* run. The Portware and Control Panel routines are contained within this file. It's a SYS type file and is capable of running at boot time as well as by quitting another application and specifying this pathname for the next application.

❑ **AEPCBIOS**

This is a binary data file that is loaded into *PC Transporter's* RAM by the AEPC.SYSTEM code right after *PC Transporter* is first started. It is the BIOS or Basic Input Output Services code executed by the 8086 compatible processor to carry out the I/O calls by MS-DOS.



AEPC.CONFIG

This binary data file is the configuration file that is created when you select Save Configuration from the Control Panel. *PC Transporter* uses this to set up the I/O and device drivers accordingly. If this file is not present in the directory that AEPC.SYSTEM is launched from, *PC Transporter* will Auto-Configure unless you stop it by pressing the space bar at startup time.

AEPC.DRIVERS

This is the default sub-directory that contains the device drivers for the various peripheral cards and built-in I/O devices that can function with *PC Transporter*. When loading device drivers, *PC Transporter* first looks in this directory. You are free to specify other directories for device drivers, however.

AEPCKEY.GS

This binary data file contains the screen image for the IIGS keyboard map that can be displayed from the Control Panel. When this file is present in the boot directory, you can display the map by selecting Display Apple Keyboard Map from the main menu. If you are using a GS, you can delete the file AEPCKEY.2E.

AEPCKEY.2E

Same as above but for the //e keyboard. If you're using a //e, you can delete the file AEPCKEY.GS.

MSDOSVOL

This special file, located on the 3.5" disk and on the 5.25" /AEPC disk, contains several MS-DOS files distributed for use with *PC Transporter*. This volume cannot be accessed under ProDOS. When you used the MOVETO command these files were placed in the subdirectory AEPC in the root directory of your MS-DOS boot disk.

These files are described in Appendix C - MS-DOS Utilities. For the latest information on files included in MSDOSVOL, enter TYPE READ.ME at the MS-DOS system prompt (e.g. A>TYPE READ.ME). This READ.ME file is different from the ProDOS READ.ME file on the 3.5" /AEPC disk and the 5.25" /AEPC.U disk.

To free up more space on your boot disk or hard disk, get rid of the files you don't use with the DEL command under MS-DOS. For example, if you don't have a ProDOS clock, you can DEL APLCLOCK.EXE. If you don't intend to transfer files between MS-DOS and ProDOS, DEL TRANSFER .EXE and TRANSFER.HLP. (See Chapter Six - *MS-DOS Reference* for DEL instructions.)

### **PC Transporter's ProDOS Utilities**

The *PC Transporter* ProDOS utilities are included on the 3.5" /AEPC disk and on the 5.25" /AEPC.U disk.

READ.ME

This is a TXT (standard text) file that can be loaded into most ProDOS word processors. Read this file now if you haven't already. It contains some information about any recent changes to the disks and documentation.

PCTRAM.SYSTEM

This program tests all the expansion memory on the *PC Transporter* for PCT's with ZIP chips and those with 256K x 4 chips. A graphics screen shows which chips are bad or not present.

GENLPT1

This program is a generic parallel printer driver. It can be used with some printer cards that do not conform to the Apple interface standards. This printer driver has to be manually installed from the /AEPC.U 5.25" disk or the 3.5" disk using the control panel. It will not work with Auto Install. If Auto Install attempts to install it, the system will crash. After you assign the GENLPT1 driver through the control panel, save it to a configuration file so that Auto Install will not be executed during the boot cycle.

ICONS

Copy the contents of this file into the ICONS directory (folder) within the root directory of your boot disk. This will replace "plain vanilla" icons with icons that have been described by many as "super cool" and by others as "interesting."

PCINSTALL

Installs device drivers located in the AEPC.DISKS file into any ProDOS file. The device drivers are those routines that permit ProDOS and applications running under ProDOS to talk to the disk drives and RAMDisk on *PC Transporter*.

PCINSTALL actually prefixes the ProDOS file with the device drivers as a pre-boot so that the drivers are loaded before ProDOS is and are then available to ProDOS. The program allows you to modify any ProDOS file in this way. The program is menu driven and its operation is explained below.

---

### ***Loading Device Drivers with PCINSTALL***

Follow these steps to install the drivers included in the AEPC.DISKS file onto your ProDOS disk:

- ❖ *Note:* ProDOS must be unlocked for PCINSTALL to function properly. Use *System Utilities* to make sure that the ProDOS file is unlocked.
- 1. Run PCINSTALL, from the BASIC prompt (|), enter -PCINSTALL.
- 2. Press P when the PCINSTALL menu is on the screen, then enter the pathname of the ProDOS disk you want to modify (e.g. /JOHNS.DISK/PRODOS).
- ❖ *Note:* Make this modification to the file called, "ProDOS," not the "P8" or "P16" files.
- 3. Press D to set the pathname of the disk containing the drivers (e.g. /AEPC/AEPC.DISKS is the name of the drivers file included with *PC Transporter*).
- 4. Press A to Add drivers to your ProDOS disk.
- 5. Press W to Write the drivers to the ProDOS file and replace the original ProDOS with the modified ProDOS.
- 6. Press Q to Quit the INSTALL program.
- ❖ *Note:* If you notice a file on your modified disk called, "PRODOT" after running PCINSTALL, then your ProDOS file (PRODOS) was locked. PRODOT is the actual modified PRODOS file. You need to delete the PRODOS file, and rename the PRODOT file PRODOS.

The drivers are now added to your ProDOS disk.

To remove the drivers from the ProDOS file, you must copy an unmodified ProDOS file to that diskette using the ProDOS *System Utilities* or other copy program. This will replace the ProDOS that was modified to include the drivers.

# CHAPTER SIX

---

## ***MS-DOS Reference***

Once you find yourself in MS-DOS, things may seem a little strange. Don't worry; MS-DOS is somewhat similar to ProDOS and BASIC in its operation.

*MS-DOS Reference* is a very brief introduction to MS-DOS. It supplies you with the basics you'll need to get started with MS-DOS including instructions on how to format disks, copy files, run a program, and more. If you are an experienced MS-DOS user, you may be able to skip it. If you're not an experienced MS-DOS user, you will need an additional reference. There are many excellent sources of tutorial material, including the MS-DOS manuals themselves. We strongly recommend, *Mastering DOS* by Judd Robins. See the Bibliography in the *Appendices* for a list of other MS-DOS references.

---

 
### **An Important Note About BASIC**

IBM's BASIC language included with PC-DOS (BASIC and BASICA) is *not compatible* with *PC Transporter* (or any IBM work-alikes). If you want to use BASIC for programs that you have, you must purchase one of the brands of MS-DOS *other* than IBM's. MS-DOS includes a generic BASIC (GWBASIC) which is compatible with *PC Transporter*. For programs that autoload BASIC, it is possible to rename `GWBASIC.COM` to `BASICA.EXE`.

---


---

## An Introduction to MS-DOS

MS-DOS commands are entered line by line on your display. There is no online help and there are no menus, but MS-DOS commands are not difficult to remember. This section describes a few common MS-DOS commands and their use. Like in most languages, a command is typed in and is carried out by the system only after you press the  key.

---

## The Command-Line Prompt

MS-DOS commands are accepted only when the system is looking for commands. The software displays the current "prompt" when it's waiting for or requesting commands to be entered. This prompt starts off as a letter followed by a greater-than sign (">"). A typical prompt is A>. The A denotes the default drive is currently selected. MS-DOS will attempt to find any commands, programs, and files in the directory on that drive. This can be changed to any drive that is present in the system by typing the letter associated with that drive, followed by a colon (":") and then a . As an example, in order to change the default drive to drive C, you type the following:

C: 

---

## MS-DOS Disks and Filenames

Disks in a MS-DOS system are named with letters, starting with A. A disk drive name is always followed by a colon (":"). For example, to refer to the first disk drive, you would type

A:

The rules for MS-DOS filenames are:

- A filename is divided into two portions: a *name* and an *extension*
- MS-DOS only recognizes the first *eight* letters of the name; any extras are ignored
- An extension is optional; if supplied, only the first *three* characters are recognized
- An extension is separated from a name by a period (" . ")
- All lower-case characters are converted to uppercase

- ❑ Filenames can contain any alphanumeric characters *except* :  
\* . ? | \ [space] (Control characters)

For example, the following are legal MS-DOS filenames with extensions:

```
ABCDEF.TXT  
123.WKS  
MY_DOG.RUF  
MY_CAT.R-2
```

The following are *not* legal MS-DOS filenames:

```
ABCD*.TXT      ( * is not a legal character in a filename )  
123 WKS       ( space is not allowed in a filename )  
MY_DOG_WILLARD ( too many characters )
```

- ❖ *Note:* Actually, MS-DOS *will accept* the last filename. However, if you use this name, it will be saved on the disk as MY\_DOG\_W because MS-DOS only uses the first *eight* letters of a filename.

To specify a file on a particular disk drive, type the disk drive name before the filename. For example, to use the file ABCDEF.TXT on the A: disk drive, type

```
A:ABCDEF.TXT
```

---

### Displaying a List of Files

At the MS-DOS prompt, to see a list of files on a disk drive type:


```
DIR 
```

This displays the files on the default disk drive.

With DIR you can also...

- ❑ Specify a disk other than the one in the default drive.

For example, the following command displays a directory of the files on the disk in drive B:

```
DIR B: 
```

- ❑ Change Directories with the command CHDIR or CD. CD\ will return you to the previous directory. CD\ followed by a subdirectory name will move you to that subdirectory.
- ❑ Use a *wildcard* character expression to specify a related group of files.

A wildcard is a character which represents any other character or characters. For example, the following command displays a directory of the files on the default drive with the extension .COM

```
DIR *.COM 
```

The wild card character "\*" represents either a filename or an extension. So the command, "\*.\*" means "all names, all extensions."

---

### Running a Program

To execute (run) a PC program, enter the filename of the program at the prompt. The file's extension is not required. For example, to run the program in the file 123.EXE, type

```
123 
```

Executable machine-language programs are contained in disk files with an extension of .COM, .EXE, or .BAT. If you do not list an extension, MS-DOS will automatically look for one of these three extensions in the priority: .BAT, .EXE, .COM.

The batch files (.BAT) execute a list of MS-DOS commands which you can create. The .BAT files are described later in this chapter.

 
---

### Copying a File

To copy a file from one diskette to another, use the COPY command. COPY requires two *arguments*: the source file, and the destination file. If the filename is to remain the same (as it normally will), the destination can be simply the destination file's disk drive name. The syntax for COPY is:

```
COPY SOURCE.FIL DEST.FIL
```

For example, to copy the file A:ABCD.TXT to the B: drive, type

```
COPY A:ABCD.TXT B: 
```

If you want to copy to the prompt drive (Ex: C>), you don't need to enter in that drive (C: in this case).

If you want to copy all files from A: to B:, use the command,  
COPY A:\*. \*B:.

---

### Deleting a File

To delete a file, you must be in that file's directory. So, if you are in the root directory of A: and you want to delete a file from the AEPC subdirectory, you would need to change directories first. At the A:\> prompt, enter:

```
CD AEPC
```

This will give you the prompt:

```
A:\AEPC>
```

Now use the command DEL followed by the name of the file you wish to delete. For example:

```
A:\AEPC>DEL TRANSFER.EXE
```

When you do a DIR of that file, the file you deleted will be gone.

---





---

---

## Creating an MS-DOS System Disk

When you start *PC Transporter*, it looks for a *bootable disk* in the default *PC-Transporter* drive (assigned with the Control Panel).

A bootable disk is a disk that contains three files, two of which are invisible. The one visible file is called `COMMAND.COM`. You could copy this file using normal MS-DOS command (`COPY`), but the other two files will be left behind by `COPY`. Because the other two files are invisible (and because MS-DOS requires that they physically reside on a specific area of a disk) they must be copied onto a disk using one of two special programs.

To create a bootable MS-DOS system disk, you must use your original MS-DOS disk, or a copy of that disk that contains the system files and at least one of the following programs: `SYS.COM` or `FORMAT.COM`.

There are three ways to create a bootable system disk:

- 1) Transfer the system files onto a freshly-formatted diskette.
- 2) Re-format an existing diskette with a special parameter to the `FORMAT` command.
- 3) Use the `DISKCOPY` command to copy the MS-DOS system disk.

MS-DOS requires a freshly-formatted diskette because of its strict rules for placement of the system files. If other files are occupying any of the space reserved for the system files, the disk cannot be used as a system disk, and must be re-formatted.

---

## Transferring the System Files


To transfer the system files onto a diskette, use the `SYS` command.

- ❖ If you have **one disk drive**, place your MS-DOS disk (or a copy of it) into the default drive, and type:

SYS 

MS-DOS prompts you to remove the original disk and replace it with the new disk.

- ⇒ If you have **two disk drives**, you can place the MS-DOS disk in one (for example, A:) and the new diskette in the other (for example, B:) and type:


A:SYS B: 

---

### Formatting a Disk


To re-format an existing diskette, use the `FORMAT` command.

- ⇒ If you have one disk drive, place your MS-DOS disk (or a copy of it) into the drive, and type:

`FORMAT/S/V` 

MS-DOS prompts you to remove the original disk and replace it with the new disk. `/S` tells MS-DOS to transfer the system files onto the diskette after it is formatted. `/V` allows you to name the volume.

- ⇒ If you have two disk drives, place your MS-DOS disk (or a copy of it) into drive one, and your new disk in drive 2 then type:

`FORMAT B:/S/V` 

B: tells MS-DOS to go to drive B:. If you are formatting a hard disk, use C: (or the correct drive letter for your hard drive). `/S` tells MS-DOS to transfer the system files onto the diskette after it is formatted. `/V` allows you to name the volume.

### Special 3.5" Notes

Versions of MS-DOS earlier than 3.2 will not format all 720K of the 3.5 disks. In fact, some 3.2 versions will not format all 720K of the 3.5 disks. If you notice that MS-DOS is only formatting 3.5 disks up to 360K, check the version number of your MS-DOS system disk.

If it is a version earlier than 3.2, you will need to get 3.2, or, even better, 3.3.

If it is in fact version 3.2, you can add the following line to the `CONFIG.SYS` file to make it format properly.

```
DEVICE = DRIVER.SYS /D:n
```

"n" is the number (not the letter) of the physical drive that you want to use for the 720K disks; drive A: is 0, drive B: is 1, etc.

D: is the position of the "logical drive" set up by MS-DOS for formatting purposes only. The actual letter you use should be the letter following the letter of your last physical drive. So, if you already have a drive set up as D: in your Drive Configuration, the logical drive should be E:. If you have a hard disk set up as E:, the logical drive will be F:.

---

### **Configuring an MS-DOS System Disk**

*PC Transporter* requires no special considerations to be able to run MS-DOS. You can follow the instructions in your *MS-DOS User's Guide* for configuring or customizing an MS-DOS system disk.

---



---

---

## More Advanced MS-DOS

MS-DOS is somewhat similar to ProDOS, at least in theory. However, there are some differences in conventions and *syntax* (command grammar) between the two operating systems. If you are unfamiliar with the rules and regulations of MS-DOS, read this section (or the User's Guide supplied with your copy of MS-DOS) before using *PC Transporter*.

This section briefly discusses batch files and the `CONFIG.SYS` file. Each of these can be used alone, or in combination with the other, to customize your MS-DOS boot disks.

- ❖ *Note:* This is only a brief discussion of some of the advanced features of MS-DOS. For more comprehensive information regarding these (and other) MS-DOS commands, consult your *MS-DOS User's Guide*.

---

### Batch Files

ProDOS's EXEC file capability is available in MS-DOS's `.BAT`, or *batch* files.

A batch file is an *ASCII* (plain text) file that contains a list of MS-DOS commands. Like ProDOS, MS-DOS executes these commands when you type the name of the `.BAT` file containing them. But MS-DOS goes one step farther than ProDOS; it contains a simple language for use with these batch files. For example, you can interpret parameters entered on the command line to a batch file.

You can save the following commands into a batch file; they copy a series of files from one place to another, then delete the originals. Use any ASCII editor, such as EDLIN or SideKick's Notepad.

```
COPY %1 %2
ERASE %1
```

Once you have saved this file to the disk, you can use it by entering its filename at the MS-DOS prompt.

This batch file requires two arguments: a *from* file or files and a *to* file or files. The following example copies all files with the extension `.TXT` from the disk in drive `A:` to the disk in drive `B:`, then erases all files with the extension `.TXT` from the disk in drive `A:` (this example assumes you named your batch file `MOVE.BAT`).

```
MOVE A:*.TXT B:
```

- ❖ *Note:* You may want to examine the `AUTOEXEC.BAT` file included on *PC Transporter's* disk as an example of a `.BAT` file.

### **AUTOEXEC.BAT**

MS-DOS automatically executes the batch file `AUTOEXEC.BAT` (if it is present on the MS-DOS boot disk) when you start *PC Transporter*. Typically, you place commands in `AUTOEXEC.BAT` that set up your system to your personal tastes.

For example, you could use an ASCII editor to save the following commands in a file named `AUTOEXEC.BAT`:

```
DATE  
TIME  
DIR A:
```

The first two lines request the date and time from the user for setting the system clock that MS-DOS maintains on *PC Transporter*.

The last line tells MS-DOS to show a list of files that are in the directory found on disk drive `A`. The list is displayed on your screen. After this list, the batch file stops running and the normal system prompt is displayed so that you can enter additional MS-DOS commands.

---

## CONFIG.SYS

When MS-DOS starts running on *PC Transporter* (or on any PC-compatible), it looks for a few special files. Already mentioned were the three system files and `AUTOEXEC.BAT`. There is one last file that MS-DOS looks for: `CONFIG.SYS`.

The actual order of execution is as follows:

1. MS-DOS system files and `COMMAND.COM`, the command interpreter
2. `CONFIG.SYS`
3. `AUTOEXEC.BAT`

`CONFIG.SYS` is similar to `AUTOEXEC.BAT` in a couple of ways. First, it's a text file that you create with an ASCII text editor. Second, it contains lines of commands that you want the operating system to execute. However, unlike `AUTOEXEC.BAT`, you cannot execute `CONFIG.SYS` directly from the keyboard; it can be executed only at boot-up time by MS-DOS. These commands are generally calls to MS-DOS *device drivers*. These are similar to the device drivers that the Control Panel installs into the Apple II's RAM before it boots *PC Transporter*.

A typical `CONFIG.SYS` file could contain the following commands:

```
BUFFERS = 20
FILES = 15
DEVICE = VDISK.SYS
DEVICE = ANSI.SYS
```

None of these are programs that can be run from MS-DOS, but each works like a program. Their functions are as follows:

```
BUFFERS = 20
```

Allocates extra RAM for speeding disk operations. This can increase the speed of some disk-intensive operations such as sorting a database. However, it subtracts from the amount of RAM available for applications, so use this with caution.

20 buffers is a safe number, and causes a measurable increase in disk performance without significant impact on the amount of available RAM. Each disk buffer requires 512 bytes of RAM. The 20 buffers therefore take up only 10K of *PC Transporter* RAM.



```
FILES = 15
```

Allows MS-DOS to have up to 15 files open at a time. Useful with some database programs, as well as programming languages and other specialized software. If you have a program that requires more than the standard number of open files, this is the way to increase that number. Consult your software's documentation for more information.

```
DEVICE = VDISK.SYS
```

Installs a device driver called `VDISK.SYS`. `VDISK` is a RAM disk which gets assigned the next available drive letter. For example, if you have 2 disk drives (named `A:` and `B:`) the RAMDisk is given the name `C:`. `VDISK` is supplied with later versions of MS-DOS. Generally speaking, device drivers with a file extension of `.SYS` can be installed with `CONFIG.SYS` using this method.

```
DEVICE = ANSI.SYS
```

Lets MS-DOS use the color capability of color monitors. This is one of the commands included in the `CONFIG.SYS` file of the *Transporter's* distribution disk.



## Editing CONFIG.SYS

To edit the CONFIG.SYS file use any ASCII editor, such as EDLIN or SideKick's Notepad.

Another way to edit the CONFIG.SYS file, although risky, is to use the COPY CON command as described below.

❖ *Note:* You may find this method faster than loading up a line editor but it does have its drawbacks. For example, if you enter in an incorrect line you will have to start again from step 2.

1. First, enter the command, TYPE CONFIG.SYS

This will display the contents of the CONFIG.SYS file. You will need to make a hardcopy of the contents by doing a screendump to your printer ( -  -s) or make sure it remains on the screen so you can copy it to the new CONFIG.SYS file you will create.

2. Now enter the command, COPY CON CONFIG.SYS

You're now in the editing mode. Anytime you hit return, the contents of that line is written to the file. That's why it is extremely important to check your entries before pressing return.

3. Enter in the contents of the original CONFIG.SYS file you have TYPED to the screen adding the desired changes as you go.

For example:

If you are modifying MS-DOS 3.2 to format 3.5 disks to 720K, you would add the line, DEVICE = DRIVER.SYS /D:n. (Refer to the section, "Formatting a Disk," above.

If you are using the MOUSE.SYS or MSMOUSE.SYS driver, you would add the line, DEVICE = MSMOUSE.SYS. (Refer to the section, "Mouse" in Chapter Nine, *Printers and Other Hardware*.)

4. Exit the edit mode by typing  -z followed by .
-



---

---

## Configuring MS-DOS Application Software

Most PC application programs have detailed instructions that tell you how to use them. Although these instructions were not originally intended for use with *PC Transporter*, you can use them if you follow the guidelines below.

Your *PC Transporter* card contains from 384K to 768K of installed RAM, depending on how many banks on the interface card are filled. This translates into 256K to 640K of user RAM (128K is reserved for use by *PC Transporter* itself under all memory configurations). *PC Transporter* will automatically recognize the amount of RAM installed on your card. It will then make that memory available for your programs to use.

PC and compatible users often find themselves in situations where they run out of RAM while running an application. For instance, a program wants to store the information you have entered but all the memory is busy holding other data. Unless the application specifically checks the amount of RAM left, this usually causes the system to "crash" or "hang" which usually means that you lose all the data you have entered. Since *PC Transporter* is truly a PC-compatible system, it is subject to these problems as well. Examples of when this problem could occur are:

- trying to fill a spreadsheet with too many cells
- creating a word processing document that is too large
- using too many memory hungry programs at once.

*PC Transporter's* RAM can be diminished quickly by memory hungry RAM resident programs. MS-DOS itself resides in RAM, using up as much as 50K for its system software. The following also use a great deal of RAM:

- a memory-resident utility (such as SideKick™ or Ready!™)
- a RAMDisk
- a RAM print spooler
- an MS-DOS enhancement (such as Microsoft Windows™)

Each of these subtracts a specific amount of memory from the amount of user RAM. For example, allocating a 360K RAMDisk will instantly reduce the amount of available RAM in a 640K system to less than 280K. Some memory-hungry resident utilities can subtract as much as 100K apiece.

Be careful when running combinations of memory-resident utilities. For example, the useful (but gluttonous) combination of *SideKick*, *Ready!*, and *Turbo Lightning* can leave your 640K system with as little as 300K of RAM left over. That may not be enough memory to run some of today's more memory-intensive applications; some programs require as much as 512K of memory at their lowest setting.

You may find many memory resident utilities very helpful, but they can cause problems if used incorrectly. Be sure to follow the manufacturers' recommendations for the utilities.

---

# CHAPTER SEVEN

---

---

## *Keyboard Reference*

---

---

### **Keyboard Differences**

One of the significant differences between an Apple and an IBM Compatible system is actually the difference in *keyboards* .

If you have purchased a PC-compatible keyboard for *PC Transporter*, you can ignore the following section because you can use that keyboard just like any PC-compatible does by following the directions for the software which you use. Just read the notes called *Using a PC-Compatible Keyboard*.

If you have an Apple //e or IIGS you have the option of using special circuitry on-board *PC Transporter* to emulate those computers' keyboards. If you choose to do this you must read the appropriate section below; either *//e-PC keyboard emulation* or *IIGS -PC keyboard emulation*.



The Apple II Plus requires a PC-compatible keyboard to use *PC Transporter* because it lacks a sufficient number of keys to emulate a PC keyboard.






### **Using a PC-Compatible Keyboard**

If you are using a PC-compatible keyboard, take note of the following:

- ❑ The PC-compatible keyboard connected to *PC Transporter* operates as described in instructions for PC software.
- ❑ The Apple's keyboard is still active, but it is easier to use the PC-compatible keyboard with PC programs.
- ❑ The PC-compatible keyboard *is not useable* with your Apple programs.

---

## PC Keyboard Emulation

Even though an Apple keyboard lacks many of the PC keyboard's special keys, *PC Transporter* is able to use the Apple keyboard for PC software. Many of the keys on a PC keyboard are simulated through combinations of Apple keys. For example, if a PC program requires you to press the  key, use   on the Apple's keyboard. ( =  on the IIGS.) The PC software will not know the difference, and you can spare yourself the expense of a PC-compatible keyboard.



















 
 







Compared to the //e, the Apple IIGS's keyboard and keypad is much closer in layout to a PC-compatible keyboard. Because of this, the translation of Apple keystrokes to PC keystrokes is much simpler. On this keyboard, the keypad keys map directly to the PC-compatible's keypad keys.



 The newest Apple //e's have a keypad as well. The keys on this keypad are indistinguishable from the equivalent ones toward the top of the keyboard and so *PC Transporter* can't emulate a PC-compatible's keypad with these keys.

### Keys that Are the Same on the Keyboards

Most of the keys used in regular typing are the same on both keyboards. These are listed below. The keys that are *not* listed below are either covered in the following section or can be found in Chapter Seven - *Keyboard Reference*.












- ❑  to 
- ❑  to 
- ❑           
- ❑  
- ❑ The PC's  and the Apple's 
- ❑ The PC's  and the Apple's 
- ❑ The PC's  and the Apple's 
- ❑ The PC's  and the Apple's 
- ❑ Directional arrows on the Apple keyboard and the PC's directional arrows (on its numeric keypad)

## IIGS

 The PC-compatible keyboard's numeric keypad keys are also mapped directly to the IIGS's keypad according to their position on each keypad. The keyboard map can be found in Chapter Seven - *Keyboard Reference*.

### Keys that Are Different




The following list is not complete; for simple use of MS-DOS and most applications, these are the major keys that you will use. There are additionally many special key combinations that PC software uses.

- ❑ For the PC's , use the Apple's .
- ❑ For the PC's , use the Apple's .
- ❑ For the PC's  through , use the Apple's  through .
- ❑ For the PC's , use the Apple's  .

### Translation Table for PC Keys








In the table following, the leftmost column contains a PC keyboard key, and the right column contains one or more Apple II keys either alone or in combination.



In the example below, the key combination   on an Apple II keyboard generates the PC keyboard's  keystroke.







Many keystrokes can be generated with more than one Apple key combination. Use whichever is most convenient; they are equivalent. In the example below, any of the key combinations:







































































  or   or   on an Apple II keyboard to generate the PC keyboard's  keystroke.






The rationale behind the preferred keystroke(s) being listed first is its convenience based on the layout of the Apple II's keyboard.

**PC key      Apple keystroke(s)**

            (Or, if the state of the Caps Lock doesn't match the Apple's key, press   to toggle) \*

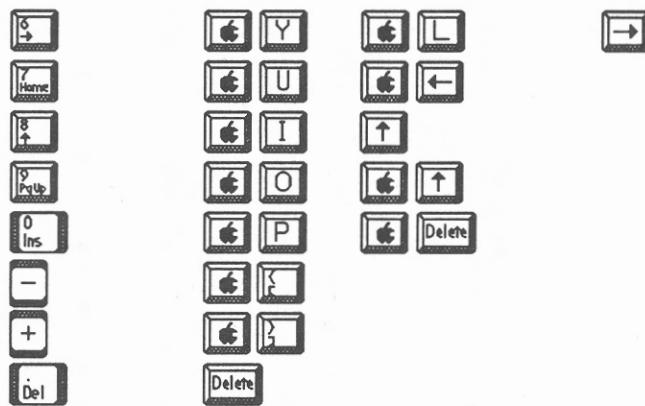 (left)	 	selects L-Shift code for subsequent Shifts
 (right)	 	selects R-Shift code for subsequent Shifts
 (both)	 	selects both Shifts for next Shift **
		
		
	 (left arrow)	
 	   (//e or IIGS)   - on keypad (IIGS only)	
	 	
	 	
 to 	  to  	
	 	
	     	
 	    	
 	     	
 	   	
	   	




- \* Some programs display a the current state of the Caps Lock key with a visual indicator. These programs sometimes get confused when *PC Transporter* is running. For example, you can turn on the Caps Lock on either the PC-compatible keyboard or the Apple keyboard while the Control Panel is displayed, and the PC program may not know that this has happened. Use this key combination to resolve this situation.
- \*\* Some software, notably SideKick, recognizes both  keys pressed simultaneously as a valid combination. Use this key combination to generate that key combination.
- ❖ Remember that there are two keyboards alive while you are using *PC Transporter*. If you turn on the  on one keyboard and then continue typing on the other keyboard, you might not remember why you are getting only upper-case characters when you are trying to type lower case and vice-versa.


Complete maps of the keyboards for the Apple //e and Apple IIGS are shown on the following pages.



Common  
Keys



Keys

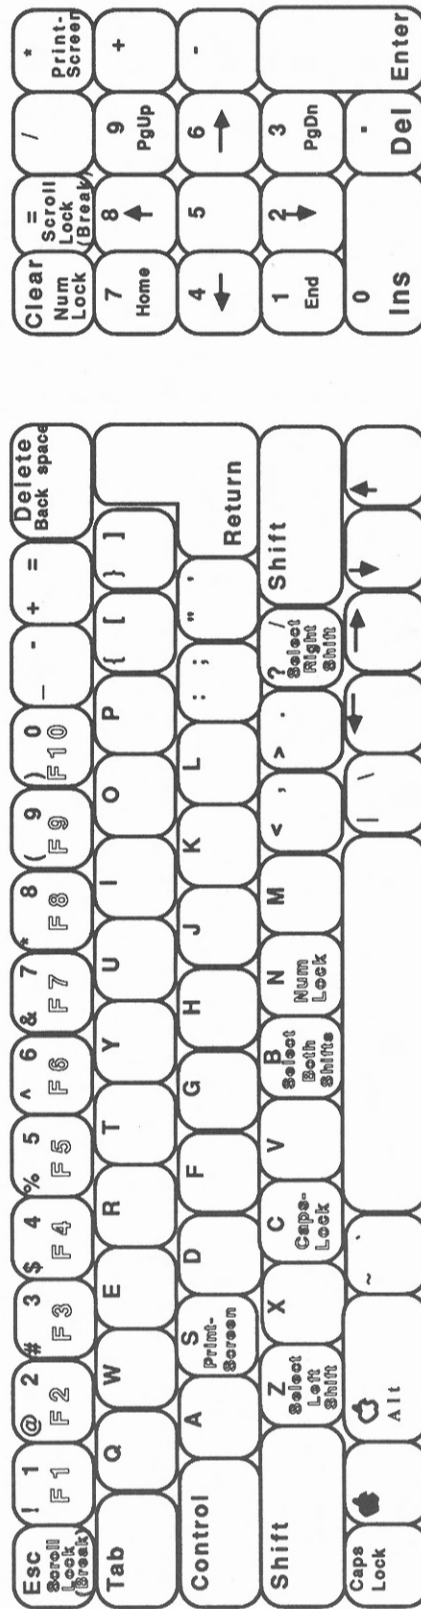

## Apple II gs Keyboard to IBM Style Keyboard Translation

 
 
---

## To Access the Control Panel

You can access the Control Panel while running PC software on *PC Transporter*. You should not access the Control Panel to reboot the system or exit the system completely while in the middle of writing files to any disks, however. This might result in a scrambled disk and lost files. See *PC Transporter Software* for information on the operation of the Control Panel.

### From an Apple IIgs and //e

To access the Control Panel while *PC Transporter* is running:

1. Hold down 
2. Press  twice

### From a PC-Compatible Keyboard

To access the Control Panel while *PC Transporter* is running:

1. Hold down 
2. Press  twice

# CHAPTER EIGHT

---

---

## *Disk Drive Reference*

---

---

### **About PC Transporter and Disk Drives**

PC Transporter is a multiple function disk drive controller. It can run not only ProDOS and MS-DOS, but it can also run its own combination of both.

Disk drives are the most common storage medium for personal computers. However, even though they serve the same basic purpose, different computers have different file formats, different disk formats, and even different types of disk drives, all incompatible with each other. The two encoding techniques typically used are Modified Frequency Modulation (MFM) in the PC-compatible world and Group Code Recording (GCR) in the Apple world. There are 5.25" single sided MFM drives, 5.25" double sided MFM drives, 5.25" single sided GCR drives, 3.5" single sided GCR drives, and 3.5" double sided GCR drives. In addition to these drives, ProDOS and MS-DOS use different file formats for arranging the directories and file information on these drives.

And as if all this isn't confusing enough, Apple has quite a history of different disk drives and operating systems for the Apple II itself.

The types of drives include: Disk II, UniDisk 3.5, and Disk 3.5.

Some of the operating systems are: DOS 3.2, DOS 3.3, UCSD Pascal, and ProDOS.

We refer to the differences in the way MS-DOS and ProDOS structure the directories and files on whatever disk drive they are talking to as either MS-DOS file formats or ProDOS file formats. The controller and disk drives handle encoding the actual data on the disk media. The encoding is often referred to as the disk format. The disk format and file formats are two distinctive entities and you should avoid confusing them. Unfortunately, there is no clear terminology to help differentiate them.

Luckily, rather than complicating the matter, *PC Transporter* actually simplifies the disk drive situation.

Two general categories of disk drives recognized by *PC Transporter* are:

- ❑ Drives connected directly to *PC Transporter* (such as the TransDrive and the Apple 3.5" Drive).
- ❑ Drives connected to the Apple through a standard Apple disk controller - called ProDOS drives

This chapter discusses these categories, including examples of different drives and procedures for their use.

- ❖ **Warning:** Do not connect a UniDisk 3.5 to *PC Transporter*! It could seriously damage both the drive and the board.

You can store and retrieve programs and files on drives in both categories when using *PC Transporter*. The Control Panel is used to tell MS-DOS what disk drive corresponds to which MS-DOS drive designator (A through E). The *PC Transporter* software takes care of deciding which disk formats to use.

Regardless of which category a drive falls in, you can use it to run MS-DOS if MS-DOS has been properly installed on the disk. Installation instructions for creating an MS-DOS bootable disk with all of the drive types is included in the discussion of those drives.

- ❖ **Important:** The Apple *cannot* boot from a disk drive connected to *PC Transporter* because there is no boot ROM on the *PC Transporter* interface card.

The **easiest and fastest** way to run *PC Transporter* is from a RAM drive. If you have a RAM drive, with your battery backed RamFactor or GS-RAM for example, take advantage of it! The section *Using a Hard Disk With PC Transporter* tells you how.

---

---

## Using TransDrives and Apple Disk 3.5" Drives

You can connect up to four floppy disk drives directly to *PC Transporter*: a single or dual TransDrive daisy-chained with up to two Apple 3.5 Drives (we'll talk about Apple 3.5 Drives later on). You must have at least one TransDrive or one Disk 3.5" drive for normal operation of *PC Transporter*. Normal operation means reading and writing MS-DOS format disks from within MS-DOS programs and booting MS-DOS itself.

If a disk drive is plugged into the *PC Transporter* disk controller, the *Transporter* assumes it's a 5.25" TransDrive. The file format that *PC Transporter* uses with this drive is completely compatible with disk drives on other PC-compatibles. This means you can remove the diskette after writing a file to it, place the diskette into a drive on another PC-compatible, and read that file without any special hardware or software. This is called, "media compatibility."

TransDrive systems use the MFM disk encoding technique when used in MS-DOS mode. (They can also be used in ProDOS mode. Under ProDOS they are formatted as 360K ProDOS devices. This is discussed in detail later in this chapter.) A TransDrive is capable of reading and writing one of the following formats:

1. 5.25" single-sided double-density (SSDD) (180K) or double-sided (DSDD) (360K)
2. 3.5" single-sided double-density (SSDD) (360K ) or double-sided (DSDD) (720K)

The high-density (1,200K) diskettes used in the newer 80286-based personal computers (AT-compatibles) are not compatible with *PC Transporter*. The only other limitation concerning TransDrives is that MS-DOS revs prior to MS-DOS 3.2 are incapable of handling the higher capacities of double sided 3.5" drives. Older revs of MS-DOS are limited to 360K bytes regardless of which drive is actually being used.



## Daisy-Chaining Drives

Daisy-chaining means connecting multiple devices in a chain configuration, where each successive device is in turn connected to the one directly before it. For example, if you had three disk drives (call them X, Y, and Z) then to connect them in a daisy-chain would mean that you could connect X to *PC Transporter*, Y to X, and Z to Y. This is important because the order in which you connect disk drives to *PC Transporter* is significant.


## How Many Drives?

You can physically connect up to a total of *four* disk drives to *PC Transporter* at one time. However, *PC Transporter* has only *one* disk drive port. In order to connect multiple drives to *PC Transporter*, you connect the first drive directly to the disk drive connector which leads from *PC Transporter*, then daisy-chain successive drives from the rear of the first. You must purchase specially-configured drives that have a daisy-chain connector built in to them.


Any TransDrives that you use with *PC Transporter* must be connected *before* the Apple 3.5 Drives. It doesn't matter, however, if you connect a 3.5" TransDrive before or after a 5.25" TransDrive.

The drives are ordered from A: through D: in the control panel, in the order that they are connected in the daisy chain. You can use the control panel to change their order as discussed below.

## Maximum Configuration

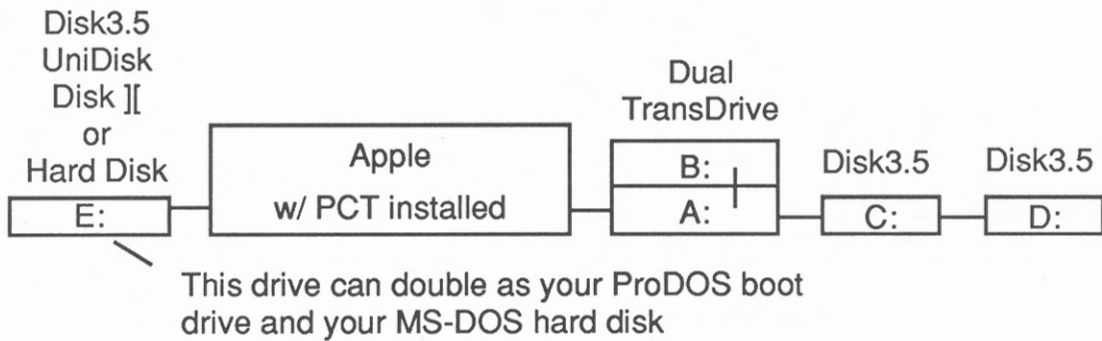

## Minimum Configuration

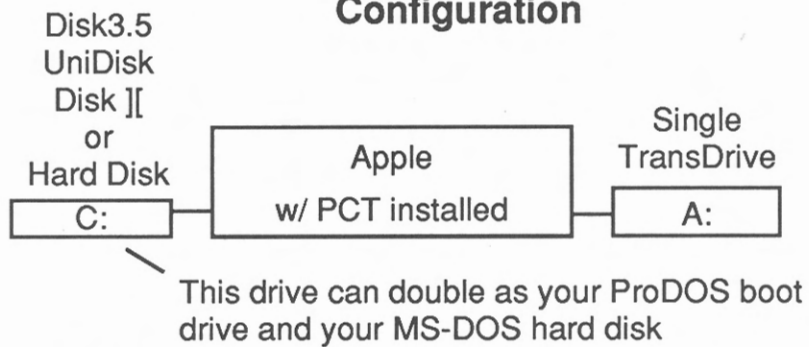

### PC Transporter Drive Configuration Examples

#### Connecting Disk Drives

Refer to the *Step-By-Step Installation Guide* or the *QuickStart Installation Guide* for instructions on connecting disk drives to PC Transporter.

---



---

---

## Configuring Disk Drives With the Control Panel

Auto-Configure is a very helpful command. But *PC Transporter* gives you the ability to decide what goes where and get it there easily. Use the control panel to set up your A: (boot) drive, your Pro DOS drives as MS-DOS hard volumes and your ProDOS hard disk as an MS-DOS hard drive.


- ❖ *Note: PC Transporter* always tries to boot from the drive configured as A: first. If there is no disk in A: or if it can't find an A: drive, it will then try to boot from the hard disk.

---

### 5.25" TransDrives

The 5.25" TransDrive is *PC Transporter's* default drive. It is the drive that *PC Transporter* expects to find as the MS-DOS A: (boot) drive. So, if you are using a TransDrive system, no special setup is required.

If you have a 5.25" dual TransDrive system (connected directly to *PC Transporter*), Auto-Configure will assign the bottom drive as A: and the top drive as B:. You can change this with the Assign/Configure Devices menu if you would like (for example) *PC Transporter* to boot from the top drive.

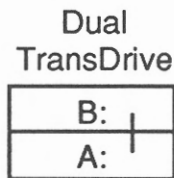

#### Dual TransDrive Access Order



You can also change the access order of the TransDrives by switching the drives' jumpers (instructions are included with the TransDrive system) but it is much easier to use the control panel.

---

### 3.5" TransDrives

As stated above, if you do not inform *PC Transporter* otherwise, it will assume that your A: and B: drives are 5.25" drives. If you have a 3.5" TransDrive connected directly to *PC Transporter*, *PC Transporter* will believe it to be a 5.25" TransDrive. Use the steps below to correct this:

1. Get to the Control Panel Main Menu

Hold down the  key while pressing  twice.

2. Choose Configure Drivers from the main menu.

3. Choose Assign/Configure Devices from the Configure Drivers menu.

The following menu appears:

```
Assign/Configure Devices

1. Disk Drives
2. 8087 Math Co-Processor - Not Installed
3. SSC COM1 Handler
4. ImageWriter II/IBM Graphics printer
5. (etc. depending on other devices)
```

4. Choose Disk Drives from the Assign/Configure Devices menu.

The following menu appears. It may not appear exactly the same on your screen; it depends upon the equipment you have in your system. Nevertheless, the process is the same.

```
Assign Disk Drives

Disk Drives

1. A> PC Transporter TransDrive 1 (5.25)
2. B> PC Transporter TransDrive 2 (5.25)
3. None
4. None
5. C> Hard Disk = /AEPC/MSDOSVOL (OFF)
```

5. Choose A> PC Transporter TransDrive 1 (5.25)



The Control Panel displays the following menu on the screen:

```
Floppy Drive Type Selection

Floppy Drive 'A' = PC Transporter TransDrive (5.25)

Drive Selection

1. PC Transporter TransDrive - 5.25"
2. PC Transporter TransDrive - 3.5"
3. PC Transporter Apple Disk 3.5" Drive
4. ProDOS Drive
5. None
```

- ❖ *Note:* Apple 3.5 users go to step #6 of the next section.
- 6. Use the arrow keys or the number to select PC Transporter TransDrive - 3.5 then type .
- 7. Now press  until you are back at the Main Menu. Then select Save Configuration to retain the setting.
- 8. Select Reboot and Run PC Transporter.
- ❖ *Important:* As with most Control Panel settings, these will *not* take effect until you reboot *PC Transporter* because MS-DOS would become hopelessly confused if you changed disk drive settings in the middle of a file operation, for example.

The 3.5" TransDrive is now your A; drive. Disks placed in this drive can now be formatted, read from and written to as MS-DOS 720K disks.

If you have a **dual 3.5" TransDrive system**, follow the same steps, choosing B> PC Transporter TransDrive 2 (5.25) in step #5.

---



---

---

### Apple Disk 3.5 Drives Connected to *PC Transporter*

This is Apple's double-sided 3.5" drive that is compatible with the //e, IIGS, and Macintosh™. It has a grey or platinum case.

This is a unique drive because it is the first Apple drive capable of *directly* reading and writing either GCR or MFM formats. As such you can use it for either disk format.

If you leave the Apple 3.5 Drive connected to your Apple disk controller, it uses the GCR disk format. Alternately, you can connect it directly to *PC Transporter*. If you do this, the drive uses the MFM disk format when running MS-DOS. Because this drive can do both, it doesn't exactly fit either category of disk drives so *PC Transporter* explicitly calls out this drive in the Control Panel menus.

When this drive is plugged into the Apple controller, it becomes a ProDOS drive to *PC Transporter* and the Apple system. These drives are discussed in the next section.

When you connect the drive to the *PC Transporter* disk controller, it almost looks like a TransDrive. It doesn't look exactly like a TransDrive because of some interface differences:

---

#### Connect Apple 3.5's After TransDrives

The first of these differences is that it *must* be connected last in the daisy chain. *All* TransDrives must be connected to *PC Transporter* before any Apple 3.5 Drives or else *PC Transporter* will not be able to find the TransDrives.

The second difference is that when Apple defined the interface to be used with 3.5" disk drives, they used a method of indexing the disks different from the indexing method of drives in the PC-compatible world. As a result, if you format a disk on the Apple 3.5 Drive and then use it on another PC-compatible, the PC-compatible may or may not be able to read the disk.

You will not have a problem, however, if you format a disk on another PC-compatible and then use it on *PC Transporter* and the PC-compatible interchangeably.

You should also have no problem if you use *PC Transporter* to format a disk in the Apple 3.5 Drive and use it in either Apple 3.5's or in 3.5" TransDrives on other *PC Transporter* systems,



---

## Use Control Panel to Configure Apple 3.5 Drives


No matter how you connect an Apple 3.5 Drive, you must manually configure it with the Control Panel. The `Auto-Configure` command will not recognize this drive even if it is attached to the *PC Transporter* disk controller. You must tell the Control Panel where this drive is.

To configure the Apple 3.5 Drive as a *PC Transporter* drive, follow steps 1-5 in the previous section then skip to steps 6-9 below.


6. Use the arrow keys or the number to select `PC Transporter Apple Disk 3.5" Drive`.

The Control Panel displays the following prompt at the bottom of the screen:

Specify drive number: \_

7. Type the drive's number in the daisy-chain of disk drives relative to its type and press .

For example, if you have a 5.25" TransDrive connected directly to the card and an Apple 3.5 Drive connected to the first, the drive number of the 3.5" drive is 1 because it is the first Apple 3.5 Drive.

8. Now press  until you are back at the Main Menu. Then select `Save Configuration` to retain the setting.
9. Select `Reboot` and `Run PC Transporter`.

❖ *Important:* As with most Control Panel settings, the settings will *not* take effect until you reboot *PC Transporter* because MS-DOS would become hopelessly confused if you changed disk drive settings in the middle of a file operation, for example.

The Apple 3.5 is now your `A:` drive. Disks placed in this drive can now be formatted, read from and written to as MS-DOS 720K disks.

If you are using the Apple 3.5 as your `B:`, `C:`, or `D:` drive, you would follow the same procedure, selecting the appropriate drive position in step #5.

---

---

## Other Disk Drives

This section discusses a few alternative disk drive types that you can use with MS-DOS. They are other Apple-compatible drives, RAM disks, and Hard disks.

The Auto-Configure command in the Control Panel will not recognize any of these drive types, so you will have to use the Assign/Configure Devices menu if you want to use any of these.

Once you get the system configured properly, however, you can save the configuration to disk so you only have to do the configuration once. After that you can change it any time you want to.

---

## Using Apple-Compatible Drives For MS-DOS Storage

Apple-compatible disk drives are compatible with *PC Transporter* for reading and writing MS-DOS files. You leave them attached to their existing controller cards in the Apple and ProDOS itself actually performs the transactions between these drives and *PC Transporter*.

Apple-compatible drives include all the Apple drives that you have always used with ProDOS. These drives all use the GCR data encoding technique.

If the disk drive is plugged into the Apple controller and you write a file to that diskette, it is only meaningful to a similar disk drive plugged into the Apple controller in *PC Transporter* systems. This is unique because, even though ProDOS is used to write the MS-DOS files to the disk, it does not have a ProDOS directory structure. It retains the MS-DOS directory structure while using a GCR disk format. The ProDOS System Utilities can be used to copy the disk but not to catalog it, and other ProDOS applications will be unable to use the disk. Still, this permits you to use your existing Apple disk drives for storage of data and programs under MS-DOS.

## All Apple 5.25" Drives

All Apple 5.25" disk drives are single sided drives designed for GCR encoding. These drives are physically incapable of providing as much storage as can a PC-compatible single sided 5.25" disk drive. *PC Transporter* can still use these drives to store data and programs, however. They are configured with the Control Panel in the same way as any other Apple-compatible drive.

- ❖ **Important:** The MS-DOS format command will not function properly with a blank 5.25" diskette in an Apple drive. The diskette **must** be formatted first with ProDOS then with MS-DOS. The MS-DOS format routine will still attempt to write to and read from tracks 35 through 39 which are not present on an Apple 5.25" disk drive. This will cause the formatter to indicate BAD BLOCKS are present on these tracks. The formatting *will* be successful however and you can use the disk for about 140K of storage.

## UniDisk 3.5

This is the older Apple double-sided 3.5" drive originally built for the Apple //e. It typically has a white case, though yours might be somewhat aged and darker by now.

This drive can be used with MS-DOS, but it can't read or write MFM disks.

It must be configured with the Control Panel and left connected to the Apple.

Unlike the 5.25 disks, you need to format the disks in the UniDisk (and the Apple 3.5 Drives) with MS-DOS only. The ProDOS formatting will be done automatically when you use the MS-DOS format command. This is a function of the Smart Port.

MS-DOS files saved to a UniDisk 3.5 are stored with an MS-DOS directory structure using GCR encoding. The disk looks just like a standard MS-DOS disk to PC programs but is actually unique to *PC Transporter*. See the instructions below for configuring the drive with the Control Panel.

## Apple 3.5 Drives Connected to the Apple Controller

The Apple Disk 3.5 Drives (platinum) can be connected directly to *PC Transporter* (discussed earlier) or to the Apple disk drive controller. If they are plugged into the Apple controller, they behave the same as the UniDisk 3.5 drives which means you must let the *Transporter* know they are there via the Control Panel and you need to format them under MS-DOS only.

---

## Configuring a ProDOS Drive for MS-DOS Storage

You must use the Control Panel to configure *PC Transporter* to use an Apple-compatible disk drive for MS-DOS file storage. The Auto-Configure command in the Control Panel does not assume that you want to access your Apple's disk drives from MS-DOS. If you do:

1. Get to the Control Panel main menu

If you don't remember how to do this, refer to Chapter Five - *PC Transporter Software* for assistance.

2. Choose Configure Devices from the main menu.
3. Choose Assign/Configure Devices from the Configure Devices menu.

The following menu appears:

Assign/Configure Devices

1. Disk Drives
2. 8087 Math Co-Processor - Not Installed
3. SSC COM1 Handler
4. ImageWriter II/IBM Graphics printer
5. (etc. depending on your other devices)

4. Choose Disk Drives from the Assign/Configure Devices menu.


The following menu appears. It may not appear exactly the same on your screen; it depends upon the equipment you have in your system. Nevertheless, this process is the same.

```
Assign Disk Drives

Disk Drives

1. A> PC Transporter TransDrive 1 (5.25)
2. B> PC Transporter TransDrive 2 (5.25)
3. None
4. None
5. C> Hard Disk = /AEPC/MSDOSVOL (OFF)
```

5. Choose the first available unused position for your Apple disk drive.

In the example above, the next unused position is 3. Type '3' or move the cursor to that position and press Return. The following menu appears. (Use  to back out of the menus.)

```
Floppy Drive Type Selection

Floppy Drive 'A' = PC Transporter TransDrive (5.25)


Drive Selection

1. PC Transporter TransDrive - 5.25"
2. PC Transporter TransDrive - 3.5"
3. PC Transporter Apple Disk 3.5" Drive
4. ProDOS Drive
5. None
```

6. Choose ProDOS Drive.

The Control Panel displays the following prompt at the bottom of the screen:

```
Specify drive slot number: _
```

7. Type the number of the slot in which the drive's controller card is installed and press .

This is usually slot 5 or 6. If you're using a RAM disk, enter the appropriate slot number.



The IIGS Smart Port is used to connect Apple-compatible drives to the IIGS. The IIGS Control Panel is used to enable or disable this feature. The Smart Port is capable of handling multiple drives via the same daisy chain that *PC Transporter* uses. It re-maps the drives in this daisy chain so that the first two 5.25" disk drives appear to be plugged into slot 6, the first two Disk 3.5 drives appear to be plugged into slot 5 and any remaining drives appear to be plugged into slot 2. *PC Transporter* must be told where these drives *appear* to be residing (according to the IIGS Control Panel).

Next, the Control Panel displays the following prompt:

```
Specify drive slot number: 6 and drive number: _
```

8. Type the number of the disk drive and press .

This is 1 or 2 in the case of a standard Apple-compatible disk controller card.

9. Use the `Save` configuration command to preserve these settings.

10. Choose `Reboot` and `Run PC Transporter` from the main menu.

❖ *Important:* As with most Control Panel settings, these will *not* take effect until you reboot *PC Transporter* because MS-DOS would become hopelessly confused if you changed disk drive settings in the middle of a file operation, for example.

Now when you insert a ProDOS formatted 5.25 disk or a blank 3.5 disk into the drive and use the MS-DOS `FORMAT` command, these disks can be used for MS-DOS storage.

The 3.5 disks will have about 720K of total disk space.

The 5.25 will have about 140K available (about 226K will appear to be bad but about 140K is actually useable storage space).

❖ *Remember:* ProDOS will no longer recognize these disks. We recommend that you mark them as AEPC format.

---

## Using *PC Transporter's* Drives From ProDOS

ProDOS allows the use of a maximum of two block devices (like disk drives and RAMDisks) connected to any given slot. Because of this limitation, you can't access more than two of *PC Transporter's* block devices (unless your *Transporter* is in slot 5 as detailed below). *PC Transporter* gives the largest block devices preference over the smaller devices.

So, although the *PC Transporter* system can have up to four disk drives attached to its controller, ProDOS can use only one of these drives in addition to its onboard RAM used as a RAMDisk.

### Loading the ProDOS Disk Drivers

*PC Transporter* does not have a ROM on the interface card. This means that it cannot look like a disk drive immediately when you turn on your Apple. As mentioned earlier, this means that your Apple cannot boot from any drive attached to the *PC Transporter* disk controller.

This also means that in order for your Apple to recognize and use any *PC Transporter* disk drives or RAMDisk with your other applications, you must load the proper ProDOS device drivers into the *PC Transporter* RAM. This can be accomplished in a number of ways.

#### A Pre-Boot

You boot the *PC Transporter* boot disk before booting the application you wish to run. You can either boot the application directly or execute it by quitting the *PC Transporter* application and specifying your new application's prefix and pathname. The *PC Transporter* disk and RAMDisk drivers will remain in *PC Transporter's* RAM until you turn the power off. You can even run *PC Transporter* and when you select quit from the Control Panel to run your next application, the drivers will return to *PC Transporter's* RAM.

#### Copy *PC Transporter's* ProDOS file

You can copy the ProDOS operating system file (PRODOS) from *PC Transporter's* boot disk to the boot disk containing your application. Then when you boot ProDOS, the drivers will automatically be placed in *PC Transporter's* RAM and your application can use the RAM immediately. The PCINSTALL program, described below, copies the PRODOS file to your application disk for you.



## ❑ Run the PCINSTALL program

This program places a copy of the *PC Transporter* drivers into a ProDOS file that you specify. To do this, you run the ProDOS program PCINSTALL. (Follow the directions below.)

You place the target disk (the one with your application) in the specified drive and the ProDOS on that diskette will be modified. Thereafter, when you boot with that diskette, the drivers will be loaded into *PC Transporter's* RAM automatically.

## Using the PCINSTALL Program

❖ *Note:* ProDOS must be unlocked for PCINSTALL to function properly. Use the system utilities to make sure that the ProDOS file is unlocked.

1. Run PCINSTALL. The PCINSTALL program is on your *PC Transporter* boot disk and will run under ProDOS. (Run from the BASIC prompt by entering -PCINSTALL.)
2. Press P when the PCINSTALL menu is on the screen, then enter the pathname of the ProDOS disk you want to modify (e.g. /DANS.DISK/PRODOS).

❖ *Note:* Make this modification to the file called, "ProDOS," not the "P8" or "P16" files.

3. Press D to set the pathname of the disk containing the drivers (e.g. /AEPC/AEPC.DISKS is the name of the drivers file included with *PC Transporter*).
4. Press A to Add drivers to your ProDOS disk.
5. Press W to Write the drivers to the ProDOS file and replace the original ProDOS with the modified ProDOS.
6. Press Q to Quit the INSTALL program.

❖ *Note:* If you notice a file on your modified disk called, "PRODOT" after running PCINSTALL, then your ProDOS file (PRODOS) was locked. PRODOT is the actual modified PRODOS file. You need to delete the PRODOS file, and rename the PRODOT file, PRODOS.


The drivers are now added to your ProDOS disk.

To remove the drivers from the ProDOS file, you must copy an unmodified ProDOS file to that diskette using the ProDOS System Utilities. This will replace the ProDOS that was modified to include the drivers.




## Accessing the Floppy Drives from ProDOS

As noted earlier, ProDOS will recognize the larger block devices before the smaller ones. So, RAMAEPC is the first drive in the Apple expansion slot that *PC Transporter* is plugged into. The first Apple 3.5 Drive attached to the *PC Transporter* disk controller is drive 2 in the Apple expansion slot that *PC Transporter* is plugged into.

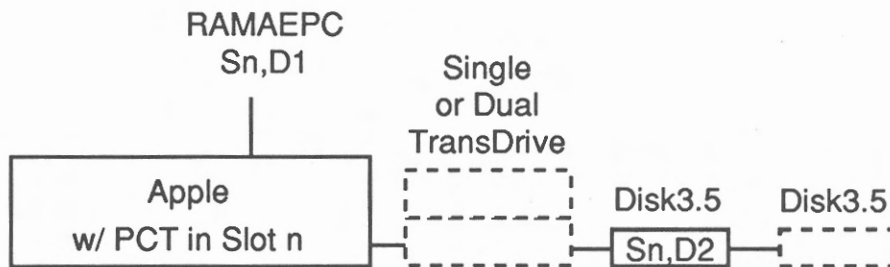

### ProDOS Access Order w/ 3.5 Daisy-Chained to TransDrive

If you don't have an Apple 3.5 Drive attached to the *PC Transporter* disk controller, then the first TransDrive becomes drive 2 in the slot that *PC Transporter* is plugged into.

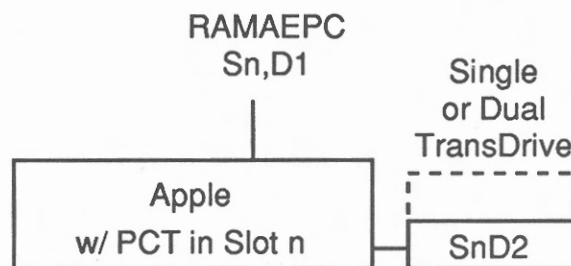

### ProDOS Access Order w/ only TransDrive Connected to Transporter

If you have two TransDrives of different sizes (such as a 720K 3.5" drive and a 360 K 5.25" drive), you would probably be better off plugging in your 3.5" TransDrive first in the daisy chain. You should consider your needs, however. If you want to be able to swap data with a friend who uses only 5.25" disks (poor soul), you will want to plug in the 5.25" TransDrive first.

When you create diskettes with *PC Transporter's* drives under standard ProDOS applications, you must keep in mind that you won't be able to read them using drives that are plugged into Apple-compatible controllers. These disks will be MFM encoded but their file formats will be that of ProDOS. They won't make sense to any MS-DOS applications, either; they will be recognized by other *Transporter* systems only. You might think of this disk format as the converse of using ProDOS drives under *PC Transporter* to store MS-DOS files.

### ***PC Transporter* as a ProDOS RAM Disk**

You can use the RAM installed on *PC Transporter* as a ProDOS RAM disk for your Apple II programs. A RAM disk is a storage area created in the electronic (RAM) memory of a computer which appears to that computer's operating system to be a normal disk drive. It is available to the operating systems as would be any other disk drive; data can be stored, retrieved, and erased from the RAM disk. There is one major advantage in using a RAM disk and one major disadvantage.

#### **Advantage:**

The advantage of using a RAM disk is speed. Because your computer can do complete memory accesses much faster in RAM than on disk, response is almost instantaneous. Programs that require a lot of disk access, such as database programs that perform on-disk sorts, will be sped up tremendously by using a RAM disk.

#### **Disadvantage:**

There's one disadvantage to using a RAM disk: the data contained in the RAM disk can be lost or corrupted in the event of a program crash or a power loss. Unlike a diskette, which uses (relatively) permanent magnetic storage technology, your computer's RAM is in need of constant electricity. The information in RAM is only as permanent as your electrical power; if your computer loses power, the contents of RAM are destroyed. If a program locks up or crashes, you may have to reboot the computer, which also empties RAM of its contents.

- ❖ *Exception:* An important exception to this RAM disk rule is a RamFactor with a RamCharger or a GS-RAM with a RamKeeper.

The safest way to use a RAM disk is to use it for those operations where speed is needed, but regularly back up important files on the RAM disk to a floppy disk or hard disk. This way you lessen the risk of an error destroying your work.

- ❖ *Important:* Although the power isn't shut off when you reboot *PC Transporter* to run PC software, the contents of any ProDOS RAM disk are *erased*. Be sure to save the information on your RAM disk to a floppy disk or hard disk before rebooting *PC Transporter*.

### Accessing the RAMDisk from ProDOS

*PC Transporter's* RAMDisk is available to ProDOS as drive 1 of the slot that *PC Transporter* is plugged into. One of the disk drives that you have attached to *PC Transporter's* controller is drive 2 (see previous section, "Using *PC Transporter's* Drive from ProDOS.")




### The Slot 5 Option

With the Transporter installed in slot 5, you have access to up to 4 block devices connected to the *Transporter* for ProDOS data storage. This is actually a function of ProDOS 8. The *Transporter's* RAM will still be the first block device accessed (S5,D1). The next largest block device is accessed second and has the Slot 5, Drive 2 position. So, if you have a Disk 3.5 drive daisy-chained to a TransDrive, the Disk 3.5 drive is the S5, D2 device.

The next largest block device is set up to appear as Drive 1 in Slot 2, (S2,D1) (again, this setup is a function of ProDOS 8). The third disk drive (which is the fourth block device) is S2,D2.




- ❖ *Note:* If you already have a block device in Slot 2 (such as a RamFactor) it will override the *PC Transporter's* second and third disk drives. However, modems and serial cards are not block devices and will not interfere with the *Transporter* drive arrangement.

The drawings below show various access orders:

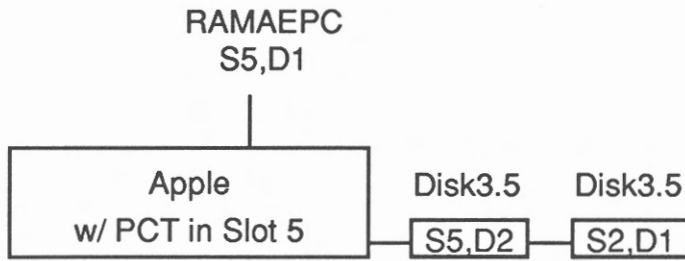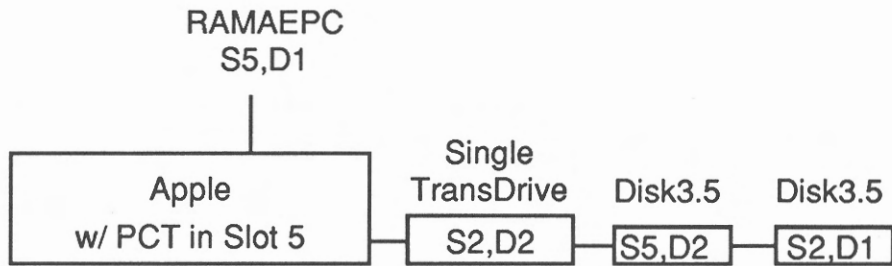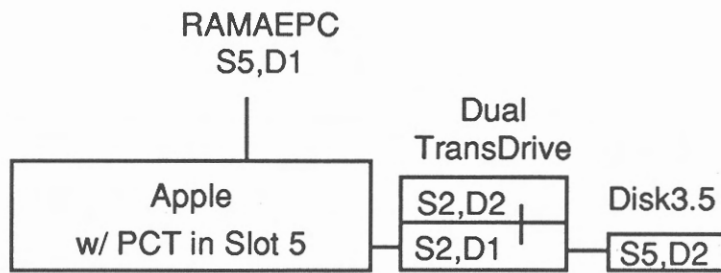

**Transporter Slot 5 Drive Options  
as Recognized by ProDOS**

- ❖ *Remember:* Disks in these drives must have PC Transporter's special ProDOS installed. Modify the ProDOS on the disks you want to use in these drives with the PCINSTALL program or copy the PCINSTALL modified ProDOS from another disk.

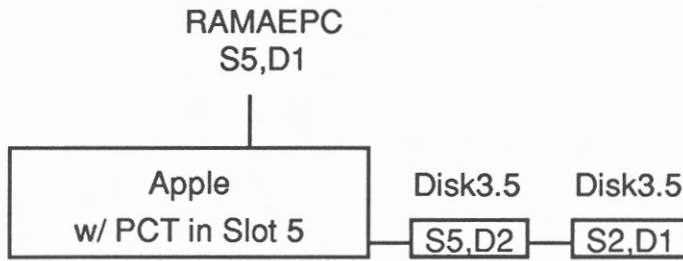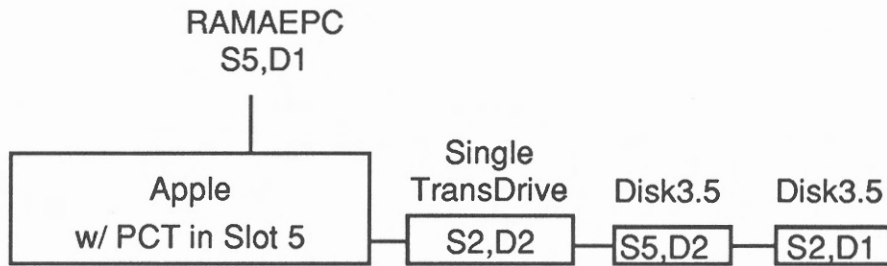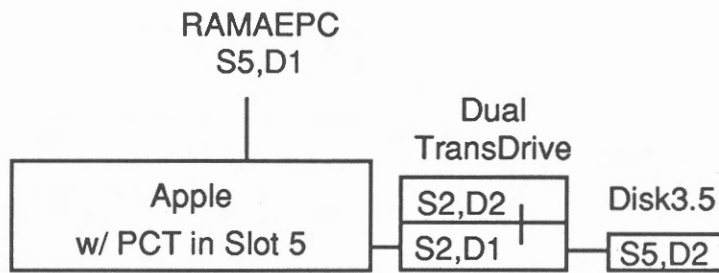

**Transporter Slot 5 Drive Options  
as Recognized by ProDOS**

- ❖ *Remember:* Disks in these drives must have PC Transporter's special ProDOS installed. Modify the ProDOS on the disks you want to use in these drives with the PCINSTALL program or copy the PCINSTALL modified ProDOS from another disk.



---

---

### **Using a Hard Disk With *PC Transporter***

(Including Instructions for Using a Floppy Disk as an MS-DOS Hard Disk)

*PC Transporter* is able to configure most ProDOS hard disks for MS-DOS storage without disrupting the ProDOS files. The *Transporter* can also use 3.5" disks as MS-DOS hard disk volumes. It treats the 3.5 drive like a small hard disk (see the following section).

Once you have created an MS-DOS hard disk volume, you will not only have more storage space for your MS-DOS files, but you will also be able to boot the entire *PC Transporter* System--from ProDOS to MS-DOS--from a single drive.

The method for storing MS-DOS files on a ProDOS hard disk is only slightly more involved than that for floppy disks. All you have to do is use the Control Panel to create a special expandable file on your hard disk. This file is called MSDOSVOL by default, but that can easily be changed to any other name.

The steps required to configure your hard disk are listed below.

---

### **3.5" ProDOS Disks as Hard Disk Volumes**

As mentioned above, a hard disk volume can actually be created on an Apple-compatible floppy disk drive using the same sequence as for a ProDOS hard disk. In fact, you have already used an MS-DOS hard disk volume (MSDOSVOL) when you first set up the software.

5.25 disks are not large enough to be of much use as hard disk volumes. But, since the 3.5" MS-DOS volume is actually a ProDOS formatted disk, 3.5" disks can emulate a hard disk up to about 765K in size. (Compare this to using the 3.5 disk as a 720K storage device when formatted with MFM.)

A word of caution regarding hard disk volumes is in order, however.

- ❖ **Warning:** MS-DOS *never* expects a hard disk to be removeable. As such, when information is saved to the hard disk volume/file, MS-DOS often does not actually write that data to the disk until later on. If you attempt to change a floppy diskette that MS-DOS is using as a hard disk, you will most likely destroy the directory structures and hence the information on both your hard disk volume and your MS-DOS floppy diskettes.

The 3.5" disk must be formatted in ProDOS first.

If you want to use this disk for MS-DOS storage and not ProDOS, you can use about 760K for MS-DOS files.

If you plan to use this disk to boot both ProDOS and MS-DOS, you will need to copy the AEPC ProDOS files to it. You can delete the files you will not need to leave more room on the disk. For example, you won't need the file MSDOSVOL because you will be creating a new hard disk volume. The list below will work for a minimal ProDOS/*Transporter* system disk:

```
PRODOS
AEPC.SYSTEM
STARTAEPC
AEPCBIOS
AEPC.CONFIG
AEPCKEY.GS (AEPCKEY.2E for //e users)
AEPC.DRIVERS
```

Refer to the section, "*PC Transporter System Files*," to help you decide which files you'll need for your particular setup.

Check the amount of space left on the disk. It should be about 650K or more. Remember the amount. This will be the space you can use for the MS-DOS hard file.

Now create an MS-DOS hard volume following the instructions below.



---

## Thoughts on Preallocation

When you set up your hard disk volume for *PC Transporter* the Control Panel requires you to make a decision as to whether or not you want to *preallocate* a volume size on your ProDOS hard disk to the MS-DOS volume/file. This option controls whether or not the ProDOS file containing your MS-DOS files will take up all of the preassigned space immediately upon defining the hard disk volume. There are two schools of thought for how to decide this issue.

### To Preallocate or...

Preallocation means that ProDOS will actually create a file as large as you decide your hard disk should be (limited, of course, by the amount of memory you have available for use as a RAM disk). A file of the size you have allocated is set up in your ProDOS directory as the hard disk. At the same time the hard disk volume is created, the amount of memory it uses is subtracted from the amount of memory that was available before its creation.

If you preallocate, your ProDOS applications will immediately have less disk space to work with. On the MS-DOS side, the MSDOSVOL file is empty when you first create it and only fills up as you place more MS-DOS files and programs in it. This means that initially there will be a lot of unused space on your hard disk that ProDOS can't use.

### ...Not to Preallocate?

The other side to the coin is that if you do not preallocate, then the amount of available disk space that MS-DOS sees does not accurately reflect what's still available on the hard disk.

Consider this case: MS-DOS, when booted, had most of a 10 Meg hard disk available to it, but ProDOS applications have since filled up all but 1 Meg of the hard disk. In this situation, the ProDOS applications know how much disk space is actually left because they can ask ProDOS and ProDOS will tell them. But when MS-DOS applications ask MS-DOS how much space is left, MS-DOS will tell them, "About 10 Meg," because that's what it still thinks. The disk usage is part of the MSDOSVOL file and there is no mechanism for ProDOS to tell MS-DOS what's actually there.

What this means is that an application can ask how much disk space is available, get an answer, and proceed with writing to a file when there isn't actually any disk space left. The application would get disk full errors when it wasn't expecting them and could be hopelessly lost, would probably hang, and that's not good.

The decision as to which of these problems you want to live with is yours. For most people, preallocation will be the wise choice. The best solution, naturally, would be to purchase a hard disk for your Apple that is larger than your requirements with both operating systems.

---

### Controlling the Hard Disk File

Once you have defined your hard disk file, *PC Transporter* creates the file in the ProDOS directory you have selected. Since this is a ProDOS file, it can be manipulated with the ProDOS System Utilities. This also means you can delete it with these utilities. You must be careful when deleting this file since it could be storing a lot of important MS-DOS files.

**Back it up!** It takes very little time. Especially when compared with time you lose if your hard disk crashes.

If you run out of room in your hard disk file, there is only one way to increase the size of the hard disk. Fortunately it isn't by purchasing a larger hard disk - you should already have a large enough one for both operating systems. Instead, you must:

1. Copy all the files off of the hard disk volume to floppy diskettes (see the MS-DOS commands `BACKUP` and `RESTORE`).
2. Delete the `MSDOSVOL` file from your ProDOS directory.
3. Use the Control Panel to create a new one of the desired size.
4. Restore or copy all of the files back to the hard disk volume/file from the floppy diskettes.

---

## To Configure Your ProDOS Hard Disk

These instructions will work if you have a standard ProDOS hard disk connected to a hard disk controller card installed in your Apple's slot 7. If your hard disk is installed differently, the differences will be apparent and this process can be easily adapted.

If you have any doubt as to whether your hard disk is going to work, consult your hard disk's documentation; if it claims to be 100% ProDOS-compatible there is no reason that it shouldn't work with *PC Transporter*.

These instruction will also work for setting up a 3.5" disk in an Apple ProDOS drive.

1. Get to the Control Panel main menu

If you are in ProDOS, run the AEPC.SYSTEM program and hold down the spacebar until the Control Panel appears.

If you are in DOS, hold down  and press  twice.

2. Choose Configure Drivers from the main menu.
3. Choose Assign/Configure Devices from the Configure Devices menu.

The following menu appears:

Assign/Configure Devices

1. Disk Drives
2. 8087 Math Co-Processor - Not Installed
3. SSC COM1 Handler
4. ImageWriter II/IBM Graphics printer
5. (etc.)

4. Choose Disk Drives from the Assign/Configure devices menu.

The following menu appears. It may not appear exactly the same on your screen; it depends upon the equipment you have in your system. Nevertheless, the process is the same.

Assign Disk Drives


 
Disk Drives

1. A> PC Transporter TransDrive 1 (5.25)
2. B> PC Transporter TransDrive 2 (5.25)
3. None
4. None
5. C> Hard Disk = /AEPC/MSDOSVOL (OFF)

5. Choose C> Hard Disk = ....

The Control Panel displays the following prompt at the bottom of the screen:

```
Specify ProDOS file to be used as AEPC's Hard Disk
:/AEPC/MSDOSVOL_
```

6. Press  or backspace to go to the beginning of the name then enter the ProDOS volume name of your ProDOS hard disk or 3.5" disk, followed by a filename for your MS-DOS hard file, then type .

The default volume name (/AEPC in the example above) is the volume name of the disk from which you booted *PC Transporter*. Enter the correct name of your hard disk (or 3.5" disk) and the filename you want to give to your MS-DOS hard disk file.

- ❖ *Note:* The filename you assign to your hard disk file will appear in ProDOS as an unknown file type.

The Control Panel displays the following prompt at the bottom of the screen:


```
Do you want the hard disk file preallocated (Y/N)?
```

7. Type Y (recommended) if you want to immediately set aside the amount of space available to the MS-DOS volume/file, or N if you want to allow the volume/file to expand and shrink as needed.

See the section called *Thoughts on Preallocation* above for information on deciding which to choose.

After you answer the question above, the Control Panel displays the following prompt:

Specify size of new hard disk file in kilobytes.  
(Minimum 35K):\_

8. Enter the maximum number of kilobytes of disk storage that you expect to use and press .

See the section called *Thoughts on Preallocation* above for information on deciding how much space to set aside. If you preallocate, keep in mind that you need enough space for `FDISK` and `FORMAT`--at least 140K.

The hard disk will now be configured. This may take awhile depending on the size of your hard disk.

9. Now use the `Save Configuration` command to preserve these settings then `Reboot` and `Run PC Transporter`.

At this point the file has been allocated, but MS-DOS still cannot access it. MS-DOS needs to put its own low-level format on to the drive. For this you will have to use the MS-DOS utilities called `FDISK` and `FORMAT` located on your MS-DOS system master diskette.

10. Use the MS-DOS program `FDISK` to allocate the entire `MSDOSVOL` volume/file for MS-DOS.

Consult the MS-DOS documentation for more information on the use of `FDISK`. Although `FDISK` has the capability to partition the disk, that option is of no use to you because you would not have access to the non-MS-DOS partition. Be sure to allocate all the available space displayed in the `FDISK` menu to the MS-DOS partition of your hard disk.

11. Format your hard disk

⇒ At the `A>` prompt, enter `FORMAT C:/S/V` 

`A:` should contain your MS-DOS system disk.

`C:` is the location of your hard drive (it could also be `D:` or `E:`).

`/S` tells MS-DOS to transfer the system files onto the diskette after it is formatted. The system files transferred are invisible and are difficult to transfer later, so don't forget this command.

`/V` allows you to name the MS-DOS portion of your ProDOS hard disk.

When you use the FORMAT command, a warning statement like the one below will appear:

```
WARNING, ALL DATA ON NON-REMOVABLE DISK
DRIVE C: WILL BE LOST!
Proceed with Format (Y/N)?
```

This means that any MS-DOS data on this disk will be lost. The ProDOS data will not be touched.

⇒ Enter Y to format.

11. Once you've configured the hard disk and run FDISK and FORMAT, your ProDOS hard disk (or 3.5" disk) is ready to have MS-DOS files copied to and run from it.

---

### Boot the Entire PC Transporter System from a Single ProDOS Disk

Once you have created a hard disk volume, you can set up your hard disk as the boot device for both ProDOS and MS-DOS. This will save you from having to load an MS-DOS system disk into a drive every time you boot the *Transporter*. In fact, you could run MS-DOS without any drives connected to the *PC Transporter* drive connector.

In order to boot MS-DOS programs from the hard disk volume, you will of course need to copy the MS-DOS system files required to boot any MS-DOS disk to the hard volume. You can copy these from your MS-DOS boot disk. Make sure that these files include the AEPC system files you need for your particular setup.

To free up space on your hard disk, you can take many of the MS-DOS files and put them on a separate utilities disk and access that disk only when necessary. An example of a useable MS-DOS system disk is:

```
COMMAND.COM
ANSI.SYS
AUTOEXEC.BAT
MSMOUSE.SYS
CONFIG.SYS
APLCLOCK.EXE (from the AEPC directory)
```

This system supports the clock (APLCLOCK), the mouse (MSMOUSE.SYS), and color (ANSI.SYS).

Your ProDOS hard disk is probably already setup to boot ProDOS. If not, set it up according to the hard disk manual.

If you have created a hard disk volume on a 3.5" disk, you should already have the ProDOS files copied over to it (refer to "3.5 ProDOS Disks as Hard Disk Volumes" above). Set up the disk drive that contains the 3.5 disk as your boot drive.

Now try booting from the drive.

If you still have drives connected to the *Transporter's* drive connector, when you boot from the hard drive (or the 3.5 drive), PC Transporter will look for MS-DOS in drive A:. If you simply remove the disk in drive A: before booting, it will then look for it in your hard disk. If you have copied the MS-DOS system files correctly, it will proceed to boot MS-DOS from the hard drive volume.

---

### **Using the Hard Disk Volume to Boot Other *Transporter* Systems**

You can use the hard disk volume you have created on one computer to boot other computers that have no drives connected to the *PC Transporter* drive controller.

Those involved in computer classroom settings may find this particularly useful. A room full of Apple computers, each with only a ProDOS drive and a *PC Transporter*, could be set up to run MS-DOS.

The ProDOS drive can be a hard drive, an Apple 3.5 Drive, a UniDisk, a RamFactor with RamCharger, or a GS-RAM with RamKeeper.

For our example, we'll use a classroom with Apple computers, each with *PC Transporters* installed and each with one 3.5 drive connected to the Apple drive controller.

All you would need to do is make a 3.5" hard drive volume as described in the steps above. This will be your "master" volume. Use ProDOS to make copies of this 3.5" disk for each of the other computers. You can then run the other computers with the 3.5 disk as their only disk. (Remember that removing this 3.5" disk is like switching hard disks. The system must be rebooted.)



- ❖ *Note:* For legality, you will need to have purchased a copy of an MS-DOS system disk for each of the computers or have a site license.

---

## Hard Drive Trouble Shooting

### Cannot access hard drive:

If you get the message:

Invalid Drive Specification

- ❖ Check the *PC Transporter* control panel to make sure that your hard disk has the correct name and is ON. If you didn't save the configuration to the hard disk volume you've created, the hard disk will be OFF. Turn it on by selecting it in the Assign Disk Drives menu, Save Configuration, then Reboot and Run PC Transporter.
- ❖ Did you run FDISK? If not, run it to enable MS-DOS to recognize your "fixed disk." You will then need to FORMAT if you want to boot MS-DOS from this disk.

### If your computer won't initially boot ProDOS:

- ❖ Make sure that your hard disk (or 3.5 disk) has all the ProDOS system files required to boot.
- ❖ Is your hard disk (or 3.5 drive) set as the boot drive? Check it in the IIGS Control Panel under the Slots option.

### Stops at DISK READ ERROR:

- ❖ Check the *PC Transporter* control panel to make sure that your hard disk has the correct name and is ON. If you didn't Save Configuration to the hard disk volume you have created, the hard disk will be OFF. Turn it on by selecting it in the Assign Disk Drives menu, Save Configuration, then Reboot and Run PC Transporter.
- ❖ If you have a drive A: connected, make sure that there is not a disk in it. MS-DOS will always check the A: drive first. If it finds something there and can't read it, it will stop looking. If it finds nothing in A: it will look in the hard disk.



### **If MS-DOS won't boot from the hard drive:**

- ◇ Check the *PC Transporter* control panel to make sure that your hard disk has the correct name and is ON. If you didn't save the configuration to the hard disk volume you've created, the hard disk will be OFF. Turn it on by selecting it in the Assign Disk Drives menu, Save Configuration, then Reboot and Run PC Transporter.
  - ◇ Did you FORMAT using C:/S/V? If you forgot the /S then the invisible system files were not transferred and the system can't boot. You'll probably get the message, "Missing operating system."
-



# CHAPTER Nine

---

---

## *Printers and Other Hardware*

This chapter discusses the other kinds of devices that you can use with *PC Transporter*, such as printers, modems, and mice (or mouses).

This hardware is grouped together in this chapter because all of these pieces of hardware will work in much the same manner with *PC Transporter* as they have with your Apple II programs.

The chapter is divided into three sections: *Printers*, *Serial Devices*, and *Mouse(s)*. Each section includes Control Panel configuration instructions.

---

---

## Printers

Using your printer with *PC Transporter* is quite straightforward. Your printer must be useable by the Apple under ProDOS in order for *PC Transporter* to be able to use it. For the purposes of this discussion, such printers are divided into two categories:

- ❑ Universal printers, such as those from Epson, Okidata, Diablo, and so on.
- ❑ Apple-brand printers and compatibles, such as the Apple Dot Matrix Printer, Apple ImageWriter, Apple ImageWriter II, and so on.

---

### Universal Printers

The term “universal” is used here because most Apple-compatible printers are also PC-compatible. The popular Apple-compatible printers from companies such as Epson, Okidata, Diablo and others are equally popular in the PC world. Other than possible differences in interfaces, the printers are identical.

- ❖ *Note:* The differences in interfaces, as you'll soon see, are not a problem.

---

### Apple Printers and Compatibles

This category of printers includes the Apple Dot Matrix Printer, Apple ImageWriter, Apple ImageWriter II, and third-party printers which are compatible with these printers. A printer's documentation will state whether or not it's Apple ImageWriter compatible. This means that software that can print graphics, bold text, superscripts, subscripts, etc. both to this printer and to an ImageWriter.

---

### Printer Configuration

In most cases, printer configuration will be taken care of during the automatic configuration process. In the event that the printer driver for your printer was not installed during AUTO-CONFIGURATION, follow the steps below.

### **For Universal Printers**

- Step 1: Load the appropriate Control Panel driver for your printer's interface card.
- Step 2: Configure the driver.
- Step 3: Configure your PC software.

These steps are detailed in the following sections.

### **For Apple Printers**

The steps to configure an Apple printer are the same as those for a universal printer with one additional step. The process is:

- Step 1: Load the appropriate Control Panel driver for your printer's interface card.
- Step 2: Configure the driver.
- Step 2A: Load the IW2EMUL driver.
- Step 3: Configure your PC software for the *IBM Graphics Printer*.

These steps are detailed in the following sections.

The purpose of the additional step is to load the translation program that makes the Apple printers behave like an IBM Graphics Printer. The reason for this is that virtually no PC programs directly support Apple printers. (Before *PC Transporter* there was no need to.)

In the unlikely event that you have a program that *does* support the Apple printers, you can follow the configuration steps for a universal printer and configure your printer using your PC program.

---

### **Printer Drivers**

*PC Transporter* comes with drivers for most Apple interface cards. The cards and their driver filenames are listed in the *Appendices*.

The driver files listed in the *Appendices* are all located in the ProDOS directory AEPC.DRIVERS on the *PC Transporter* boot disk.

Except where noted in the configuration steps, the instructions apply to all of these interface cards, as well as the printers connected to them. (The exception is Apple's printer as noted above.)

### Serial or Parallel?

With the Apple Super Serial Card and compatibles, you have the option of configuring the card as either an MS-DOS *serial* port or a MS-DOS *parallel* port. The decision on which to use depends mainly on your PC software. In general, MS-DOS and PC programs expect to print using a MS-DOS device called "LPT1", which is parallel port #1 in a PC-compatible system. To maintain maximum compatibility with MS-DOS and PC programs, if you have an Apple Super Serial Card, you should use the SSCLPT1 driver file to configure your serial printer as a MS-DOS parallel printer.

By convention, the cards that can be configured either way have two driver files. They are named as shown in the following example (Apple Super Serial Card):

ProDOS filename	Driver for...
SSCCOM1	Apple Super Serial Card (MS-DOS <i>serial</i> port)
SSCLPT1	Apple Super Serial Card (MS-DOS <i>parallel</i> port)

Driver filenames end with LPT1 in the case of parallel drivers and COMn for serial drivers.

Parallel interface cards must be configured as an MS-DOS parallel port (LPT1). You can't use them as an MS-DOS serial port.

- ❖ *Note:* Don't make any changes to the way you use your printer with Apple II programs. *PC Transporter's* changes are all made in the Portware file and do not affect the Apple II hardware at all.

### Step 1: Load the Device Driver

To load the driver for your printer's interface card:

1. Get to the Control Panel main menu

If you are in ProDOS, run the AEPC.SYSTEM program and hold down the spacebar until the Control Panel appears.

If you are in DOS, hold down **Shift** and press **Caps Lock** twice

2. Choose **Configure Devices** from the main menu.
3. Choose **Load Device Driver** from the main menu.

The following menu appears:

```
Load Device Driver

Driver Load Selection

F. Specify Driver File
D. Specify Driver Directory

Current directory: /AEPC/AEPC.DRIVERS
1. SSCCOM1
2. PICLPT1           Currently Loaded Drivers
3. SSCLPT1
4. IW2EMUL          SSC: COM1 Handler
5. GSLPT1           ImageWriter II: Graphics

N. NEXT SET OF DRIVER FILES
```

Your printer interface card's driver file should be one of the numbered choices in the lower part of the screen.

4. Type the number listed next to the card's driver file, then press **Return** or, if you don't see the driver you need, type N, then press **Return** to show you more driver files in the directory.

After a moment of disk access while the Control Panel reads the file into memory, the following prompt appears at the bottom of the screen (the name listed beneath the prompt will be the name of the driver you specified):

```
What Slot Number should this driver be assigned to? _
Load Device Driver.../AEPC/AEPC.DRIVERS/SSCCOM1
```

5. Type the slot number in which your printer interface card is installed.

In most Apple II systems, this is either slot 1 or slot 2.



The IIGS has two built-in serial interface ports, a phone (modem) port and a printer port (look at the small icons directly above the actual connectors on the backplane of the IIGS). The printer port is considered slot 1 and the phone port is slot 2. For step 5, choose the port to which your printer is connected. Make sure, however, that the IIGS Control Panel slot settings are set to the built-in printer port for slot 1 and the built-in serial port for slot 2 if you wish to use these drivers.

### **Step 2: Configure the Driver**

There are no configuration options for a parallel printer driver. The serial communication parameters are automatically set to those found on the interface card's switch settings. This is because (it is assumed) your printer functions properly with other ProDOS applications already. If you change any settings from your current ones, your printer would cease to function properly.

### **Step 2A: Apple Printer Configuration - the Additional Step**

If you have an Apple ImageWriter or compatible printer, you should install a special driver after you have finished the above process. The IW2EMUL driver translates the MS-DOS software's printer output into a format compatible with the ImageWriter.

To use this driver:

1. Use the Control Panel's Load driver menu to load the driver file named IW2EMUL.
2. Assign it to the slot containing your printer's interface card.

There are no configuration options for the driver, so it is now installed.

### **Step 3: Configure Your PC Software**

Locate your printer in the list of supported printers for each PC program and configure that program accordingly. If your printer isn't directly supported by a PC program, consult your printer's documentation and try to determine if your printer emulates (mimics) a supported printer. If not, you may only be able to print plain text documents, without effects such as underlining or boldface, and without graphic output.



If your printer is ImageWriter compatible, follow the instructions above for loading the printer translation driver, then configure your PC software for an *IBM Graphics Printer*. This way you can print text and graphics with any program that supports output to the *IBM Graphics Printer*.

---



---

---

## Serial Devices

Other serial devices, such as a modem or a serial connection to another computer, can be used with *PC Transporter* and is configured in much the same way as a printer is configured.

To use a serial device, you will need to do the following:


- Load a device driver file to handle the port
- Configure the driver
- Configure your PC software to communicate with that serial port (COMn)

### Step 1: Load a Device Driver

To load the driver for your serial interface card:

1. Get to the Control Panel main menu
2. Choose `Configure Devices` from the main menu.
3. Choose `Load Device Driver` from the main menu.

Your serial interface card's driver file should be one of the numbered choices in the lower part of the menu.

4. Type the number listed next to the card's driver file, then press .

The following prompt appears at the bottom of the screen (the name listed beneath the prompt will be the name of the driver you specified):

```
What Slot Number should this driver be assigned to? _  
Load Device Driver.../AEPC/AEPC.DRIVERS/SSCCOM1
```

5. Type the slot number in which your serial interface card is installed.

In most Apple II systems, this is either slot 1 or slot 2.



 
The IIGS has two built-in serial interface ports, a phone (modem) port and a printer port (look at the small icons directly above the actual connectors on the backplane of the IIGS). The printer port is considered slot 1 and the phone port is slot 2. Type the number of the port which you plan to use for serial communication. Make sure, however, the the IIGS Control Panel slot settings are selecting the built-in printer port for slot 1 and the built-in serial port for slot 2 if you wish to use these drivers.

### Step 2: Configure the Driver

Now that the driver is loaded, you can alter the default configuration of the driver. You may want to override the card's switch settings describing the characteristics of the interface for a special application.

- ❖ *Note:* There is little reason for changing the default configuration. You'll probably want to leave it set to its default setting, which uses the switch settings on the serial interface card.

To reconfigure a serial driver:

1. Get to the Control Panel main menu
2. Choose `Configure Devices` from the main menu.
3. Choose `Assign/Configure Devices` from the main menu.
4. Type the number of the driver that you want to configure, then press .

The menu that appears at this point depends upon the driver that you have chosen. As an example, the menu for the Apple Super Serial Card is shown below.

```
Line Control Menu

Current Select = Use Settings From Control Panel

S. Use Switch Settings
L. Use Settings From 8086
C. Use Settings From Control Panel

Control Panel Settings
B. Set Baud Rate - 1200 Baud
D. Set Data Length and Stop Bits - 8 Data Bits, 1 Stop Bit
P. Set Parity - NONE
```

5. Use this menu to select the desired options.

If you have been using the serial port with other ProDOS applications, you should leave the Configuration Settings at

```
S. Use Switch Settings
```

This instructs the Control Panel to handle the translation of speeds transparently between *PC Transporter* and the Apple hardware.

If you have some other configuration needs, use this menu to set the options accordingly.

❖ *Tip:* If you are communicating from one computer to another and want to be able to easily adjust the transmission speed, you could choose

```
C. Use Settings From Control Panel
```

to allow you to quickly make changes to the speed. You could set your PC program to go at a high speed (19,200 Baud for example), then use the Control Panel to make adjustments to the serial interface until you attain acceptable performance.

**Step 3: Configure your PC software**

Configure your PC software to communicate with the serial port you have selected (COM1 or COM2). COM1 is typically the default for PC applications.

---

## Mouse(s)

Many Apple II's have a mouse connected to their system. *PC Transporter* is able to provide PC programs with access to that mouse.

Unfortunately, there is a decided lack of standardization in the MS-DOS world concerning mice. The closest ones to "standard" are the Mouse Systems Mouse--(MSC), and the Microsoft Mouse. *PC Transporter* lets your Apple mouse emulate both of these.

### Mouse Systems Mouse Copyright

The Mouse Systems Mouse program is licensed to Applied Engineering by Mouse Systems Corporation whose copyright states:

The program is copyrighted by Mouse Systems Corporation ("MSC") which makes no warranty to you regarding the program...Making copies or derivative works, except in certain limited instances and except for making copies or adaptations of MSC software for archival purposes or as an essential step in the utilization of the computer program in conjunction with a machine, without prior written authorization from MSC is prohibited by copyright law and constitutes a punishable violation of such law.

The mouse drivers use a two part configuration:


Step 1: Load and configure the *PC Transporter* device driver.

Step 2: Copy the MS-DOS driver for the mouse onto each of your MS-DOS boot disks.

Some applications require that the mouse driver be a .COM file located in the root directory of your boot disk while others require the driver to be a .SYS file installed in the CONFIG.SYS file of your boot disk.

The chart following shows the options you have for both the Mouse Systems Mouse (MSC) and the MicroSoft Mouse.

- ❖ *Note:* The MicroSoft Mouse and the Mouse Systems Mouse use different drivers. The drivers for the Mouse Systems Mouse are included on the *PC Transporter* distribution disk in the MSDOSVOL file while the MicroSoft Mouse driver must be obtained elsewhere.

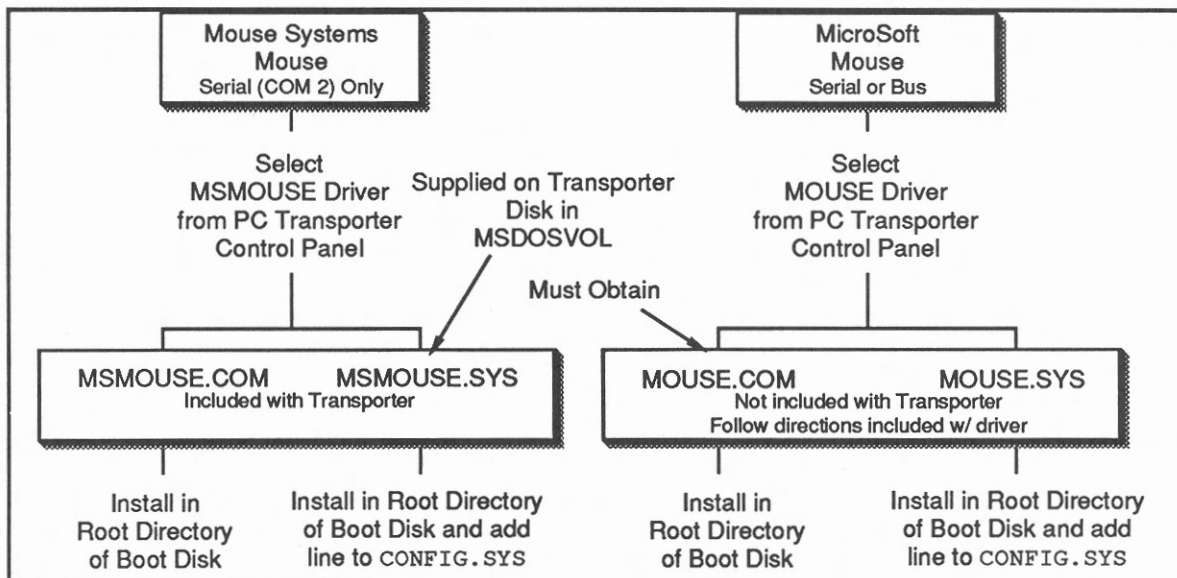

### Mouse Options

Once you have loaded and copied the drivers, any programs that you use which support the Mouse Systems Mouse or the Microsoft Mouse will be able to use your Apple's mouse.

#### Step 1: Load a Device Driver

To load the driver for your serial interface card:

1. Get to the Control Panel main menu
2. Choose Configure Drivers from the main menu.
3. Choose Load Device Driver from the Configure Devices menu. A menu much like the one below will appear.

```

Load Device Driver


Driver Load Selection

F. Specify Driver File
D. Specify Driver Directory

Current directory: /AEPC/AEPC.DRIVERS
1. SSCOM1
2. PICLPT1           Currently Loaded Drivers
3. SSCLPT1
4. IW2EMUL          Apple Mouse: MSC Com2 Mouse Driver V--
5. GSLPT1

N. NEXT SET OF DRIVER FILES
  
```

Automatic Configuration may have already loaded the MSC driver for you as shown in the previous menu. If you want to emulate the MSC mouse, and its driver is already loaded as shown above, then you can go on to Step 2. If not:

4. Type the number listed next to the driver file called MOUSE for MicroSoft Mouse emulation or MOUSECOM for Mouse Systems Mouse emulation, then press .

The following prompt appears at the bottom of the screen (the name listed after AEPC.DRIVERS will be the name of the driver you specified):

```
What Slot Number should this driver be assigned to? _  
Load Device Driver.../AEPC/AEPC.DRIVERS/MOUSE(COM)
```

5. Type the slot number in which your mouse interface card is installed.



The IIGS has a built-in mouse interface port. This port is set to slot 4 via the IIGS Control Panel.

6. Check the Currently Loaded Drivers. The MSC mouse driver will appear as:

```
Apple Mouse: MSC Com2 Mouse Driver V--."
```

The MicroSoft Mouse driver will be listed as:

```
Apple Mouse: Bus Mouse Driver V--."
```

7. Select Save Configuration from the main menu.

### Step 2: Copy the MS-DOS Mouse Driver

Some drivers, such as the mouse drivers, can only be installed into MS-DOS at boot time. A program may require that your mouse driver be a .SYS file added to the CONFIG.SYS file and located in the boot disk's root directory or it may expect to find a .COM file in the root directory. If your application doesn't specify, add the .COM driver to your boot disk's root directory. Then, if the application can't find the mouse, try copying the .SYS driver into the root directory and add the necessary line to your CONFIG.SYS file.



To copy the drivers to your MS-DOS boot disk(s):

1. Boot *PC Transporter* past the Control Panel and into MS-DOS.
2. Use the MS-DOS command `COPY` to copy the mouse driver to the root directory of each MS-DOS boot disks that you wish to use the Apple mouse with.

See Chapter Six - *MS-DOS Reference* for instructions on using the `COPY` command.

3. If you're using the `.SYS` driver, add the command `DEVICE=MSMOUSE.SYS /2` to your `CONFIG.SYS` file on the boot disk using any ASCII editor (such as `EDLIN`).

❖ *Note:* You must include the `/2` for the *Transporter* to find the mouse in the proper location.

See Chapter Six - *MS-DOS Reference* for further information on copying files and adding commands to your `CONFIG.SYS` file.

MS-DOS and *PC Transporter* will now load the mouse driver at boot time.

### **Loading the Mouse Driver Without Copying to Program Disk**

If you did not install the mouse driver onto your program or setup diskette, you can activate the mouse by following these steps:





1. Insert the `/AEPC` disk in your A drive (with A as your current drive).
2. Enter, `MSMOUSE /2` at the prompt: `A>MSMOUSE /2`
3. Remove the `/AEPC` disk from drive A: and replace it with the program disk.
4. Type in the proper command to boot the application you want to run. You may need to configure your application to use the Mouse Systems Mouse. Follow the publisher's directions for this. If the software doesn't support this mouse, you'll need to purchase the MicroSoft Mouse drivers.


### **Translating Button Presses**

To use the Apple's mouse like a PC mouse, you will need to know the "button press translation" following:







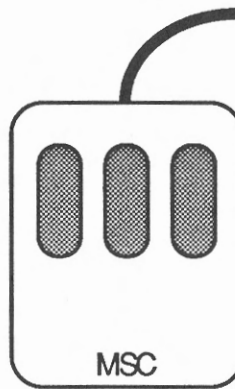



**Microsoft Mouse**

- Left Mouse button = Apple Mouse button  
or Apple Mouse button - 
- Right Mouse button = Apple Mouse button - 
- Both Mouse buttons = Apple Mouse button -  - 



**Mouse Systems Mouse**

- Left Mouse button = Apple Mouse button  
or Apple Mouse button - 
- Middle Mouse button = Apple Mouse button - 
- Right Mouse button = Apple Mouse button - 
- Both Mouse buttons = Apple Mouse button -  - 
- Combinations = Apple Mouse button - , ,  
 in various combinations.

# APPENDICES

The following appendices are included for further reference and reading enjoyment:

- A** -- Apple Interface Cards Supported
- B** -- *PC Transporter* File Types Under ProDOS
- C** -- MS-DOS Utilities
- D** -- AppleWorks and *PC Transporter*
- E** -- A Brief ProDOS Tutorial
- F** -- Getting Help

# Appendix A

## Apple Interface Cards Supported

The following is a list of the interface cards that have been tested and are functional with *PC Transporter*. These cards use the drivers listed along with them in the table to perform the desired functions in the *PC Transporter* system.

ProDOS filename	Driver for...
SSCCOM1 SSCCOM2 SSCLPT1	Apple Super Serial Card
PICLPT1	Apple Universal Parallel Interface Card (UPIC)
ACCCOM1 ACCCOM2	Apple Communications Card
MOUSE MOUSECOM	MicroSoft Mouse Mouse Systems Mouse
GRAPHLPT1	Applied Engineering Parallel Pro Practical Peripherals GraphiCard
SSCCOM1 SSCCOM2 SSCLPT1	Applied Engineering Serial Pro
SSCCOM1 SSCCOM2	Applied Engineering DataLink Modem
GRAPPLPT1	Orange Micro's Grappler +

ProDOS filename	Driver for...
SSCCOM1 SSCCOM2 SSCLPT1 PICLPT1	Street Electronics Business Card
SSCCOM1 SSCLPT1	Serial Grappler (Apple SSC-compatible)
GSCOM1 GSCOM2 GSLPT1	Apple IIGS Built-in Serial Port 1
GSCOM1 GSCOM2 GSLPT1	Apple IIGS Built-in Serial Port 2

Drivers whose name ends with COM1 emulate the COM1 : port on a PC-compatible. Drivers whose name ends with COM2 emulate the COM2 : port on a PC-compatible. Drivers whose name ends with LPT1 emulate the LPT1 : port on a PC-compatible.

# Appendix B

## PC Transporter File Types Under ProDOS

The following ProDOS file types have been defined for use with *PC Transporter* system files. These file types have been registered with Apple Computer, Inc. and are reserved for the exclusive use with the *PC Transporter* system.

Code	Abbrev.	File Type
\$60	PRE	ProDOS pre-boot driver
\$61 - \$6A	none	Reserved (undefined)
\$6B	BIO	<i>PC Transporter</i> BIOS and drivers
\$6C	none	Reserved (undefined)
\$6D	DVR	<i>PC Transporter</i> device drivers
\$6E	none	Reserved
\$6F	HDV	MS-DOS hard disk volume/file

The pre-boot drivers are the floppy disk and RAMDisk drivers that enable ProDOS and other applications to access *PC Transporter's* disk drives and RAMDisk. These are loaded prior to loading ProDOS and are then available to ProDOS.

The *PC Transporter* BIOS and driver file type is for the BIOS code that is loaded into the *PC Transporter* RAM when *PC Transporter* itself is booted. The drivers are drivers configured or created by the Control Panel.

The *PC Transporter* device drivers are the portware drives complete with relocation information. These have not been loaded by the Portware and so have not been configured by the Control Panel.

The MS-DOS hard disk volume/file is named MSDOSVOL unless otherwise specified by the Control Panel. This file normally resides on a hard disk but *can* exist on any ProDOS volume.

For further information regarding these files and their functions, refer to Chapter Five - *PC Transporter Software Reference*.

# Appendix C

## MS-DOS Utilities

The following utilities are supplied on the MSDOSVOL. They are used to enhance the operation of the basic system. These are MS-DOS programs, unlike the ProDOS utilities, are run on *PC Transporter*, not on the Apple II. The utilities enable *PC Transporter* to do things that are unique to its dual processor nature. These programs run under any version of MS-DOS but are not useful on any system other than *PC Transporter*.

❖ *Note:* For the latest information on files included in MSDOSVOL, enter `TYPE READ.ME` at the MS-DOS system prompt (e.g. `A>TYPE READ.ME`).

`APLCLOCK.COM`

This program sets the MS-DOS real time clock. It has ProDOS read the time from any ProDOS compatible clock present in the Apple II system, and then sets the MS-DOS clock with this time.

To use this function, you must have a ProDOS compatible clock present. The IIGS clock is a compatible clock if you have ProDOS Version 1.2 or later (also known as ProDOS 8). The most common and useful way to call this program is from the `AUTOEXEC.BAT` file when *PC Transporter* is first booted.

For more information regarding running programs under MS-DOS and the use of the `AUTOEXEC.BAT` file, please refer to Chapter Six - *MS-DOS Reference*.

`TRANSFER.EXE`

This program is a file transfer utility. It's special because it copies files across the ProDOS/MS-DOS boundary. It can copy a file from a ProDOS directory to an MS-DOS directory or from an MS-DOS directory to a ProDOS directory. This is useful if you wish to use data files with applications running under either operating system.



The program can be called in either of two ways. The first is to provide source and destination pathnames on the same command line when calling the program. This runs the program, transfers the file, and then quits the program.

The second way is to call the program by itself. When you do this, the program presents menus to guide the user through the file transfer. This is the recommended way until you become familiar with the operation of the program.

One of the menus is a HELP menu. This presents a complete explanation of how to use the utility. To learn more about the program, run the program and select HELP from the menus.

For more information regarding running programs under MS-DOS, please refer to Chapter Six - *MS-DOS Reference*.

TRANSFER.HLP

This is a data file that is used by the HELP command in the TRANSFER program discussed above. This file must be present in order to use the HELP command but can be removed if necessary to allow more room on the disk.

LAUNCHER.EXE

This program, like APLCLOCK is also useful at boot time. It fetches a pathname from *PC Transporter's* memory, and if one exists, launches or starts the MS-DOS program named in that pathname. The pathname is placed in the RAM before *PC Transporter* is booted. This mechanism allows you to select an MS-DOS application from a ProDOS program selector such as *Catalyst*, boot *PC Transporter*, and start that application without any user interaction.

To use this program, you simply place its name in the AUTOEXEC.BAT file. If a pathname is given to it, the specified application will be started by LAUNCHER. If no pathname exists, LAUNCHER will terminate.

For more information regarding running programs under MS-DOS, please refer to Chapter Six - *MS-DOS Reference*.

MSMOUSE.SYS

This is the portion of code that runs under MS-DOS to enable your Apple Mouse (either expansion slot or desktop bus) to emulate the MicroSoft Bus Mouse. MS-DOS needs to know how to talk to the Mouse Systems Mouse and this code provides that ability. The following steps are necessary to use your mouse with your MS-DOS application. Also, your MS-DOS application must be specifically designed to support the mouse.

Follow the directions in the section, *Mouse(s)* (p. 170), to load the proper mouse driver.

---

# Appendix D

---

---

## AppleWorks and *PC Transporter*

---

---

### Transporter Memory as AppleWorks Desktop

You can use *PC Transporter's* memory (RAMAEP C) as expanded desktop for AppleWorks® version 2.0 on the //e and IIGS. AppleWorks version 1.3 will also recognize the *Transporter* memory in a //e.

To use the *Transporter's* memory as desktop space, you must load the *Transporter's* device drivers onto the ProDOS disk from which you are booting AppleWorks. Use the PCINSTALL program (described below) to load the device drivers.

If you have other memory cards in your computer, you'll need to know the priority AppleWorks gives to these cards. AppleWorks will first look for a card in the Memory Expansion slot (Auxiliary Slot on a //e). If there is not one there, it will start at slot 1 and look in each successive slot for either a RamFactor or the *PC Transporter*. If you have both a RamFactor and a *Transporter*, it will use the one in the lowest slot for the desktop.

- ❖ *Remember:* If you don't have the *Transporter's* device drivers loaded into ProDOS, AppleWorks will not recognize the RAMAEP C as additional ProDOS memory.

Follow these steps to install the drivers included in the AEPC.DISKS file onto your ProDOS boot disk:

- ❖ *Note:* ProDOS must be unlocked for PCINSTALL to function properly. Use System Utilities to make sure that the ProDOS file is unlocked.
1. Run PCINSTALL; (from BASIC ()), enter -PCINSTALL).
  2. Press P when the PCINSTALL menu is on the screen, then enter the pathname of the ProDOS disk you want to modify (e.g. /CHUCKS.DISK/PRODOS).

- ❖ *Note:* Make this modification to the file called, "ProDOS," not the "P8" or "P16" files.
- 3. Press **D** to set the pathname of the disk containing the drivers (e.g. /AEPC/AEPC.DISKS is the name of the drivers file included with *PC Transporter*).
- 4. Press **A** to Add drivers to your ProDOS disk.
- 5. Press **W** to Write the drivers to the ProDOS file and replace the original ProDOS with the modified ProDOS.
- 6. Press **Q** to Quit the **INSTALL** program.
- ❖ *Note:* If you notice a file on your modified disk called, "PRODOT" after running **PCINSTALL**, then your ProDOS file (PRODOS) was locked. PRODOT is the actual modified PRODOS file. You need to delete the PRODOS file, and rename the PRODOT file PRODOS.

The drivers are now added to your ProDOS disk and AppleWorks can use the RAMAEPC to expand the desktop.

To remove the drivers from the ProDOS file, you must copy an unmodified ProDOS file to that diskette using the ProDOS System Utilities or other copy program. This will replace the ProDOS that was modified to include the drivers.

Now you're ready to enhance AppleWorks with the AW 2 Expander software. Refer to the AW 2 Expander User's Manual included with the *PC Transporter* package.

---

# Appendix E

## **A Brief ProDOS Tutorial**

This is a brief explanation of the **Professional Disk Operating System, ProDOS**, for those who are completely new to it. All of this information and more is included in your *Apple Owner's Guide*, but we have provided it here for your convenience.

### **Operating System**

ProDOS is one of several operating systems for the Apple. Others include DOS 3.3 and Pascal. Operating systems, as defined in the *Apple Owner's Guides*, are programs that control how information is loaded into memory, how the computer handles the information, how the information is stored, and how the computer communicates with the printer and other peripherals.

### **Naming Volumes**

ProDOS must have a way to locate which disk (often called "volume") you want to access. Instead of typing in the location of the disk as in DOS 3.3 (ex: S6,D1), you simply type in the name of the disk (the volume name). Some rules for volume names are

- 1) Name can include letters, numbers, or periods but not spaces
- 2) Name must begin with a letter
- 3) Name can be up to 15 characters long

These rules also hold true for subdirectory names.

### **Root Directory and Subdirectory**

The main directory of the volume is called the root directory. The root directory uses the same name as your disk. Subdirectories are ProDOS' way of organizing information on a storage device.


Think of the root directory as a file drawer and the subdirectories as folders within the drawer. You can

- 1) Put files directly into the root directory like putting documents straight into the file drawer

- 2) Put files within subdirectories like putting documents in folders
- 3) Put subdirectories within subdirectories like putting folders within folders.

### Pathname

The name of the directory combined with the names of one or more subdirectories is called a pathname. Volume names and subdirectory names are preceded by a slash, "/". (Note that some applications add the slash for you.) For example, you could have a volume named /MY.DISK and a file called MY.FILE on the root directory of that disk. To access that file, you would use the pathname /MY.DISK/MY.FILE. You could also have a file JUL.AUG in a subdirectory (folder) called PHONE on a disk called /BILLS. To access that file, you would use the pathname /BILLS/PHONE/JUL.DEC. Refer to the diagram below.

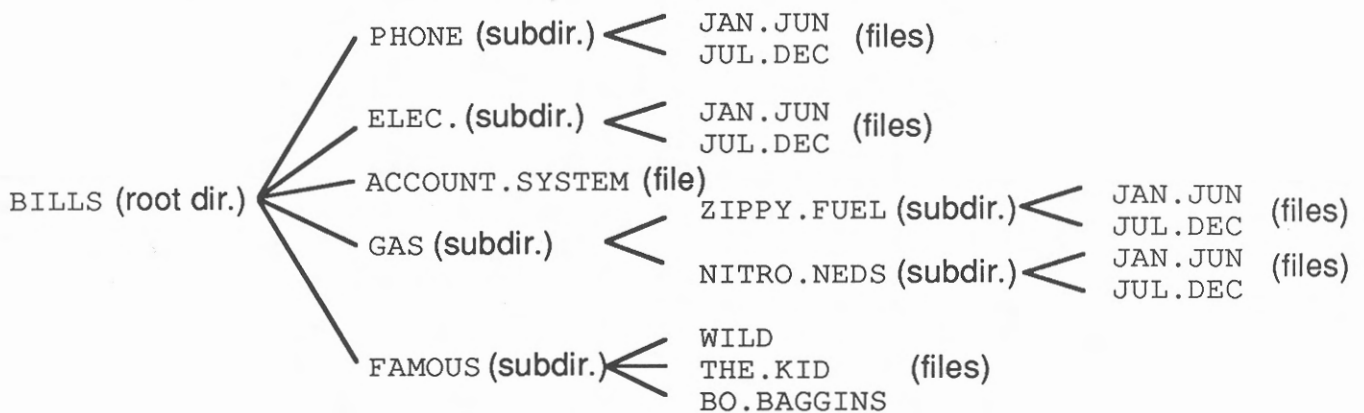

### ProDOS Directory Structure

Now when an application asks you for the pathname of a file, you'll have a basic understanding of what it expects.

### System Files

A system file is a ProDOS file that starts an application. Typically, these files have the suffix .SYSTEM (e.g. /APLWORKS.SYSTEM, /ACCOUNT.SYSTEM [see above], etc.). When you boot ProDOS, it runs the first system file listed in its directory. So, if BASIC.SYSTEM is the first system file on your ProDOS boot disk, ProDOS will boot and then put you in BASIC.

### **Additional Resources**

The following books are available through most book stores:

**Apple II Owner's Manual** (Apple Computer, Inc.) Supplied with your Apple Computer. Take the time to read it.

**Basic Programming with ProDOS** (Addison-Wesley Publishing) Gives a detailed explanation of how to use ProDOS from AppleSoft Basic.

**Beneath Apple ProDOS** (Quality Software) Provides information about ProDOS for both the novice Apple user and the advanced programmer.

**ProDOS Inside and Out** (TAB Books) Very good book for both the beginning and advanced BASIC Programmer.

**ProDOS User's Manual** (Apple Computer, Inc.) Provides an overview of ProDOS and explains how to use the ProDOS User's Disk.

---

# Appendix F

## Getting Help

If you have a technical question about your *PC Transporter* card or any other Applied Engineering product that is not covered in the manual, please contact the dealer from whom you purchased the product. If you are experiencing difficulties with one particular program, contact the program's author or publisher.

In the event that the dealer or the publisher's support personnel cannot answer your question, call Applied Engineering Technical Support. The support representatives are experienced in the applications and uses of Applied Engineering products, but in order to provide a quick and effective answer to your question, they will need to know as much as possible about the hardware and software specifically related to your question. Please provide the technical support representative with the following information:

- ◇ The Applied Engineering product related to your question and its revision number.
- ◇ The original and current memory configuration of the card (if applicable).
- ◇ The model and revision of your computer.
- ◇ What peripherals are being used and what cards are in each slot.
- ◇ The name, version, and revision level of the software with which you are experiencing problems.
- ◇ The results of any test programs, diagnostics, or troubleshooting done by you, your dealer, or your software publisher's support department.

**Applied Engineering  
Technical Support  
(214) 241-6069**

**9 AM to 12:30 PM & 1:35 PM to 5 PM(CST)  
Monday Through Friday**

(Please call only the number above for technical support. Our sales office cannot transfer calls to the support lines.)



## Returning a Product

### RMA Number , "Attention" Sheet, and Invoice

If your product needs to be returned, the technical support representative will give you a Return Material Authorization (RMA) number.

- Record the RMA number for your own records.
- Write the RMA number on your package label.
- Fill out the Return Form on back of the yellow sheet marked "Attention!" A complete form will greatly reduce the time it takes to return your package.
- Attach a copy of your original invoice to the form.
- ❖ **Warning:** If you don't include an invoice, products will be treated as out of warranty products and returned to you C.O.D. for the amount of the service charge.

A completed form should look something like the one below.

Invoice

Return Address: Mrs. Regan Blair  
Morphose Cr.  
Alter, EG 67676

↑ All out and leave attached

If you should ever have to return your /E product for repair, please complete this form and attach a copy of your original invoice.

RMA Number 905-905

<b>Computer:</b> <input type="checkbox"/> II <input type="checkbox"/> II Plus <input type="checkbox"/> IIc <input type="checkbox"/> IIc Non-Enhanced <input type="checkbox"/> IIe Enhanced <input checked="" type="checkbox"/> IIGS ROM# <u>01</u> <input type="checkbox"/> Other (list) _____	<b>Peripherals:</b> <input type="checkbox"/> Monitor <u>Sony</u> <input checked="" type="checkbox"/> Printer <u>ImageWriter 1</u> <input checked="" type="checkbox"/> Modem <u>Datalink 2400</u> <input type="checkbox"/> Other (list) <u>Apple 3.5</u> <u>TransDrive</u>
---	--

<b>GS/Slot Settings</b>	
1: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Printer	1: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Modem
2: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Disk	2: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Mouse
3: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Smart	3: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Disk
4: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Disk	4: <input type="checkbox"/> Your <input checked="" type="checkbox"/> A-Talk
5: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Disk	5: <input type="checkbox"/> Your <input checked="" type="checkbox"/> A-Talk
6: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Disk	6: <input type="checkbox"/> Your <input checked="" type="checkbox"/> A-Talk
7: <input type="checkbox"/> Your <input checked="" type="checkbox"/> Disk	7: <input type="checkbox"/> Your <input checked="" type="checkbox"/> A-Talk
Startup: _____	

Slot 0 (I Plus): _____	Slot 5: _____
Slot 1: _____	Slot 6: <u>Transporter</u>
Slot 2: <u>Datalink 2400</u>	Slot 7: _____
Slot 3: _____	Aux. Slot (I/e): _____
Slot 4: <u>RamFactor</u>	Mem. Exp. (IIGS) <u>RamKeeper</u>

**Symptoms:** My DCT RAM disk has named itself Sybil and won't let me rename it. However, it will sometimes rename itself. I've also noticed that the MS-DOS drives will only work when placed on the left side of the CPU and the Apple drives will only work on the right.

**Description of Software (name, version number, any enhancements, etc.):**  
My draw/paint programs (Rorschach Draw/Paint 0.0 and Frehand Freud 9.6) will display only strange pictures of cats and large inkblot looking things (one of them looks a lot like my best friend's wife).

**Steps to Duplicate Problem:** Boot computer w/ DCT installed. RAM disk will be named Sybil. Run paint program. See the inkblot. Try to address the RAM disk. Gives the message, "Volume Not Found. Try Jack or some other name."

### **When You Ship**

If you don't have the original packing material, wrap the board in anti-static material (preferably the anti-static bag in which the card was originally shipped; however, aluminum foil will work fine). Pack it in a sturdy box cushioned with wadded papers (i.e. used computer paper or newspaper).

- ❖ **Warning:** If your product is damaged due to inadequate packing, your warranty will be void.

Include the return form and invoice.

Send the package, shipping prepaid, to:

RMA # \_\_? \_\_  
Applied Engineering  
Technical Support  
3210 Belt Line Road, Suite 154  
Dallas TX 75234

You should insure your package.  $\text{Æ}$  will not assume any responsibility for inadequate packing or loss or damage during shipping.

### **When We Receive**

Our service department will use your completed form in an attempt to duplicate the problem.

If it is determined that your product is defective due to a manufacturing defect, your card will be repaired or replaced at  $\text{Æ}$ 's option.

Any misuse, abuse, or non- $\text{Æ}$  authorized alteration, modification, and/or repair to the Applied Engineering product will void the warranty. This warranty will also be void if you use the  $\text{Æ}$  product for any purpose other than its intended use.

Your product will be fully tested before it is shipped back to you, transportation prepaid, via UPS regular delivery.

Once your product is received by Technical Support, it will be processed and delivered to our shipping department within 7 to 10 working days.

# Bibliography

The following books might be useful in learning how to use a PC-compatible computer, use the MS-DOS operating system, or write programs for *PC Transporter*.

## ***Highly Recommended***

Robbins, Judd, *Mastering DOS*. Sybex, San Francisco, CA. 1987. (Available from Applied Engineering)

## ***Other Good References***

Angermeyer, John and Jaeger, Kevin, *MS-DOS Developer's Guide*. Howard W. Sams & Co., Indianapolis, IN. 1986.

Davies, Russ, *Compute's Mapping the IBM PC and PC Jr*. Compute! Publications, Inc., Greensboro, NC. 1985.

Norton, Peter, *Inside the IBM PC*. Prentice Hall Press, New York, NY. 1986.

Norton, Peter, *The Peter Norton Programmer's Guide to the IBM PC*. Microsoft Press, Bellevue, WA. 1985.

Rector, Russell and Alexy, George, *The 8086 Book*. Osborne/McGraw Hill, Berkeley, CA. 1980.

Scanlon, Leo J., *IBM PC Assembly Language - A Guide for Programmers*. Robert J. Brady Co., Bowie, MD. 1983.

Shaw, Shaw, *Essential PC DOS*. SYBEX, San Francisco, CA. 1987.

Wolverton, Van, *Running MS-DOS*. MicroSoft Press, Bellevue, WA. 1987.

# Index

- .BAT 100, 107
- .COM 100
- .EXE 100
- //e to IIGS upgrade 24
- /AEPC 65, 152
- 3.5" double sided GCR drives 123
- 3.5" single sided GCR drives 123
- 3.5" TransDrives 129
- 5.25" double sided MFM drives 123
- 5.25" single sided GCR drives 123
- 5.25" single sided MFM drives 123
- 5.25" TransDrive 129
- 80286 125
- 8086 73, 75
- 8087 Math Co-Processor 91
- 8087-2 75
- 8254 timer 76
- AEPC.CONFIG 89, 93
- AEPC.DRIVERS 93, 161
- AEPC.SYSTEM 93
- AEPCBIOS 93
- AEPCKEY.2E 95
- AEPCKEY.GS 94
- APLCLOCK.EXE 94
- Apple 3.5 Drive 133, 134, 142
- Apple 3.5 Drives 125, 137
- Apple 5.25" disk drives 136
- Apple Keyboard Map 86
- Apple-brand printers 160
- Apple-compatible disk drives 135
- AppleWorks and the PC Transporter 176
- ASCII editor 107, 108
- ASCII text editor 109
- Assign/Configure Devices 64, 75, 129, 130, 135, 137
- AT-compatibles 125
- Auto-Configure 88, 93, 129, 134, 135, 137
- AUTOEXEC.BAT 94, 108, 109
- BACKUP 150
- BAD BLOCKS 136
- BASIC xv
- Basic Input Output Services 93
- BASICA xv
- batch file 107
- batch files 107
- BIOS 93
- boot disk 90
- boot ROM 124
- BUFFERS 109
- built-in serial interface ports 168
- Caps Lock key 119
- CGA 75
- change the default drive 98

Color Graphics Adapter  
     74  
 COM1 90, 169  
 COM2 169  
 COMMAND.COM 103,  
     109  
 COMn 162, 167  
 CONFIG.SYS 107, 109, 173  
 configuration 87  
 Configure Devices 137  
 Configure Drivers 64, 75,  
     130  
 Control Panel  
     IIGS 139, 164, 168, 172  
     PC Transporter 75, 82,  
     87, 93, 122, 147  
 Control-Alt-Delete 87  
 COPY 100, 173  
 CP/M 72  
 daisy-chained 54  
 Daisy-chaining 126  
 DB9, DB15, DB19 27  
 default drive 98, 129  
 default PC-Transporter  
     drive 103  
 DElete 101  
 DEVICE = 109  
 device driver files 90  
 Diablo 160  
 DIN 27  
 DIR 99  
 DIR A 108  
 directory structure 135  
 directory structure 135,  
     136  
 Disk 3.5 123  
 disk drive port 126  
 Disk Drives 64, 123, 130,  
     137  
 disk formats 123  
 Disk II 123  
 DISKCOPY 103  
 display buffer 75  
 DOS 3.2 123  
 DOS 3.3 123  
 Dot Matrix Printer 160  
 EDLIN 107  
 Epson 160  
 EXEC file 107  
 execute (run) a PC  
     program 100  
 extension 98  
 FDISK 153  
 female connector 26  
 file formats 123  
 filename 98  
 FILES 109  
 Flat cable connector 27  
 floating point math 75  
 Floppy Disk Controller  
     74, 76  
 FORMAT 153  
 FORMAT.COM 103  
 Formatting a Disk 104  
 GCR 123, 133  
 GCR data encoding  
     technique 135  
 GCR encoding 136  
 GENLPT1 95  
 Group Code Recording  
     123  
 GWBASIC xv  
 Hard disks 135, 147-157  
 Help 86

high-density (1,200K)  
     diskettes 125  
 I/O emulation 73  
 IBM Graphics Printer 161,  
     165  
 IBM™ Color Graphics  
     Adapter 75  
 ICONS 95  
 IIGS's built-in floppy disk  
     port 55  
 ImageWriter 160, 164  
 ImageWriter II 160  
 IW2EMUL 161, 164  
 key combinations 86  
 LAUNCHER.EXE 94, 181  
 legal MS-DOS filenames  
     99  
 LPT1 74, 162  
 male connector 26  
 maps of the keyboards 119  
 math co-processor 75  
 media compatibility 125  
 MFM 123, 125, 133  
 mice (or mouses) 159  
 Microsoft Mouse 170  
 Microsoft Windows™  
     113  
 modems 159  
 Modified Frequency  
     Modulation 123  
 Molex 28  
 Monitor /// 76  
 Monitor II 76  
 mouse 170, 172  
 mouse interface card 172  
 Mouse Systems Mouse--  
     (MSC) 170  
 MOUSECOM 172  
 MOVETO.BAT 94  
 MS-DOS 72, 98, 109, 123  
 MS-DOS boot disks 107,  
     124  
 MS-DOS commands 107,  
     150  
 MS-DOS device drivers  
     109  
 MS-DOS files 135  
     not legal filenames 99  
 MS-DOS format 136  
 MS-DOS hard volume  
     129  
 MS-DOS programs 125  
 MS-DOS system disk 103  
 MS-DOS system files 109  
 MS-DOS volume/file 149,  
     152  
 MSDOSVOL 94, 147, 149,  
     150  
 MSMOUSE.COM 94  
 MSMOUSE.SYS 94  
 National Televisions  
     Standards Committee  
     xiv, 18  
 NEC 765 76  
 NTSC 18, 30, 76  
 Okidata 160  
 parallel drivers 162  
 Parallel interface cards  
     162  
 parallel port 162  
 PC-compatible 73  
 PC-compatible keyboard  
     76, 86  
 PC-compatible Keyboard  
     Interface 74  
 PCINSTALL 95, 141, 183

PCTRAM.SYSTEM 95  
 PC.TRANSPORTER 93  
 PELs 75  
 phone (modem) port 164,  
     168  
 Picture ELeMents 75  
 pixels 75  
 port 74  
 Portware 81, 93  
 Preallocation 149  
 printer port 164, 168  
 printers 159  
 PRN 74  
 ProDOS 123  
 ProDOS drives 124  
 ProDOS hard disk 151  
 ProDOS hard disks 147  
 ProDOS RAM disk 143  
 ProDOS System Utilities  
     135  
 Quit to ProDOS 87  
 RAM 75, 113  
 RAM disk 110  
 RAM disks 135  
 RAM print spooler 113  
 RAM resident programs  
     113  
 RAMDisk 113, 144  
 RCA jacks 28  
 RCA™ Phono 28  
 READ.ME 94, 95  
 Ready!, 114  
 real time clock 76  
 Reboot and Run PC  
     Transporter 87  
 Remove All Currently  
     Loaded Drivers 89  
 RESTORE 150  
 RF modulator 76  
 Save Configuration 89, 93  
 serial drivers 162  
 serial interface ports 164  
 serial port 162  
 SideKick 119  
 SideKick™ 113  
 SideKick's Notepad 107  
 Smart Port 139  
 SSCOM1 90  
 SSCLPT1 162  
 STARTAEPC 93  
 STARTUP 93  
 Super Serial Card 90, 162  
 SYS.COM 103  
 system clock 108  
 TransDrive 124, 125, 126  
 TRANSFER.EXE 94  
 TRANSFER.HLP 94  
 transmission speed 169  
 Turbo Lightning 114  
 UCSD Pascal 123  
 UniDisk 3.5 123, 136  
 Universal printers 160  
 VDISK.SYS 110  
 wildcard 100

# NOTES



# PC Transporter™

The MS-DOS Card for Apple II® Computers

---

## User's Manual v1.31 & AEPC.System v2.0 Addendum

**AE** APPLIED ENGINEERING®

---

A DIVISION OF AE RESEARCH CORPORATION

v 1.0



# PC Transporter User's Manual v1.3

## Addendum

---

### Changes to the board

The first thing you may notice upon looking at the PC Transporter is that the chips on the board are different from those pictured in the manual and on the box sleeve. We have changed from the 64K x 4 ZIP memory chips to the new 256K x 4 DRAMs to cut down on power consumption and to keep the overall price as low as possible. The board is functionally the same.

### Changes from the PC Transporter System Disk v1.2 to 1.3

Following is a list of changes that were made from v1.2 of the PC Transporter Operating System to v1.3. These changes have been incorporated into v2.0 of the software.

- New memory test, `PCTRAM.SYSTEM`, tests both the PCT's with ZIP chips and with 256K x 4 chips. (See `PCTRAM.SYSTEM` below.)
- Improved printing with the ImageWriter II when using v1.3 `IW2EMUL` driver.
- Improved communications data rates and data handling during upload and download.
- Improved operation with a wider variety of copy protection.
- Improved capability to read a wider range of disks from other MS-DOS based systems.
- Will now use up to 750K of available expansion RAM under MS-DOS (up from 360K).

Several new ProDOS files were added to v1.3 of the Transporter disk. Please note these additions in your manual.

### Manual v1.3 p.93-95

#### Read This File

- **READ.ME** -- This is a TXT (standard text) file that can be loaded into most ProDOS word processors. Read this file before doing anything else. It will contain the same information given in this addendum plus any additional changes that have been made.

#### Starting PCT

- **STARTUP** -- This is a simple selector program that runs when you boot the `/AEPC 3.5"` disk or the `/AEPC.UTIL 5.25"` disk. Select the proper number from the menu displayed to run the PC Transporter program, run `PCT.SWAP` (described later), run `PC.LAUNCHER` (described later), exit to Basic, or exit to ProDOS.

To run the program from BASIC, at the BASIC prompt (1), enter -STARTUP or RUN STARTUP. From the Finder, double-click the STARTUP icon.

### Testing PCT Memory

- ❑ **PCTRAM.SYSTEM** -- This program tests all the expansion memory on the PC Transporter for PCT's with ZIP chips and those with 256K x 4 chips. A graphics screen shows which chips are bad or not present. Press any key after you get the CARD PASSED message to stop the test.
- ❖ *Note:* If you have a PCT RAM disk (RAMAEPC) set up, running the test erases everything on the PCT including the format and Drivers loaded. You'll need to reboot to recreate the RAM disk.

### New Parallel Printer Driver

- ❑ **GENLPT1** -- This program is a generic parallel printer driver. It can be used with some printer cards that do not conform to the Apple interface standards. This printer driver has to be manually installed from the /AEPC.U 5.25" disk or the 3.5" disk using the control panel. It will not work with Auto Install. If Auto Install attempts to install it, the system will crash. After you assign the GENLPT1 driver through the control panel, save it to a configuration file so that Auto Install will not be executed during the boot cycle.

### Icons for the IIGS Finder

- ❑ **ICONS** -- Copy the AEPC.ICONS.2.0 file into the ICONS directory of your boot disk. This will replace "plain vanilla" icons with icons that have been described by many as "super cool" and by others as "interesting."

### Changes from the PC Transporter System Disk v1.3 to 2.0

Following is a list of changes that were made from v1.3 of the PC Transporter Operating System to v2.0. Changes to the manual are noted where needed.

- During initialization, the software now searches for a DataLink 1200 modem and, if one is installed, turns off auto answer. This prevents the phone from auto answering while the PC Transporter is in use. If a DataLink is installed and the slot is active, then a message is sent to the screen showing the DataLink slot and telling the user that auto answer is now off.
- Function keys 1-10 on Extended Apple Keyboards will now work in IBM mode.

Version 2.0 of the PCT software also contains several new programs. Please note these additions in your manual.

#### Activating/Deactivating/Rearranging PCT Drives Under ProDOS

- ❑ **PCT . SWAP** -- This program allows you to select which drives connected to the PCT you want to use under ProDOS and GS/OS. It also allows you to pick the access order of the PCT drives. Launch the program from the PCT main menu, from the Finder or from ProDOS 8.

From the PCT main menu, choose option 3. At the basic prompt (|), enter `-PCT . SWAP` or `RUN PCT . SWAP`. From the Finder, double-click the `PCT . SWAP` file.

#### GS/OS -- Continuously Spinning Drives

When using GS/OS v5.0 with the PCT, the PCT drives are continuously polled. `PCT . SWAP` lets you shut off the drives while in the Finder. Set the `/RAMAEPC` as active and the `TransDrives` as inactive.

#### ProDOS 8 -- Disk to Disk Copies

Under ProDOS 8, set up a dual TransDrive or two 3.5" drives as devices 1 and 2 for disk to disk copies.

- ❖ *5.25" Note:* The 5.25" TransDrives cannot read regularly formatted ProDOS disks. When you format disks in the TransDrives using any ProDOS format utility (Filer, System Utilities, etc.), they are actually formatted with a special brand of ProDOS, MF<sub>M</sub>. Disks formatted in the 5.25" TD's can have ProDOS files read from and written to them by TransDrive systems only.
- ❖ *3.5" Note:* The 3.5" drives connected to the PC Transporter can be formatted, read to and written from under ProDOS in the normal manner.

#### Booting MS-DOS Programs Directly from ProDOS

- ❑ **PC . LAUNCHER** -- This BASIC program allows you to create a file that can launch an MS-DOS program directly from ProDOS. Create separate `PC . LAUNCHER` files for each MS-DOS program you want to launch from ProDOS.

`PC . LAUNCHER` is most useful for hard disk users.

To run the program:

- ⊕ From BASIC, at the BASIC prompt (|), enter `RUN PC . LAUNCHER` or `-PC . LAUNCHER`.
- ⊕ From the Finder, double-click the `PC . LAUNCHER` icon.

When prompted by the program, enter a single MS-DOS command. For example, if you want to run Lotus 1-2-3 from your hard drive, you would enter "123" (do not type the quotes). If you're running Launcher from one drive and the MS-DOS program from another drive, you would need to include the drive path. "A:123" would run 123 from drive A. You can also include any parameters in the one line command. For example, if you only occasionally use the mouse, you may not want to load the mouse drivers every time you boot the system. So, instead of loading the mouse with a batch file, you can create a launcher file with the command "MSMOUSE /2" then call the ProDOS file "MOUSE".

At the "File name to save:" prompt, enter the name you want to call the launcher program under ProDOS. You can name it any name acceptable to ProDOS.

You need to have a copy of LAUNCHER.EXE on your MS-DOS disk. The AUTOEXEC.BAT file must be set up to locate the file. You also need to add "LAUNCHER" to the end of your AUTOEXEC.BAT file using a line editor program such as EDLIN, SEE, or SideKick's NOTEPAD.

When you run the newly created file from ProDOS, it launches AEPC.SYSTEM which in turn enters the single MS-DOS command when launcher is run.

#### Extended Keyboard Support

- ❑ **AEPC.KEY.2E/GS** -- Function keys 1-10 on Extended Apple Keyboards will now work in IBM mode. (Refer to Ch. 7, p. 115, "Keyboard Reference.")

#### Recognizing PCT Drives as ProDOS Drives with Improved PC Install (Manual v1.3 pp.95, 141, 183)

PC Install is a ProDOS program that installs the device drivers located in the AEPC.DISKS file into any file called PRODOS. The drivers allow ProDOS to recognize and use the TransDrives and PCT RAMDisk as ProDOS drives.

Run PC Install from ProDOS, not from MS-DOS.

- ❖ At the BASIC prompt (]), enter -PCINSTALL.
- ❖ From the Finder, double-click the PCINSTALL file.

PC Install will no longer create a file called PRODOT when it encounters a locked PRODOS file as described in the manual. Instead, PC Install unlocks the file, PRODOS and modifies it.

- ❖ *GS Owners:* If you've deactivated some of your drives with the PCT.SWAP program, you'll need to rerun the program after using PC Install.

### Improved Hard Disk Support (Manual v1.3 pp. 151)

Older versions of the PCT software limited PCT to one hard disk of up to about 16 Meg (16,777K). Version 2.0 of the PCT software allows you to have two hard disks of up to about 32 Meg each. The hard disks are still simulated using ProDOS files and are therefore initially limited to about 16 Meg apiece, but you can now continue the hard disk(s) onto a second ProDOS file. The two files act together to form a single large disk.

A few rules to remember are:

- ❑ If you add a continuation to an existing drive, both the main drive and continuation must be partitioned and formatted together. You will lose any data currently on your main drive.
- ❑ You must activate both parts of the two part drive. If you leave off the continuation of a two part drive, the system will expect to find memory at a location that is not active and will fail.
- ❑ You can create a two-part hard drive with two 3.5" drives. However, you must remember to have both disks containing the hard disk files in the proper drives. Refer to p. 147 of the manual for more information.

Refer to the instructions later in this addendum for creating an MS-DOS hard disk on your hard drive.

### Where the Files Are

All the files are included on the 3.5" PC Transporter disk. If you're using the 5.25" disks, here's where the files are:

<u>/AEPCT.UTIL</u>	<u>/AEPCT</u>	<u>/AEPCT</u>
PRODOS (modified)	PRODOS (unmodified)	MSDOSVOL
BASIC.SYSTEM	STARTAEPCT	
STARTUP	AEPCT.SYSTEM	
PCT.SWAP	AEPCTBIOS	
PCINSTALL	AEPCTKEY.GS	
AEPCT.DISKS	AEPCTKEY.2E	
ICONS	AEPCTBIOS	
PCTRAM.SYSTEM	AEPCT.DRIVERS	
READ.ME	PC.LAUNCHER	
	GENLPT1	

### Running PC Transporter for the First Time (Manual v1.3 p.59)

This section takes you through the steps necessary to run PC Transporter for the first time. You may find parts of this process are not applicable to your hardware configuration.

## Automatic Pilot, or The Easy Way

### 1. Single 5.25" Drive

Put a copy of the 5.25" disk, /AEPC.UTIL, in the boot drive.

### Two 5.25" Drives

Put your copy of the front side of the 5.25" disk, /AEPC.UTIL, in the boot drive and a copy of the /AEPC disk in the second drive.

### 3.5" Drive

Place the /AEPC disk in the 3.5" boot drive.

### 2. Place a copy of a bootable MS-DOS system disk in the MS-DOS A: drive.

- ❖ *Reminder:* This should be a copy of either PC-DOS or a standard MS-DOS system disk. Some MS-DOS operating systems are modified for IBM work-alikes and will not function properly with PC Transporter.

This is usually the first drive (the bottom drive in a dual TransDrive system) in the disk drive daisy chain connected to PC Transporter.

### 3. Turn on the Apple's power supply. If peripherals (like the monitor) are not on yet, turn them on too.

You will be presented with the PC Transporter menu.

- ❖ *Note:* If you're running PC Transporter from the Finder or other Launcher, run the STARTUP program to get the menu. Booting from the 3.5" /AEPC disk or the 5.25" /AEPCT disk will load the modified ProDOS. This version of ProDOS has been modified with PC Install to recognize the PCT drives while in ProDOS.

### 4. Select "Run the PC Transporter from the menu (press 1 and



### Single 5.25" Drive

Insert your copy of the /AEPCT disk in the drive and press the spacebar.

### Two 5.25" Drives

Insert your copy of the /AEPCT disk in the drive and press the spacebar.

### 3.5" Drive

The program will run AEPC.SYSTEM.



After a moment or two, a splash screen appears welcoming you to the world of PC Transporter. Then PCT runs a memory test. (For information about what the memory test's numbers mean, see the *AE Bios Memory Test* section in Ch. 5.) This message is then displayed at the bottom of the screen:

```
Automatic Configuration in progress...
```

That means that your PC Transporter software is configuring the drivers for the card.

After a brief memory test, you'll see the following message:

```
LOADING FROM DISK
```

At this point, PCT is accessing your MS-DOS disk. You should then get the MS-DOS prompt, A>. If you do get the prompt, go to the section, *Transferring Files* (p. 63 of the manual).

If your MS-DOS A: drive is a 3.5 drive, you will see an approximation of the following message.

```
LOADING FROM DISK
Non-System disk or disk error
Replace and strike any key when ready
```

(The actual message will vary according to the version of MS-DOS you are using.) If the message above appears, refer to page 60 of the manual for instructions on how to make PCT recognize a 3.5" drive as the boot device.

## Setting Up a PCT Hard Disk

Follow the steps below to create a hard disk file:

- 1) If you haven't already, copy the PC Transporter disks using any ProDOS copy utility. If you're using 3.5" disks, or copying the PCT disks to your hard disk, go to step 2. If you're using 5.25" disks, remove any non-applicable files to allow space for saving the configuration file you're about to create. For example, //e users should remove AEPCKEY.GS. (Refer to p. 148 of the manual for a minimal PCT/ProDOS system disk.)
- 2) Place your MS-DOS startup disk in your PCT TransDrive. It must have at least 120K disk space available. Refer to "Transferring the System Files" (p. 63) for information about setting up an MS-DOS System disk.

- 3) Boot the PCT disk you're using. If you're booting the PCT system from your hard disk, you can run the "STARTUP" program. At the BASIC prompt (1), enter -STARTUP. From the Finder, double-click the STARTUP file.
- 4) Enter the PCT control panel (shift/caps lock-caps lock).
- 5) Press 2 and <return>. Selects "Configure Drivers."
- 6) Press 3 and <return>. Selects "Assign/Configure Devices"
- 7) Press 1 and <return>. Selects "Disk Drives"
- 8) Press 5 and <return>. Selects the first hard disk option.
- 9) Press <esc> or backspace to go to the beginning of the default pathname at the bottom of the screen.
- 10) Type a slash and then enter the name of your ProDOS hard disk (or 3.5" disk you're using as a hard disk) followed by the name you want to give your MS-DOS hard disk file, for example, /HARDNAME/DOS1. (Suggestion: If you plan to create a continuation to the hard file, you may want to indicate that it is a two-part drive in the name, for example /HARDNAME/DOS1OF2. The file name you assign to your hard disk file will appear in ProDOS as filetype = \$6F.
- 11) When asked if you want to preallocate, Type "Y" (recommended) if you want to immediately set aside the amount of space available to the MS-DOS volume/file, or "N" if you want to allow blocks to be allocated as needed. Refer to p. 149, "Thoughts on Preallocation," for information on deciding what to choose.
- 12) Enter the maximum number of kilobytes of disk storage that you expect to use and press <return>. You must allocate at least 140K to allow room for FDISK and FORMAT. The maximum allowed by ProDOS is 16 Meg (16,777K). MS-DOS will round the amount you enter to the nearest whole cylinder (about 68 blocks or 34,816 bytes). For example, you may allocate 800K to the hard file, MS-DOS will actually create a file of 765,952 bytes.
- 13) If you want to create a second MS-DOS hard file or create an MS-DOS hard file larger than 16 Meg, repeat the steps above, starting at step 4, substituting the proper menu option in step 8.
- 14) Press <esc> until you are at the Configure Drivers menu.
- 15) Press 5 and <return>. Selects "Save Configuration." If you're using the 5.25" disks and get an error trying to save the configuration, you probably didn't make enough room on the disk in Step 1 to save the configuration file. Make room and start again.

- 16) Press <esc> until you are at the Main Menu.
- 17) Press 4 and <return>. Selects "Reboot and Run PC Transporter."

Now that you have created space for the MS-DOS hard disk, *you must partition and format the disk* under MS-DOS.

#### **Partition the Hard Disk**

- 1) At the A> prompt, enter, "FDISK".  
The A drive should contain your MS-DOS system disk.  
❖ *Note:* If you are formatting the second hard disk, you'll need to choose option 5, "Select Next Fixed Disk Drive" from the first menu screen.
- 2) Press <return> as many times as is necessary to accept the default settings.  
FDISK will reboot the MS-DOS system when it has partitioned the hard disk.

#### **Format the Hard Disk**

- 1) At the A: prompt, enter, "FORMAT C:/S/V".  
"C" is the location of your hard drive (it could also be D or E or F depending on how many drives are configured).  
/S tells MS-DOS to transfer the system files onto the diskette after it is formatted. The system files transferred are invisible and are difficult to transfer later. Don't leave out this command unless you are formatting the second hard drive in which case no system files are needed.  
/V allows you to name the MS-DOS portion of your ProDOS hard disk. This command is optional.
- 2) When you see the warning, "All data on non-removable disk Drive C: will be lost!" this means all MS-DOS data, the ProDOS data will not be touched.  
Press "Y" to format.

#### **Copy Files to the Hard Disk**

- 1) Copy the files from your MS-DOS startup disk to your hard disk. With the MS-DOS disk still in drive A, enter "Copy A:.\* C:".
- 2) If you have not already, copy the MSDOSVOL file provided on the AEPC disk to the system directory on your hard disk. These files are MS-DOS files that enable PC Transporter to read the ProDOS clock, transfer files between ProDOS and MS-DOS, launch MS-DOS programs directly from ProDOS, and more.

- ❖ *Note:* If you set up the MSDOSVOL file as the second hard disk using the Configure Drivers options, you can copy from the second hard disk to the first using the MOVETO program or COPY.

Refer to "Transferring Files" on p. 63 of the manual for instructions. Instead of the command, MOVETO A: (step 5), enter MOVETO C: or the proper location of your hard drive.

## Reminders

### PC Transporter Memory

The PC Transporter's memory can be used as a RAM Disk under ProDOS but not as system memory. PCT is a slot 1-7 card, not a memory expansion card. AppleWorks is the exception to the rule; it will use PCT memory as expanded desktop. Refer to App. D (p. 183 of v1.31) of the manual for instructions on using AppleWorks and PCT memory. See p. 143 of the manual for instructions on using PCT as a ProDOS RAM Disk.

### MS-DOS System Disk

Some versions of MS-DOS were created to recognize the hardware in IBM work-alikes. Therefore, many of these customized MS-DOS operating systems will not work with PC Transporter. Although the new PC Transporter system recognizes several of these customized versions, if the version you have does not work, we suggest that you use either a version of MS-DOS created for use with IBMs or PC-DOS. Either MS-DOS 3.3 or PC-DOS 3.3 is recommended. MS-DOS/PC-DOS 3.2 or higher is required to recognize 3.5" disk drives.

### Disk Drives

Do not connect a UniDisk to PC Transporter's drive connector.

**AE**  
**PC Transporter**



Compatible with  
**Apple IIGS, IIe, II+**\*


20%



APPLIED ENGINEERING™

15 87 099  
0840 7510  
\$343.20<sup>A</sup>

# PC Transporter™

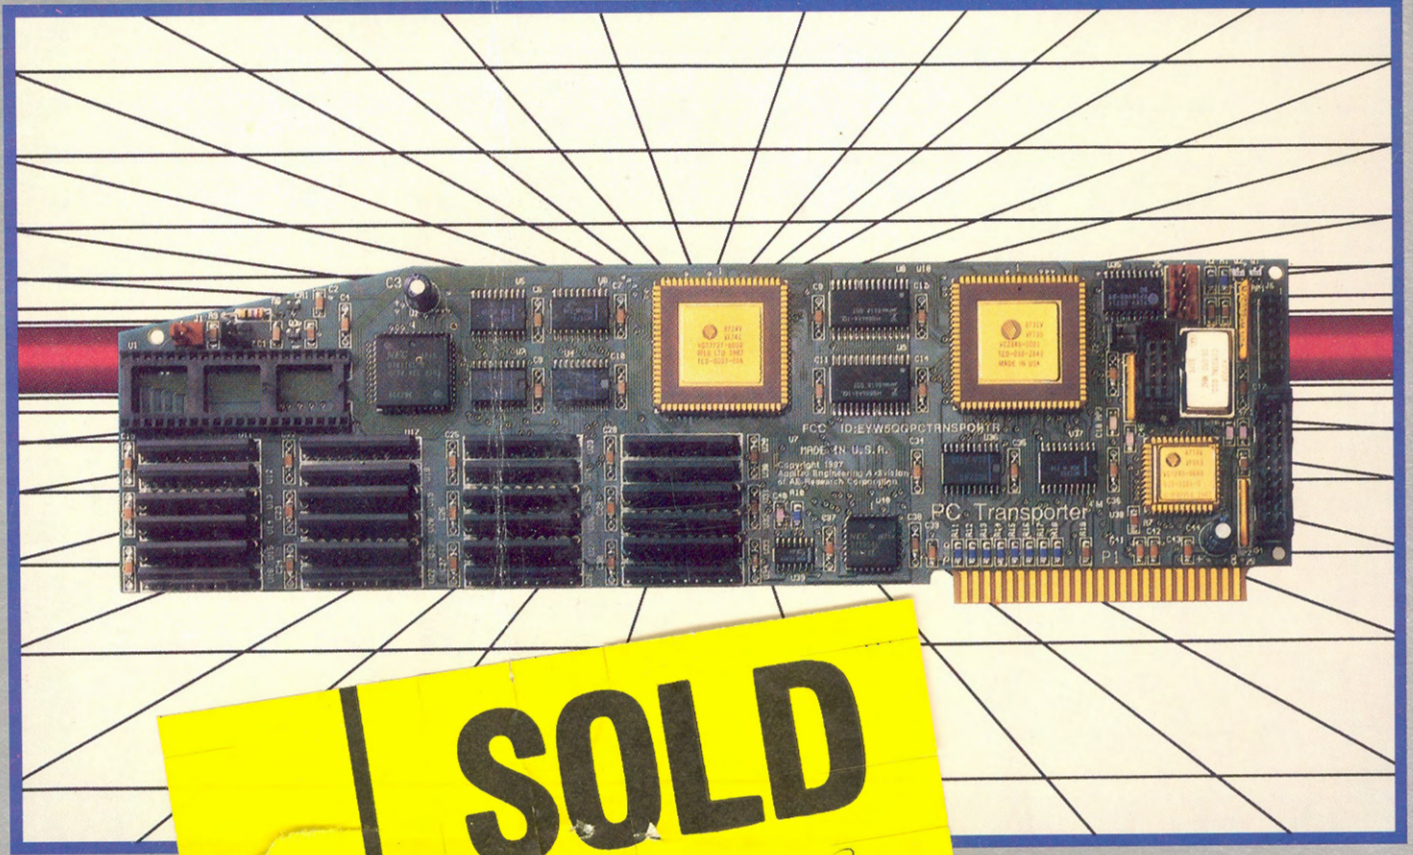

**SOLD**  
DATE 2/22/87

... on Your Apple II,  
3 Times Faster than IBM



# PC Transporter™

## PC Transporter™. The Apple® II expansion board that lets you run MS®-DOS programs

Now your Apple II can run over 10,000 programs you could never use before. Like Lotus® 1-2-3®, MultiMate®, dBASE III PLUS®, Even Flight Simulator®

With PC Transporter, MS-DOS programs run on your Apple II like they do on IBM® PC's or compatibles. With one important difference. PC Transporter runs most of those programs *three times faster* than an IBM PC/XT®

Plus, to speed through number-crunching tasks, you can use our optional 8087-2 math co-processor chip. It plugs into a socket on the PC Transporter.

## Works with the hardware you already own

With PC Transporter, MS-DOS programs see your Apple hardware as IBM hardware. You can use the same hardware you have now.

With IBM software, your Apple hardware works just like IBM hardware. Including your drives, monitors, printers, printer cards, clock cards and modems. You can use your Apple mouse. Or an IBM compatible serial mouse.

You can use your IIfx® or IIgs™ keyboard with IBM software. Or use our optional IBM-style keyboard (required for the II Plus).

## Functions as an Apple Memory Expansion Card in Apple mode

Even when you're not running MS-DOS programs, PC Transporter makes your Apple a better computer. You can access up to 768K of extra RAM for use with your Apple programs. PC Transporter conforms to the Apple memory expansion protocol when in Apple mode. (That's a \$300.00 value even if you never use the card for MS-DOS.)

## A universal disk drive controller

PC Transporter supports 3.5" and 5.25" MS-DOS and ProDOS formatted diskettes. You'll shift instantly between Apple ProDOS and IBM MS-DOS.

You'll need our versatile 5.25" 360K drive system to run IBM applications from 5.25" floppy disks. Use your Apple 5.25" drive for Apple 5.25" disks.

The PC Transporter acts like an Apple Disk 3.5 Drive disk controller for IIgs, IIfx and II Plus users. An Apple Disk 3.5 Drive will support the new 3.5" disks whether they're IBM MS-DOS formatted or Apple ProDOS formatted.

PC Transporter supports up to 5 drives in a number of combinations. For example, you can connect a 5.25 Applied Engineering 360K Dual-Drive System directly to the card. Then plug two daisy-chained Apple 3.5 Drives (not the Apple UniDisk 3.5) to the Dual-Drive System. For a fifth drive, use a ProDOS file as an IBM hard disk.

PC Transporter reads MS-DOS and translates it into Apple native ProDOS. You can store IBM programs and data on any ProDOS storage device including the Apple 3.5 Drive, Apple UniDisk™ 3.5, Apple 5.25" drive, SCSI or ProDOS compatible hard drives. (You can use the Apple UniDisk 3.5 with its own controller card for storing programs and data, but not for directly booting an IBM formatted disk.)

You can even use our 360K PC compatible drive for ProDOS storage and a 143K Apple 5.25" drive for MS-DOS storage.

## Easy to install

You can install PC Transporter in about 15 minutes, even if you've never added an expansion board. You don't need special tools. Simply plug it into an Apple expansion slot (1 through 7 except 3), connect a few cables and a disk drive, and go! A low cost installation kit is required for either the IIfx/II+ or the IIgs.

\*II+ must be FCC Certified type, see your dealer for more information.

**AE** APPLIED ENGINEERING  
*The Apple enhancement experts.*

(214) 241-6060

P.O. Box 798, Carrollton, TX 75006



 


A Division of AE Research Corporation

© Copyright 1988  
AE Research Corporation  
Little Blue Limited



## Packing List IIGS Installation Kit for PC Transporter

Your IIGS installation Kit should contain the items below:

<u>Quantity</u>	<u>Description</u>	
1	10-Wire Cable	
1	IIGS RGB Cable	
1	ColorSwitch	
1	Disk Drive Cable	
2	Hex Jack Screws for Disk Drive Cable	

Refer to the PC Transporter User's Manual for installation instructions.




Designed for  
**PC Transporter**



APPLIED ENGINEERING®

15 B7 099  
60840 7538  
\$36.00<sup>EA</sup>

# IIGS Installation Kit™

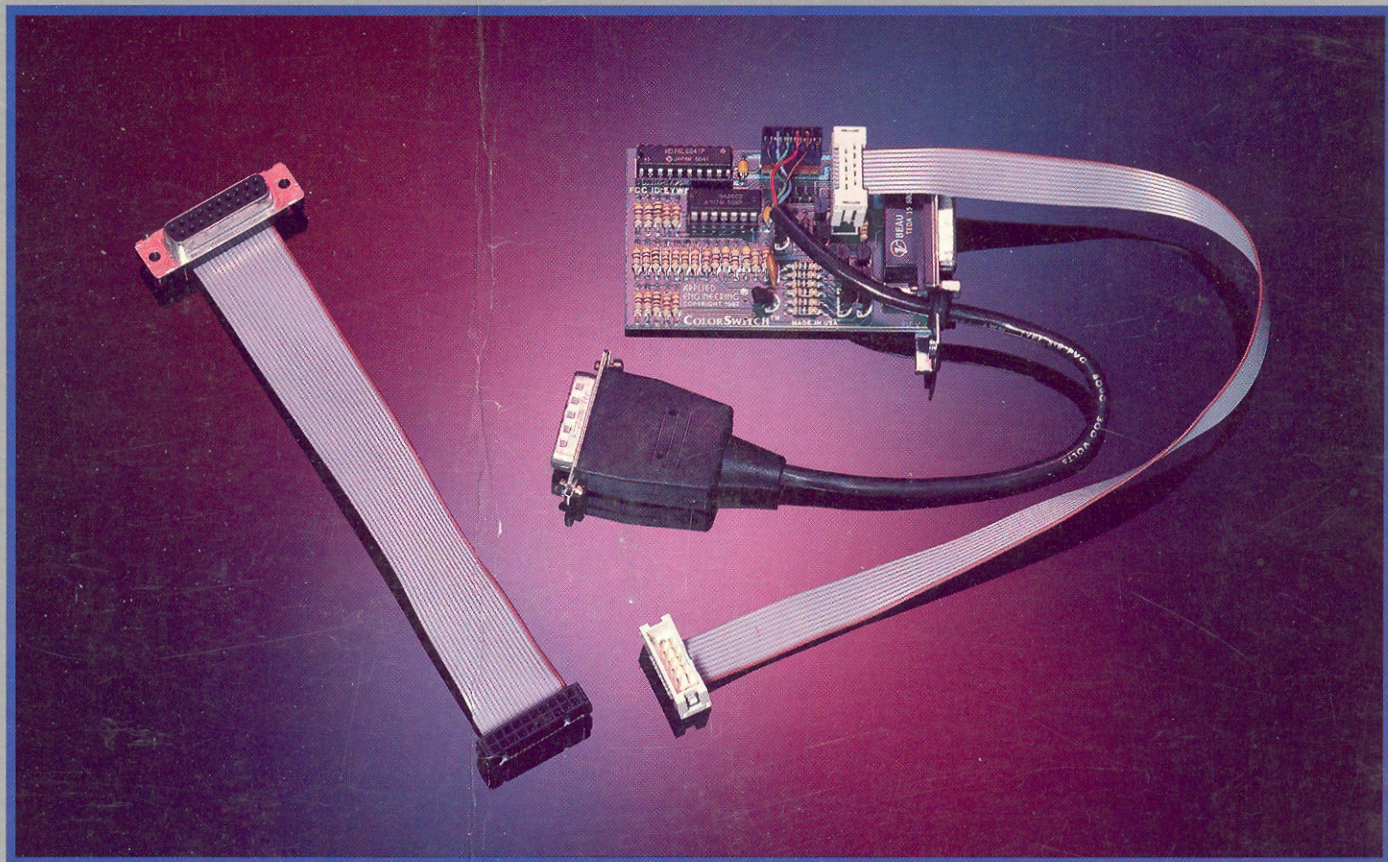

*Accessories for Installation of the  
PC Transporter in an Apple IIGS*

*For Use with the IIGS Color Monitor*

**SPECIAL**  
**Installation Video**  
**Inside!**  
**(VHS Format)**



# IIGS Installation Kit™

**Provides interconnection accessories** for connecting PC Transporter to the IIGS color monitor and to the IBM compatible 5.25 TransDrive accessory or an Apple 3.5 Drive.

- ColorSwitch for adapting PC Transporter digital RGB output to the IIGS color monitor analog input.
- Disk drive cable to connect PC Transporter to a TransDrive or Apple 3.5 Drives.
- Other optional accessories for the PC Transporter include: IBM-style Keyboard, IBM Keyboard Cable, Sony RGB Monitor, ColorSwitch, Digital RGB Adapter, Heavy Duty Power Supply,

128K ZIP Memory Chip Set, 8087-2  
Math Co-processor Chip.

**AE** APPLIED ENGINEERING®  
*The Apple enhancement experts.*

(214) 241-6060

P.O. Box 5100, Carrollton, TX 75011

A Division of AE Research Corporation.



## **TransDrive™** **Installation Instructions**

### **Connecting the PC TransDrive**

It is very easy to connect the PC TransDrive disk drive system to your computer. Here's how:

1. **Turn the computer off.** It is not necessary to unplug the system.
2. **Attach the cable leading from the back of the drive box to the PC Transporter's DB19 connector** mounted on the backplane of your computer.

**IIGS users:** Do not confuse the PC Transporter's DB19 connector with the IIGS' built-in floppy disk port. The Transporter's port is installed in the expansion slot above the built-in ports and is positioned vertically.

The connector is made to fit in one direction only. The pins should enter firmly but with little difficulty.

3. **Tighten the mounting screws.** Do not overtighten!
4. **Remove the cardboard piece from the disk drive slot--flip the lever at the front of the drive to the up position and pull the cardboard straight out.** The cardboard was inserted to protect the drive during shipping. You can now throw it away.

**Installation is complete!**


**Note:** The procedure is the same for both the single and dual-drive system and for both the 5.25" and 3.5" TransDrive systems.

## Connecting a Second Drive to a Single Drive System

The only tool you will need is a Phillip's head screwdriver.

To install a second drive in a single-drive system:

1. Turn the computer off. It is not necessary to unplug the system.
2. Unscrew the two bottom screws on the left panel and the two bottom screws on the right panel of the drive box (four screws in all).

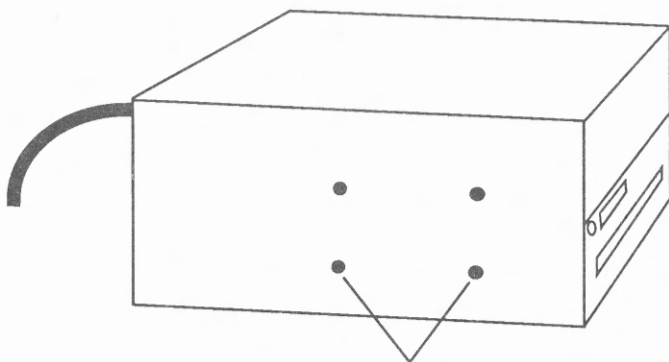

Unscrew bottom two screws on  
left and right panels

Do not unscrew the two top screws on the left and right panels yet. You will not need to unscrew the four screws on the bottom of the TransDrive.

Put the screws in safe, convenient place. You will need them again soon.


3. Lift straight up on the box cover while keeping the drive flat on the table. It should separate with some friction.
4. Now unscrew the two top screws on the left and right sides of the cover.
5. Remove the front piece from the drive cover. This piece was inserted to fill the gap where the front of your second drive will go.

6. Set the cover aside.
7. Locate the two loose connectors. One is a four-holed connector attached to four wires running down to the circuit board. The other is a wide, flat connector at the end of a flat ribbon cable.
8. Attach the four-holed connector to the four pin receptacle on the back of the second disk drive. The connector is keyed so that it should install easily in one direction only.
9. Attach the wide flat connector to the gold "fingers" in the back of the second disk drive.

**Note:** It is easy to see how the connectors attach by examining how the duplicate cables connect to the first disk drive.

10. Make sure that the jumper on the second disk drive is on pin set 1 as shown below.

### Back of TransDrive

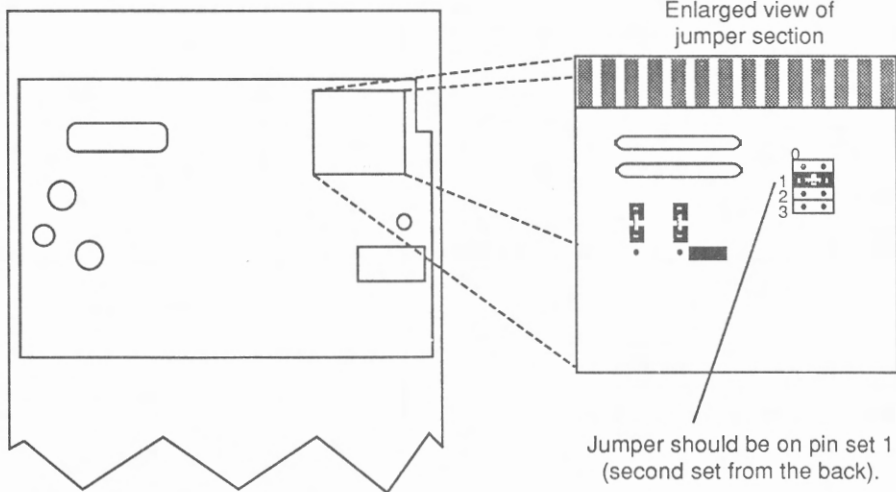

### Front of TransDrive



**Note:** The Jumper is a black plastic rectangle that fits over two pins. Looking closely, you will notice that the pin sets are numbered.

11. **Line up the top drive with the bottom** so that the cover can be replaced with little difficulty.
12. **Replace the cover.**
13. **Now replace the screws.** The top set of screws will hold the second disk drive firmly in place.
14. **Remove the cardboard piece from the disk drive slot**--flip the lever at the front of the disk drive to the up position and pull the cardboard straight out.
15. **Reattach the cable from the back to the disk drive to the Transporter connector** on the computer's backplane.
16. When finished, you should have two nuts, two washers, the front piece and a cardboard piece from the disk drive as your left-overs. You will most likely not need them for your TransDrive in the future. Save them or throw them away. It's up to you.

**Installation is complete!**

## **Note on drive access order:**

You can change the order in which the drives are accessed either by using the PC Transporter menu (as described in the PC Transporter manual) or by moving the jumpers on the disk drives. Using the PC Transporter menu is the easiest way but for those interested, here are the instructions for changing the access order by moving the jumpers:

To make the top TransDrive the A: drive and the bottom TransDrive the B: drive, move the jumper on the top drive to pin set "0" and the jumper on the bottom drive to pin set "1."

## Limited Warranty

---

Applied Engineering warrants the TransDrive system against defects in material and workmanship for a period of 1 year from the date of original retail purchase. Any misuse, abuse, or non-Æ authorized alteration, modification and/or repair to the Applied Engineering product will void the warranty. This warranty will also be void if you use the Æ product for any other purpose than its intended use. If you discover a defect, Applied Engineering will, at its option, repair or replace only the Applied Engineering product, provided you return the product during the warranty period, transportation prepaid, to Applied Engineering.

**This warranty applies to the original retail purchaser only.** Therefore, please include a copy of the original invoice or a small service charge may be applied. If the product is to be sent to Applied Engineering by mail, the purchaser will insure the package or assume full responsibility for loss or damage during shipping. Prior to returning the product for warranty consideration, call Applied Engineering Technical Support for a Return Material Authorization (RMA) number and shipping instructions.

---

Even though Applied Engineering has tested the software and reviewed the documentation, Applied Engineering makes no warranty or representation, either express or implied, with respect to software, its quality, performance, merchantability, or fitness for a particular purpose. As a result, this software is sold "as is," and you, the purchaser, are assuming the entire risk as to its quality and performance.

In no event will Applied Engineering be liable for loss or damages of any kind caused either directly or indirectly by the use or possession of its products, even if advised of the possibility of such damages. **THE APPLIED ENGINEERING WARRANTY IS FOR THE APPLIED ENGINEERING PRODUCT ITSELF.** In particular, Applied Engineering shall have no liability for any other equipment used in conjunction with Applied Engineering products nor for programs or data stored in or used with Applied Engineering products, including the costs of recovering such equipment, programs, or data.

The warranty and remedies set forth above are exclusive and in lieu of all others, oral or written, express or implied. No Applied Engineering dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

---

This manual is copyrighted by Applied Engineering with all rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Applied Engineering. This exception does not allow copies to be made for others, whether or not sold, but all of the materials purchased (with all archive copies) may be sold, loaned, or given to another person. Under the law, copying includes translating into another language or format.

Applied Engineering cannot guarantee that you will receive notice of revisions to the documentation or products described in this manual. Be sure to check with your dealer or Applied Engineering for information on possible updates. However, Applied Engineering reserves the right to make any improvements to Applied Engineering products without any responsibility toward upgrading previously released products.

---

Apple is a registered trademark of Apple Computer Inc.  
Applied Engineering PC Transporter and TransDrive are trademarks of Applied Engineering.

---

©Copyright 1987, Applied Engineering

---

### Applied Engineering

P.O. Box 5100

Carrollton, Texas 75011

Sales: (214) 241-6060 9 AM - 11 PM (CST) 7 days

Technical Support: (214) 241-6069 9 AM - 12:30 & 1:35 - 5 PM (CST) Monday - Friday

(The Technical Support telephone lines cannot be accessed through the Sales department.)

## Notes

---



# Applied Engineering

Telephone Numbers

## Technical Support

(214) 241-6069

9 AM to 12:30 & 1:35 to 5 PM (CST)

Monday through Friday

Do not return any  
product for service without a  
Return Material Authorization (RMA) number.  
An RMA number can be obtained by calling Technical Support.

## Sales

(214) 241-6060

9 AM to 11 PM (CST) 7 days



For the  
P.C. Transporter™



APPLIED ENGINEERING™



**TransDrive™**  
*5.25 inch drives for the PC Transporter™*



# TransDrive™

- 360 K IBM® compatible format 5.25 inch drives. Can be used as MS®-DOS volumes or ProDOS® volumes depending on the operating system in use.
- Includes interface translation electronics. Converts IBM interface connections to Apple™ interface connections.
- Daisy-chain up to two Apple 3.5 Drives for use with either MS®-DOS OR ProDOS®.

**AE** APPLIED ENGINEERING

a division of AE Research Corporation

*The Apple Enhancement Experts*