

ECHO™ REFERENCE CARD

TEXTALKER COMMANDS

OUTPUT MODES

**TALK ONLY
PRINT ONLY
*BOTH

CTRL-ET
CTRL-EO
CTRL-EB

PITCH (n=1 to 63) *22

FLAT
*INTONATION

CTRL-EnF
CTRL-EnP

RATE

COMPRESSED (FAST)
*EXPANDED (SLOW)

CTRL-EC
CTRL-EE

PUNCTUATION SPOKEN

*SOME (#\$%&+ / = @)
MOST
ALL (LF,CR,SPACE)

CTRL-ES
CTRL-EM
CTRL-EA

PRONUNCIATION

*WORDS
LETTERS
CAPS
*NO CAPS

CTRL-EW
CTRL-EL
CTRL-EK
CTRL-EN

CHANGING CTRL-E

CTRL-E CTRL-n

*modes set automatically on power up.

**initial output mode for general purpose ECHO.



SPEAKEASY COMMANDS

All phoneme words must be preceded by a CTRL-V.
PITCH and RATE commands are the same as in TEXTALKER.

SPEAKEASY PHONEME CODES

VOWELS

cat	a	A
lot	o	;
caught	ô	*
let	e	E
see	ē	&
hid	i	I
book	oo	Q
but	u	U
due	ōō	:
about	de	,

VOICED CONSONANTS

let	l	L
many	m	M
no	n	N
sing	ŋ	/
red	r	R
this	th	(
very	v	V
wet	w	W
yes	y	Y
zero	z	Z
azure	zh	X

DIPHTHONGS

cake	ā	@
tie	ī	!
toe	ō	O
pound	ou	#
toil	ōi	?
you	ū	%

STOP CONSONANTS

bat	b	B
dog	d	D
get	g	G
kick	k	K
pet	p	P
tie	t	T
check	ch	C
job	j	J

"R" COLORED VOWELS

car	är	;R
chair	âr, er	@R
her	ür, êr	'R
hear	êr	&R
fire	īr	!R
for	ôr	OR
tour	oor	QR
hour	our	#R

UNVOICED FRICATIVES

fit	f	F
hat	h	H
see	s	S
she	sh	\$
think	th)

INFLECTION

STRESSED 3 NORMAL - 2 REDUCED 1 SCHWA 0

PITCH

RISE > FLAT = FALLING < PAUSE ,