



Apple Manuals



Apple ][ Pascal



Macintosh



SwyftCard



Canon Cat

# Jef Raskin Information

*CAT FORM APPLICATION INFO*

*17 PAGES*

*SOURCE: Bob Wing*

DOCUMENT NO. *48*

COMPILED BY  
DAVID T. CRAIG  
736 EDGEWATER, WICHITA, KS 67230 USA  
E-MAIL: 71533.606@compuserve.com



Apple Manuals



Apple ][ Pascal



Macintosh



SwyftCard



Canon Cat



# ***CATFORM***

***Application Software  
Line/Line Typewriter Mode  
Stop Position Formats***

Introduction	1
What is Catform?	1
Getting Started	2
What is the Catform Disk?	2
Keep the original Catform Disk	2
Backup of your own Catform Disk	2
How to start the Catform operation	2
How to distinguish the Catform Disk from the others	3
Printer Setups for the Cat180 Printer	3
Creating a New Format	4
Step-1    Selecting "Create a New Format" Operation	4
Step-2    Assigning a Name to Your Format	5
Step-3    Inserting The Form	6
Step-4    Adjusting the Page Format	6
Step-5    Setting Stop Positions	7
How to Store Text with a Format	8
How to Cancel Creating New Format Operation	8
Using User Format	9
Step-1    Selecting the Name of User Format	9
Step-2    Inserting The Form	9
Step-3    Filling in The Form	10
Deleting a Format	11
Renaming a Format	12
Using the Line-by-Line Typewriter Mode	13
Step-1    Selecting the "Line/line Typewriter Mode"	13
Step-2    Inserting The Paper	13
Step-3    Adjusting the Page Format	14
Step-4    Typing	14
Appendix A Quick Reference for Forms and Line/Line Typewriter Mode	15

---

## Getting Started

---

Catform is easy and can be learned quickly by anyone. However, some of the terms and procedures in this manual may not be familiar to everyone. If you have never used the Canon Cat, refer to the tutorial in the Canon Cat "How-to Guide".

### What is the Catform Disk?

The Catform Disk contains software to manage the Form Operations, as well as, line-by-line typewriter mode. Just like a normal text disk, you can store your own text on the Catform Disk. However, since the software utilizes a portion of space on the disk, the text space available is somewhat less than a normal disk.

### Keep the original Catform Disk


It is recommended to make a copy of the original Catform Disk and use the copy for your own daily use. Keep the original safely stored away to copy it again for additional Catform disks.

### Backup of your own Catform Disk

Since your formats and texts will be saved on your Catform Disk, creating a backup disk is suggested for your insurance.

### How to start the Catform operation

Insert the Catform Disk in your Canon Cat, then press and hold [USE FRONT] and press [DISK]. When you playback the Catform Disk for the "first" time, you will see that the screen contains the title page for "Stop Position Formats". The screen may look almost empty, but the Memory Gauge shows the amount used for the software. (See illustration on page 3)

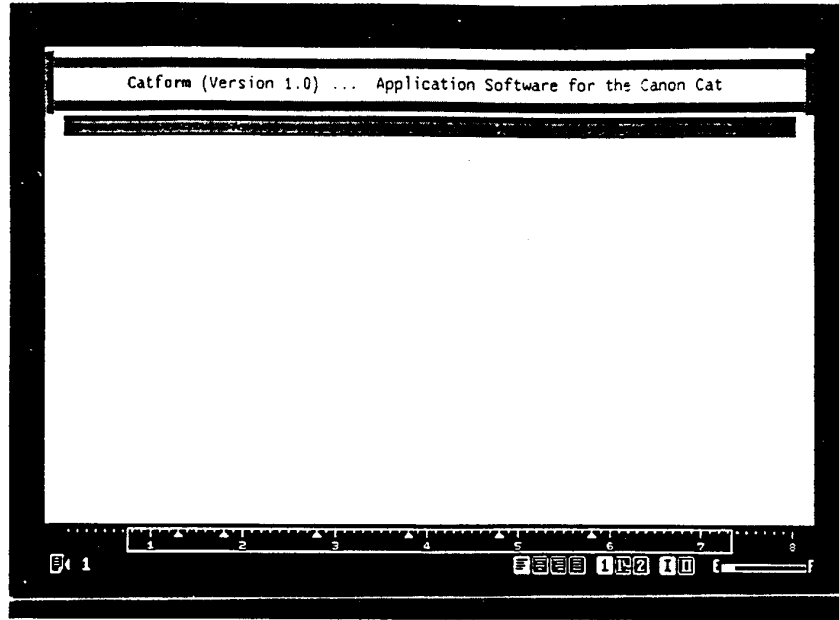

*If the Catform disk has text stored, the screen could be different than the one above.*

As long as you are using the Catform Disk in your Canon Cat, you can use the forms fill in, Line/Line Typewriter Mode, as well as, type normal text. If your Cat has a text disk other than the Catform Disk inserted, remember to save that text to its own disk, and then play back the Catform Disk with the [DISK] command.

#### How to distinguish the Catform Disk from the others

When you are working with the Catform Disk, the [USE FRONT]-[F] operation described on page 4 will show the "Format Selection" Screen. Press both [USE FRONT] keys together to return you to the Canon Cat editing screen. If the screen does not appear, it is not a Catform Disk. (See the illustration on page 4).

#### Printer Setups for the Cat180 Printer

- 1 In the *Main Printer Setup* of your Canon Cat, Cat180 Printer needs to be assigned to the Parallel port connection as below.

*Main Printer Setup*

Connect to	Parallel port
Printer type	Cat180

- 2 To work with forms, it is suggested to detach the Cut Sheet Feeder from your Cat180, so that the form is free to move back and forth.

(Cat180 Setup)

Cut sheet feeder	No
Pause between sheets	Yes

- 3 You can select character pitch by [USE FRONT]-[Y]. Make sure that the daisy wheel you use in your Cat180 corresponds to the selection.


Creating a New Format

The Catform disk that you received from your Canon Cat dealer contains software to create a new format for each form you use over and over again. You may store up to 20 different formats per disk, and each format can contain up to 100 "stop positions." A "stop position" is a like a tab stop. It marks the position on the form at which you type information. Unlike tabs, however, you can automatically move the carrier to stop positions located on different lines. You can also store standard text at any location on the form.

Step-1 Selecting "Create a New Format" Operation


- 1 Press and continue to hold [USE FRONT], then press [F]. The "Format Selection" screen appears on the display.

*If the Format Selection Screen does not appear, load the Catform disk.*

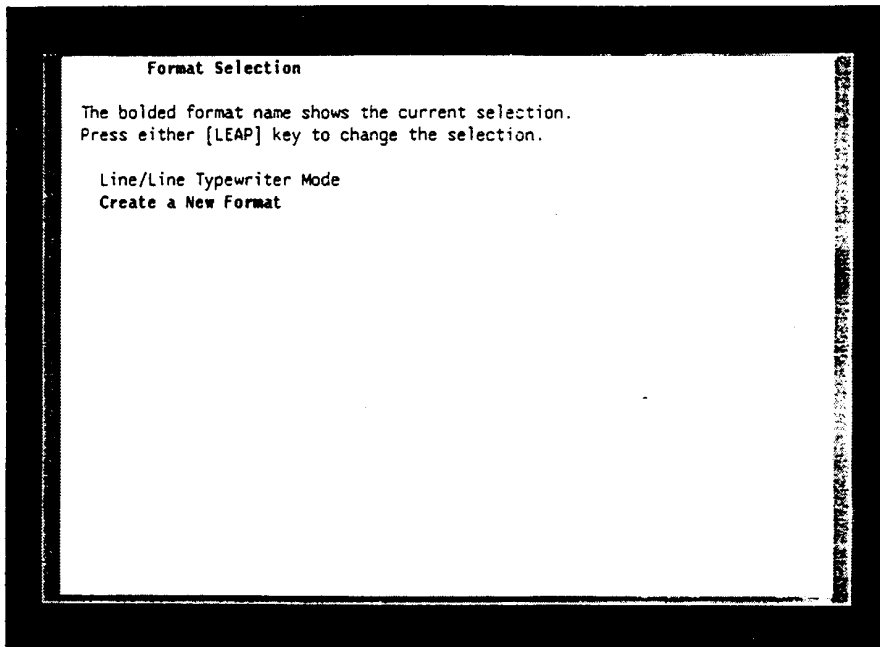

- 2 While holding [USE FRONT], tap on either [LEAP] key until 'Create a New Format' appears in bold type. Let go of [USE FRONT]. The following screen appears on the display to begin creating the format.


*up → ...*  
*... (New) ...*  
*... (New) ...*  
*... (New) ...*  
*... (New) ...*  
*... (New) ...*  
*... (New) ...*

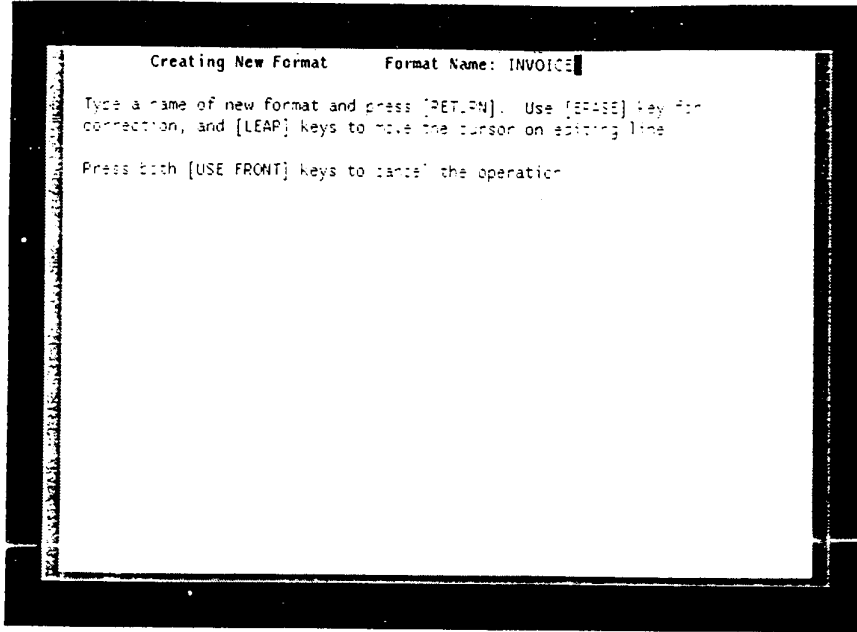

**Step-2 Assigning a Name to Your Format**

Type in a name for the format you want to create and press [RETURN]. Format names can contain up to 32 characters including spaces. You can edit the name with [ERASE] for correction and move the cursor with the [LEAP] keys.


*Catform can accept the same name for different formats. It is suggested that you use an actual name that corresponds to the form you will be filling in, such as "Purchase Order" or "Invoice". The names can then be distinguished from each other.*

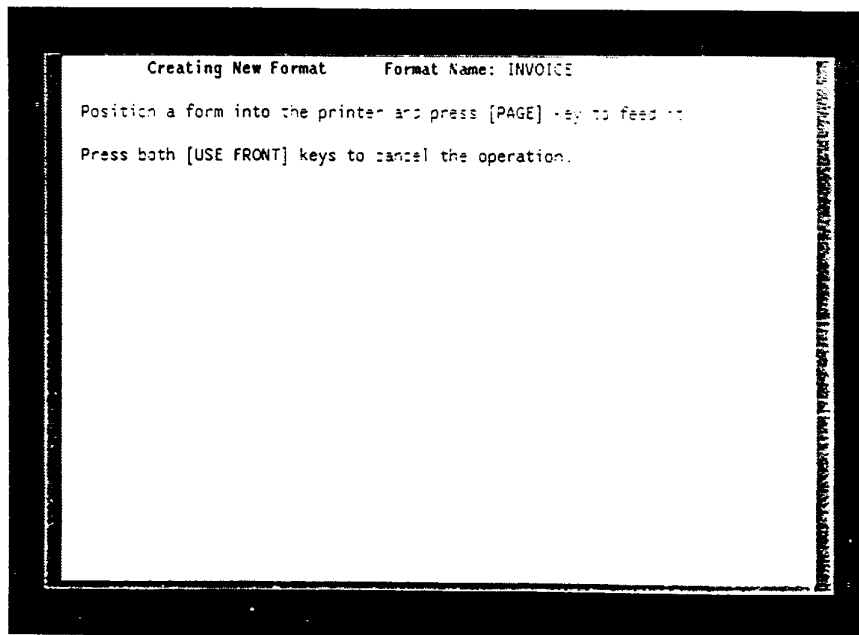

**Step-3 Inserting The Form**

Use a blank form as a guide for setting the stop positions in the Cat180 Printer.

- 1 Lift the Paper Bail Release Lever and place a blank form against the paper support, just touching the platen. Choose one of the paper edge markers on the paper support, and use it every time you use that form so that it is aligned properly.
- 2 Press the [PAGE] key. The printer automatically feeds the form to the start position, one inch from the top. Return the paper bail lever back to its original position. The following screen appears on the display:

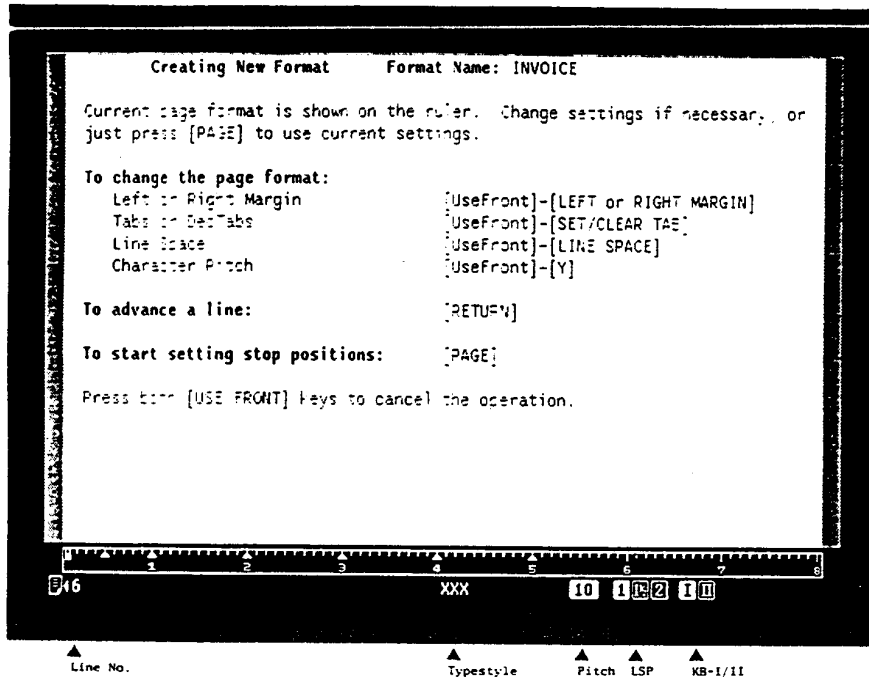


**Step-4 Adjusting the Page Format**

- 1 Using the illustration above, adjust the margins, tabs, line spacing and character pitch as needed. When adjusting margins and tabs, a cursor will appear on the ruler line. While holding the [USE FRONT] key move the cursor with the [LEAP] keys. The Cat180 carriage will move in conjunction with the cursor.

*You will notice that a set line does not appear on the display when setting margins and tabs. Instead, the cursor on the ruler moves to show the position of these settings.*

- 2 After you finish adjusting the page format, press [PAGE]. The following screen appears on the display. You are now ready to begin setting stop positions.



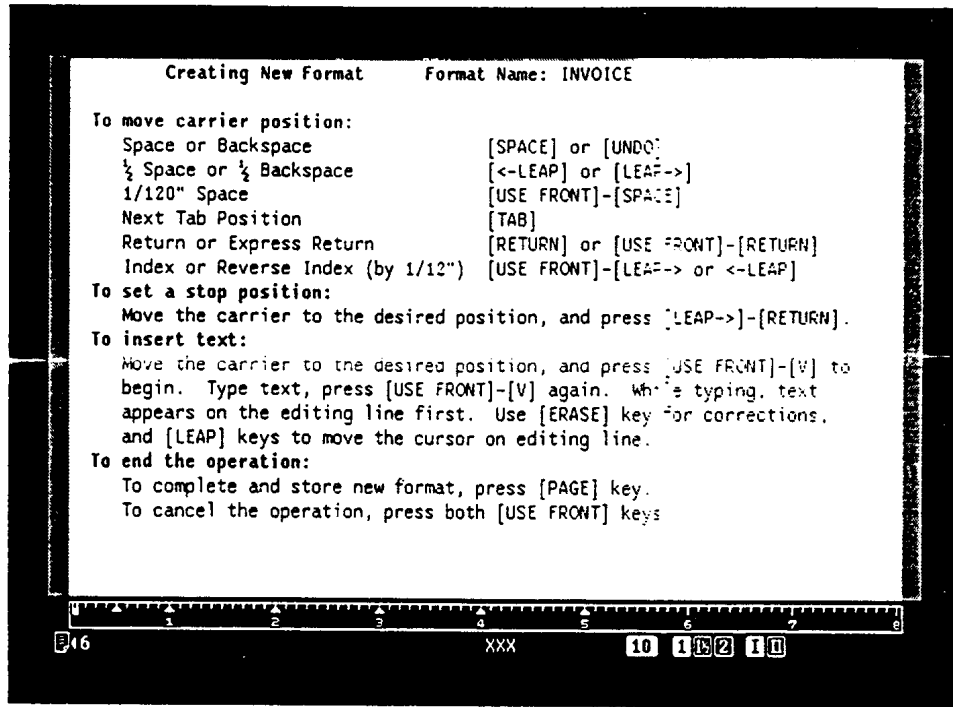

**Step-5 Setting Stop Positions**

- 1 Use the space bar to move the carrier to the first stop position, then hold the [LEAP] key and press [RETURN]. You will hear a confirm tone when the stop position has been set. Continue setting additional stop positions in the same manner.
- 2 After you are done setting all the stop positions, press the [PAGE] Key, it ejects the form and returns you to the Canon Cat editing screen.
- 3 After you complete creating a format, use [USE FRONT] and [DISK] to save it to disk.


*Until you use the DISK command, the format will not be saved on the disk.*

How to Store Text with a Format

If the same information needs to appear at the same location on the form each time you fill it in, you can store it with the Format. When filling in the form, the text that you stored is automatically printed out at the proper location.

- 1 Move the carrier to the position where the text should appear, then press and hold [USE FRONT] and press [V] instead of [LEAP] and [RETURN] as you normally do for setting stop positions. The word TEXT will appear below the ruler. (See illustration below.)
- 2 Type the text you want to store at that position. The text first appears on the bottom line of the display so that you can edit it. Use [ERASE] to erase characters and the [LEAP] keys to move the cursor.
- 3 Press and hold [USE FRONT], then press [V] again. The text you typed is printed on the form.

*While typing text, if you reach the Right Margin, pressing [RETURN] will print the current line and allow you to continue typing. Using the [TAB] Key will also print the text and move the carrier to the next tab position.*

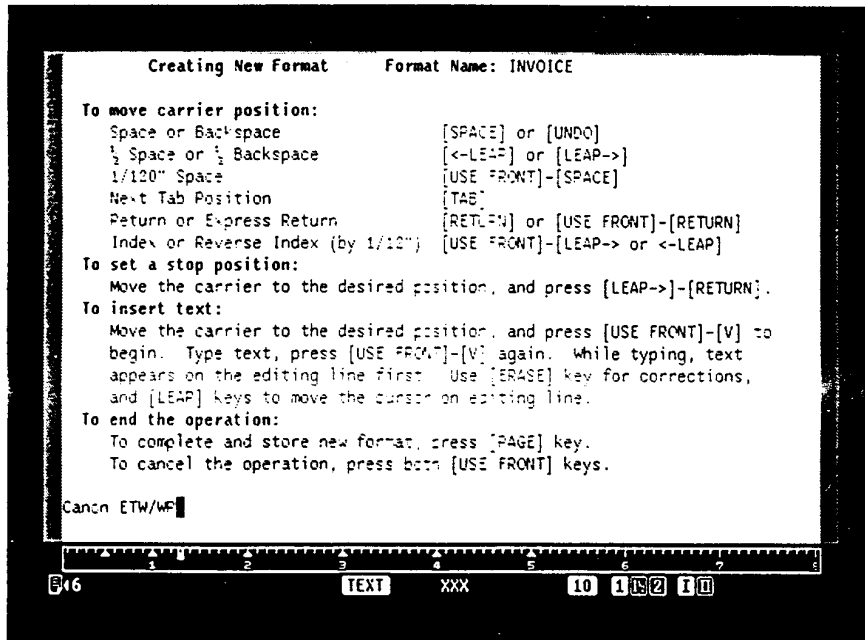

How to cancel Creating New Format Operation

If you make a mistake setting a stop position or storing text, just press both [USE FRONT] keys together to cancel the operation. It deletes the new name and format you assigned and returns you to the editing screen, so that you can begin again.

*Once a stop position format has been created, it can not be edited.*

---

Using User Format


---

Step-1 Selecting the Name of User Format

- 1 Press and continue to hold [USE FRONT], then press [F]. The "Format Selection" screen appears on the display.


*If the Format Selection Screen does not appear, check to see if you are using a Catform Disk.*

- 2 While holding [USE FRONT], tap on either [LEAP] key until the name of format you want appears in **bold type**. Let go of [USE FRONT]. The following screen appears on the display with the selected name of the format.

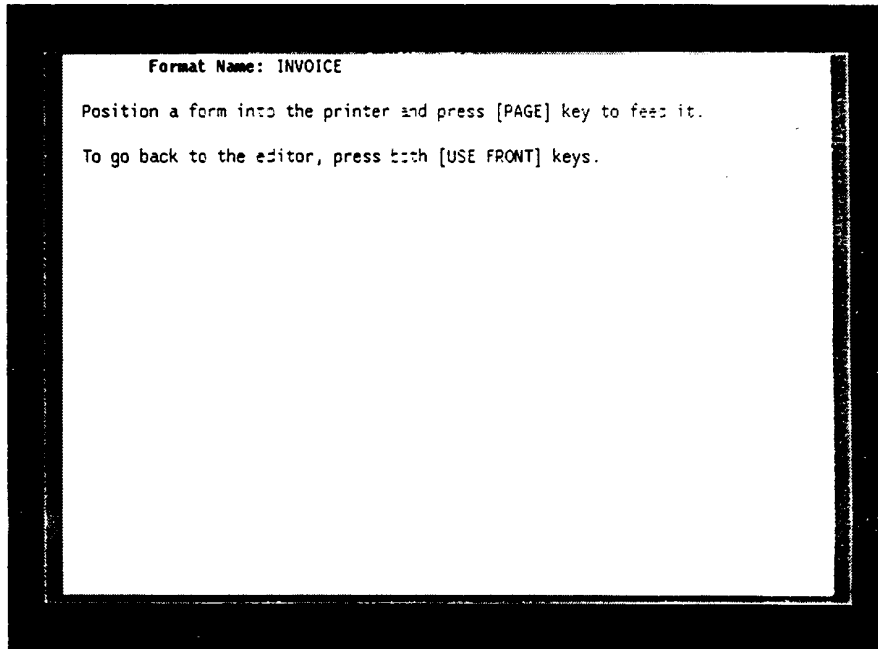

Step-2 Inserting The Form

- 1 Lift the Paper Bail Release Lever and insert a blank form into the Cat180 Printer. Place the form against the paper support, just touching the platen. Use the same paper edge marker on the paper support that you used when you created the format, so that it is aligned properly.
- 2 Press the [PAGE] Key. The printer automatically feeds the form to the start position, one inch from the top. Return the paper bail lever back to its original position. The following screen appears on the display:

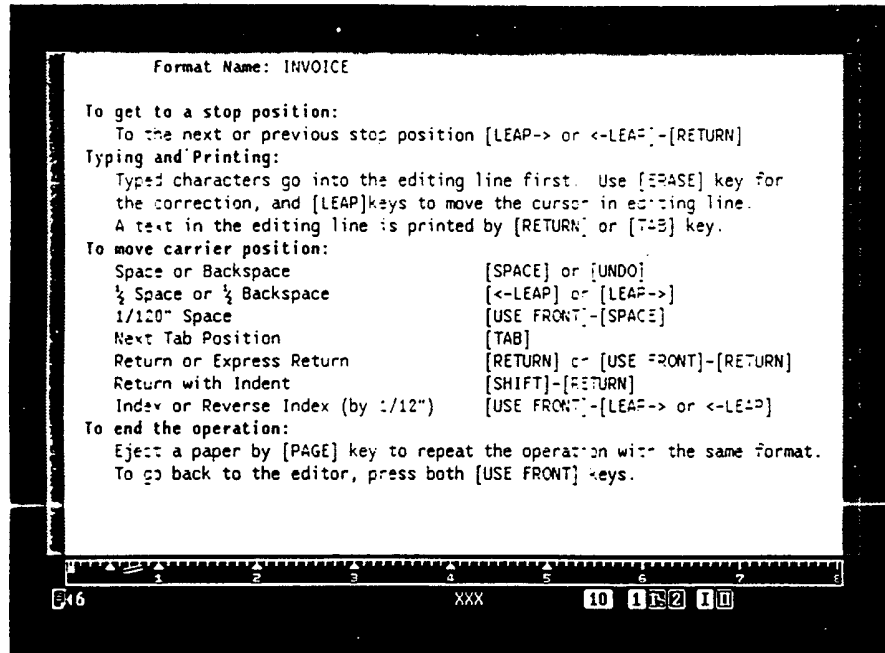

**Step-3 Filling in The Form**

- 1 Press and hold [LEAP->], then press [RETURN] to move the carrier to the first stop position.
- 2 Type in the text at the first stop position. The text first appears on the bottom line of the display, so that you can edit it before prints it on the form. Use [ERASE] to erase characters. Use either [LEAP] key to move the cursor.
- 3 If the text is OK, press and hold [LEAP->], then press [RETURN]. The text is printed and the carrier moves to the next stop position.

If you are filling more than one line at the same stop position, press [SHIFT] and [RETURN] at the end of the first line. The text prints and the carrier moves to the next line and stops at the column of the stop position. Use [LEAP] and [RETURN] to advance to the next stop position when typing is complete.

*You can also use [TAB] or [RETURN] key to print the text.*

- 4 Repeat steps 1-3 until you fill in the entire form.

*To move the carrier to a previous stop position, press and hold [<-LEAP], then press [RETURN].*

- 5 When you complete filling in the form, press [PAGE] to eject the form. You can then continue to fill in another form using the same format.

Or, you can press both [USE FRONT] keys to return to the Cat editing screen.

---


Deleting a Format

---

- 1 Press and continue to hold [USE FRONT], then press [F]. The "Format Selection" screen appears on the display.

*If the Format Selection Screen does not appear, check to see if you are using a Catform Disk.*

- 2 While holding [USE FRONT], tap on either [LEAP] key until the name of format you want to delete appears in bold type. Continue to hold [USE FRONT] and press [ERASE]. The "Delete Format" screen appears on the display.

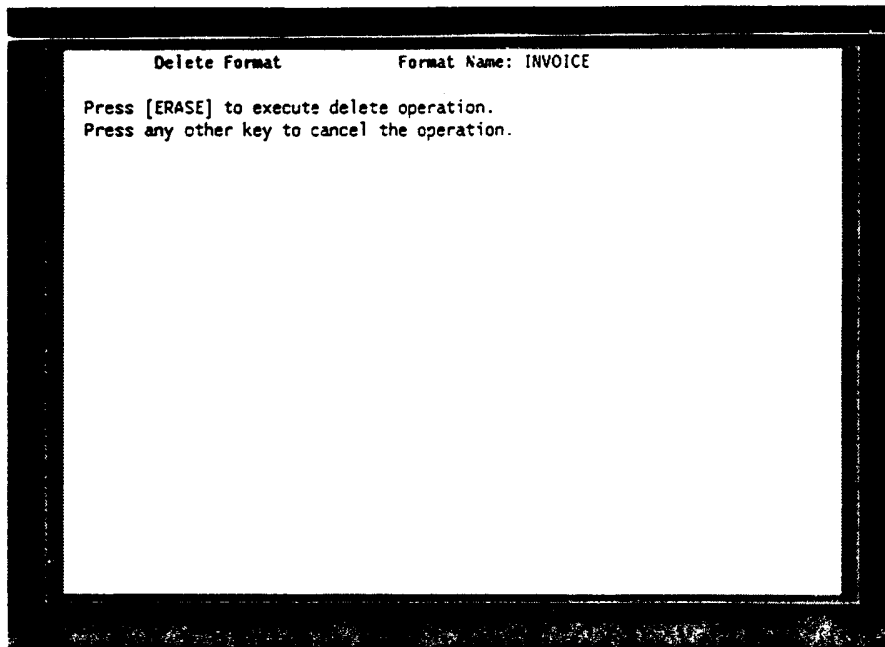

- 3 Check the name of the format on the screen, and press [ERASE] again to delete the format. The format is deleted and return to the Canon Cat editing screen.

*If you do not want to delete the format, press any key except [ERASE]. This cancels the delete operation and returns you to the Canon Cat editing screen.*

- 4 Use [DISK] to save your changes on the Catform disk.

---

## Renaming a Format


---

This feature allows you to rename a format without changing the format itself.

- 1 Press and continue to hold [USE FRONT], then press [F]. The "Format Selection" screen appears on the display.

*If the Format Selection Screen does not appear, check to see if you are using a Catform Disk.*

- 2 While holding [USE FRONT], tap on either [LEAP] key until the name of format you want to rename appears in bold type. Continue to hold [USE FRONT] and press [UNDO]. The "Rename Format" screen appears on the display with the original name of the format.

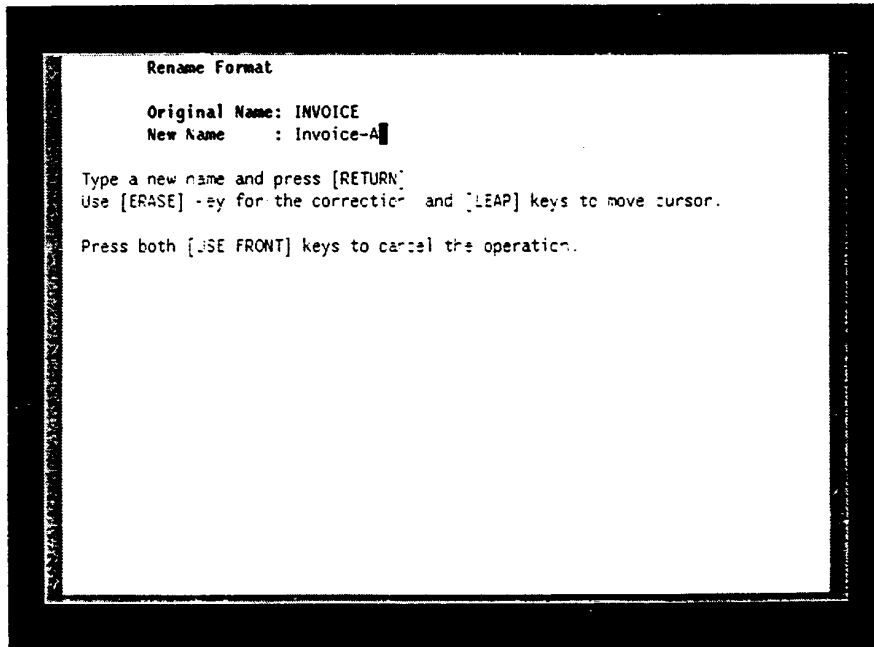

- 3 Type a new name for the format, and press [RETURN]. The format is renamed and you are returned to the Canon Cat editing screen.

*Format names can contain up to 32 characters including spaces. You can edit the name with [ERASE] for correction and move the cursor by [LEAP] keys.*

- 4 Use [DISK] to save your changes on the Catform disk.

---

### Using the Line-by-Line Typewriter Mode

---


This feature allows you to use your Canon Cat and Cat180 Printer as a typewriter with line-by-line operation for typing labels, notes, etc.

#### Step-1 Selecting the "Line/line Typewriter Mode"

- 1 Press and continue to hold [USE FRONT], then press [F]. The "Format Selection" screen appears on the display.


*If the Format Selection Screen does not appear, check to see if you are using a Catform Disk.*

- 2 While holding [USE FRONT], tap on either [LEAP] key until "Line/line Typewriter Mode" appears in bold type. Let go of [USE FRONT]. The following screen appears on the display.

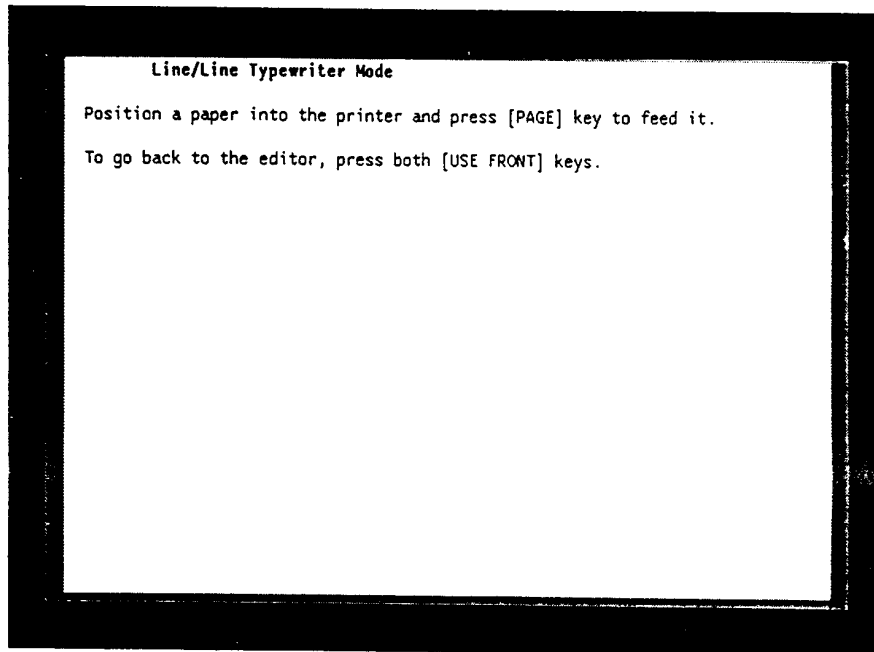

#### Step-2 Inserting The Paper

- 1 Lift the Paper Bail Release Lever and insert a sheet of paper or form into the Cat180 Printer. Place the paper against the paper support, just touching the platen. Choose one of the paper edge markers on the paper support, and use it to align the paper position properly.
- 2 Press the [PAGE] Key. The printer automatically feeds the paper to the start position, one inch from the top. Return the paper bail lever back to its original position. The following screen appears on the display:

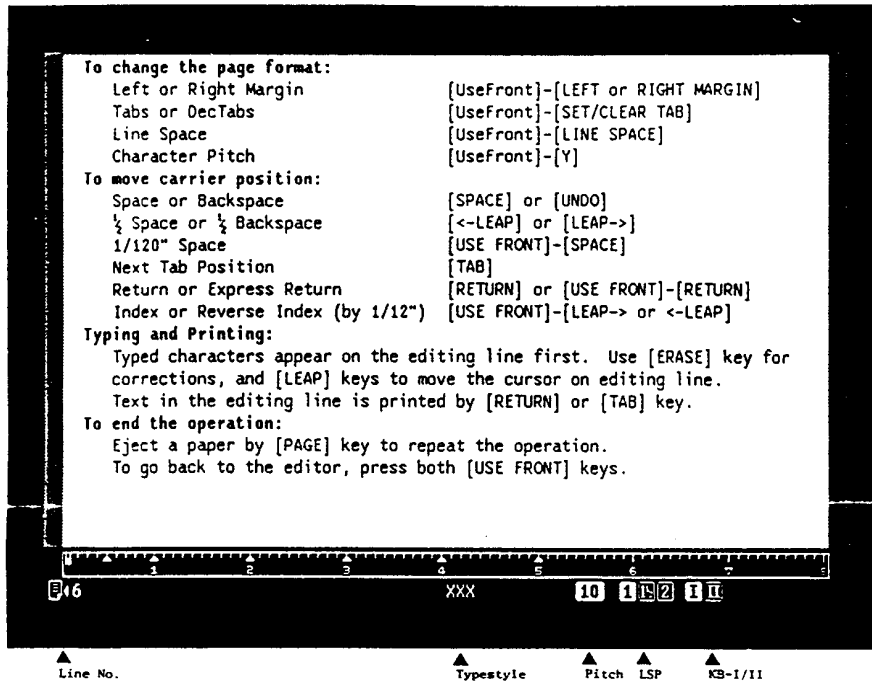

### Step-3 Adjusting the Page Format

Using the illustration above, adjust the margins, tabs, line spacing and character pitch as needed. When adjusting margins and tabs, a cursor will appear on the ruler line. Move the cursor with the [LEAP] Keys, while holding the [USE FRONT]. The Cat180 carriage will move in conjunction with the cursor.

*You will notice that a set line does not appear on the display when setting margins and tabs. Instead, the cursor on the ruler moves to show the position of these settings.*

*If any text has been typed in the editing line of the screen, you can not change the page format. Erase the text or print it by [RETURN] key first, then change the page format.*

### Step-4 Typing

- 1 Begin typing. The text first appears on the bottom line of the display so that you can edit it. Use [ERASE] to erase characters and the [LEAP] keys to move the cursor.

*You cannot type beyond the right margin. When you reach the right margin, the Cat beeps and the cursor stops.*

- 2 To print your text, press [RETURN] or [TAB] key.
- 3 The [PAGE] key ejects the paper. You can then insert another sheet of paper with the [PAGE] key to continue Line by Line Typewriter mode.



---

Appendix A

---

**Quick Reference for Forms and Line/Line Typewriter Mode**

Every function for the form operation begins with selecting a name of a format or an operation. Press and hold [USE FRONT] and press [F]. The "Format Selection" Screen appears. While holding [USE FRONT], tap either [LEAP] key to make a selection. Then let go of [USE FRONT] and the Canon Cat begins the selected function. Further instructions appear on the screen at different stages of each operation.

**Create a New Format:**

*[USE FRONT]-[F], Select "Create a New Format" by [LEAP] keys*

**Select User Format:**

*[USE FRONT]-[F], Select a name by [LEAP] keys*

**Rename Format:**

*[USE FRONT]-[F], Select a name by [LEAP] keys, [UNDO]*

**Delete Format:**

*[USE FRONT]-[F], Select a name by [LEAP] keys, [ERASE]*

**Select Line/Line Typewriter Mode:**

*[USE FRONT]-[F], Select "Line/line Typewriter Mode" by [LEAP] keys*

**Return to the normal Cat editing screen from the Form Operation:**

*[USE FRONT]-[USE FRONT]*

## Canon U.S.A., Inc.

**National Headquarters/New York Office** One Canon Plaza, Lake Success, New York 11042 516-488-6700 Cable: CANON U.S.A. LAKS Telex: 96-1333

**Government Marketing Center** 5701 General Washington Drive, Alexandria, Virginia 22312 703-642-8050 Extension 241 or 323

**Atlanta Office** 5625 Oakbrook Parkway, Norcross, Georgia 30093 404-448-1430

**Chicago Office** 100 Park Blvd., Itasca, Illinois 60143 312-250-6200

**Dallas Office** 3200 Regent Blvd., Irving, Texas 75063 214-830-9600

**Los Angeles Office** 123 Paularino Avenue East, Costa Mesa, California 92626 714-979-6000

**Los Angeles Office (ETW Division)** 2055 Main Street, Irvine, California 92715 714-979-6000

ETW/WP 001

FINIS

16