

GIBSON LABORATORIES


INSTALLATION NOTE

The present documentation does not specify the details for routing of the Light Pen CORD out of the Apple and to the user. After many months of use, we discovered a particularly workable technique that we wish to share with all Light Pen System owners.

During the following discussion please refer to the drawings below:

After placing the LPS II Light Pen module into whichever slot you choose, (probably slot 7 ... see reference manual) rather than routing the cord out the back of the Apple, bring the cord directly forward, toward the keyboard, and into the front left or right corner of the lid's opening. Leaving some slack inside, slowly and carefully place the lid back on the Apple, being sure that the Pen Electronics Module is not pulled. (see diagram below) When this is done, snap down the rear locks of the Apple lid, and the Light Pen is ready to go.

We strongly recommend this installation method for several reasons. First, the Light Pen's cord is strain-relieved preventing inadvertent pulls and tugs on the Pen from bothering the module. Secondly, the length of cord remaining for the user is maximized, and can be customized for right- or lefthanded users. Installation in this manner will not interfere with any known peripheral or device.

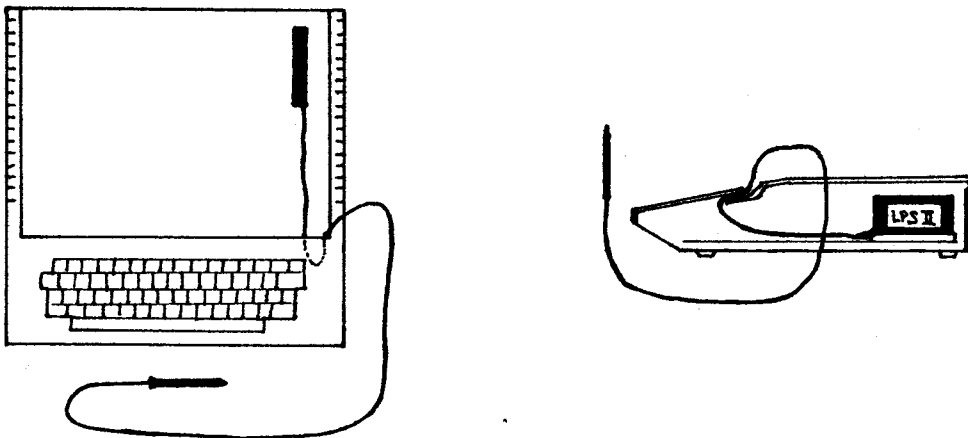

... Thanks for your purchase and support! ...